

P/N	S/N	Description	Application	Dept	ATA
# 856A1009G02	12883	Adapter, vertical lift	CFM56	132	72-41-00
# 856A1015G01	12886	Sling frames, 3 legs	CFM56	132	72-55-00
# 856A1020G08	12844	Restraining core module	CFM56	132	72-00-00
# 856A1021G02	12888	Fixture lift/turn comp	CFM56	132	72-31-00
# 856A1042G08	12968	Wrench torque #4 brg. ret	CFM56	132	72-00-02
# 856A1057G03	12903	Fixture lift/turn HPT	CFM56	132	72-00-52
# 856A1061G03	12964	Fixt. lift/turn HPTR disk	CFM56	132	72-00-52
# 856A1073G03	20000	Truck HPTR Horizontal	Transport and store HPT rotor	132	72-52-00
# 856A1073G03	20366	Truck HPTR Horizontal	Transport and store HPT rotor	132	72-52-00
# 856A1073G03	20367	Truck HPTR Horizontal	Transport and store HPT rotor	132	72-52-00
# 856A1083G02	12904	Fixture lift/turn core	CFM56	132	72-00-02
# 856A1102G03	12905	Fixture horizontal lift	CFM56	132	72-00-51
# 856A1103G01	12906	Fixture lift HPT nozzle	CFM56	132	72-00-51
# 856A1107G07	12908	Fixture lift core module	CFM56	132	72-00-02
# 856A1125G01	12910	Fixture lift horizontal	CFM56	132	72-00-02
# 856A1157G02	12972	Fix. lift Adj. CF	CFM56	132	72-00-01
# 856A1196G02	12913	Fixture lift/turn comb.	CFM56	132	72-41-00
# 856A1300G02	20079	LENGTH GAGE-CORE MODULE	TO MEASURE OVERALL LENGTH OF CORE MODULE PRIOR TO INSTALL	132	72-00-02
# 856A1313G04	12919	Ring support eng. handlin	CFM56	132	72-00-01
# 856A1314G01	12920	Bracket set LPT aft mount	CFM56	132	72-00-00
# 856A1332G01	12921	Fixt. lift/turn core fwd.	CFM56	132	72-00-02
# 856A1335G01	12922	Bracket set HPC	CFM56	132	72-00-32
# 856A1354G02	12923	Bracket set handling core	CFM56	132	72-00-02
# 856A1377G01	12976	Fixt. lift/turn HPTS/LPT	CFM56	132	72-53-00
# 856A1421G01	12927	Fixture lift top case HPC	CFM56	132	72-00-32
# 856A2543G02	12843	LPT Shaft Centering Fixt.	CFM 56	132	72-00-00
# 856A2549G01	20039	TURB.FRME HANDLG. SEGMENT	TO HANDLE THE TURBINE FRAME	132	72-56-00
# 856A2555G04	20335	LIFTING BEAM FAN MAJOR	USED TO LIFT THE FAN MAJOR MODULE	132	72-00-01
# 856A2627G05	20028	LIFTING BEAM	LIFT LPT MAJOR MODULE, 1-2 BOOSTER SPOOL, FAN DISK,LPT CASE	132	72-00-03
# 856A2645G04	12934	Beam CG engine handling	CFM56	132	72-00-00
# 856A2646G01	12847	DOLLY TRUNNION LPT FRAME	CFM56	132	72-00-00

P/N	S/N	Description	Application	Dept	ATA
# 856A2646G01	20377	DOLLY TRUNNION LPT FRAME	To assemble, disassemble and store the LPT frame.	132	72-00-00
# 856A3111G05	12852	Dolly Trunion	Fan Frame module	132	72-00-00
# 856A3373G01	20040	LPT BLADED DISK FIXTURE	TO HANDLE THE LPT STAGE 1 - 4 DISK AND BLADES.	132	72-54-00
# 856A3387G03	20032	LPT LIFT & TURN FIXT.	TO TURN THE LPT CASE 180 DEGREES	132	72-54-00
# 856A3503G01	12900	FIXT BOOSTER ROTOR ASSY..	CFM56	132	72-21-00
# 856A3503G01	20376	FIXT BOOSTER ROTOR ASSY.	To restrain booster rotor/stator during removal.	132	72-21-00
# 856A3510G03	20041	ADAPTER, 1-2 SUPPORT	TO SUPPORT, LIFT AND TURN 1 AND 2 BRG SUPPORT	132	72-22-00
# 856A3532G01	20034	FIXT. LIFT & TURN FAN FRM	TO PERMIT LIFTING AND TURNING OF FAN FRAME MODULE	132	72-23-00
# 856A3533G01	20035	FAN INLET 3 LEG SLING	TO HANDLE FAN INLET CASE OR FAN FRAME ASSEMBLY.	132	72-23-00
# 856A3538G01	20043	FIXTURE, HNDLNG FAN DISK	TO HANDLE THE FAN DISK WITH TWO YOKES AND A STRAP.	132	72-21-00
# 856A3540G01	20044	FIXT.HNDLNG/TURN BSTR SPL	TO LIFT AND HANDLE THE BOOSTER SPOOL	132	72-21-00
# 856A3596G02	20038	LIFTING BEAM, FAN FRAME	TO HANDLE THE FAN MAJOR MODULE	132	72-00-01
# 856A3767G01	20072	FIXT. HNDLNG LPT RTR/STTR	TO LIFT AND TURN THE LPT MODULE	132	72-54-00
# 856AT0003	AT3567	LIFTING EYE FOR FAN FRAME	TO LIFT THE FAN FRAME MODULE	132	72-00-01
# 856AT0003	AT3568	LIFTING EYE FOR FAN FRAME	TO LIFT THE FAN FRAME MODULE	132	72-00-01
# ATT2382	nsn	Puller	Bazooka garlock seal	153	72-53-00
# PWA75134	STI-112	Hook, safety	6000 lbs capacity for engine hoist	102	72-00-00
#*856A3519G04	20033	AGB - 3-LEG SLING	TO HANDLW AGB OR AGB EQUIPPED WITH FUEL PUMP & MEC.	132	72-00-63
#*PWA45327	11563	Eye, vetical lift	Rear hub LPC	102	72-33-00
*856A1404P14	AT3532	TOOL, ADAPTER PLATE HPT B	Adapter for Tool 856A1404 to HPT rotor front shaft	132	72-52-04
*ATT0161	11232	Wrenches	For stretch fixture	219	
*ATT0162	11233	Thimbles	High compressor	219	
*ATT0163	11234	Bronze feet	High compressor	219	
*ATT0164	11236A	Fixture	Hi compr. balance fixture	219	
*ATT0173	11263A	Puller	#1 spur gear puller	102	

P/N	S/N	Description	Application	Dept	ATA
*ATT0173	11263B	puller	#1 spur gear puller	102	
*ATT0174	11265A	Crimp tool	#2 key washer crimper	102	
*ATT0174	11265B	Crimp tool	#2 key washer crimper	102	
*ATT0175	11267A	Remover	Coupling remover - LPT	102	
*ATT0175	11267B	Remover	Coupling remover, LPT	102	
*ATT0175	11267C	Remover	Coupling remover, LPT	102	
*ATT0209	11319A	Stand	Hot section buildup	121	
*ATT0209	11319B	Stand	Hot section buildup	121	
*ATT0209	11319C	Stand	Hot section buildup	121	
*ATT0209	11319D	Stand	Hot section buildup	121	
*ATT0209	11319E	Stand	Hot section buildup	121	
*ATT0209	11319F	Stand	Hot section buildup	121	
*ATT0209	11319G	Stand	Hot section buildup	121	
*ATT0210	11320	Stand	Dissy low compressor	219	
*ATT0222	11339	Lifting ring	C-1 hub	102	
*ATT0234	11362	Spacer	T1 retaining tool	121	
*ATT0254	11388	Socket set	1/2"Drive Sockets,ImpactWrench	102	
*ATT0265	11417	Tube protector	Intermed.Case PS3 tube	102	
*ATT0281	11436A	Socket	2" socket, 3/4" drive	121	
*ATT0281	11436B	Socket	2" socket, 3/4" drive	121	
*ATT0281	11436C	Socket	2" socket, 3/4" drive	121	
*ATT0293	11452	Wrench, spanner	Adustable, Remv.Air Duct l.nut	102	
*ATT0304	11476	Removal tool	#3 brg.Integral upper nut rmvr	102	
*ATT0307	11486	Puller	#4 front forward seal, manual	102	
*ATT0322	11517	Plug remover	Borescope plug remover	102	
*ATT0324	11521	Removal tool	Air seal remover	102	
*ATT0327	11532B	Puller	Air seal puller, high compressor	102	
*ATT0330	11539	Knocker	C-knocker, high compressor	102	
*ATT0332	11545	Puller	Forward air seal #5, puller	102	
*ATT0339	11522	Knocker	T4 Knocker	102	
*ATT0342	11586	Wrench	Strut nut driver	102	
*ATT0344	11589	Wrench	Exhaust case, strut wrench	102	
*ATT0348	11593	Bar, lifting	Exhaust removal bar	102	
*ATT0367	11660	Coupling remover	Low turbine, SB 5611	121	
*ATT0375	11677	Adapter	#3 housing & compressor case flange	121	
*ATT0376	11678	Adapter	#3 housing & compressor case flange, concentricity check	121	

P/N	S/N	Description	Application	Dept	ATA
*ATT0377	11679	Stabilizer	#3 housing & compressor case flange, concentricity check	121	
*ATT0378	11682	Feet/fixture pedestal	Hydraulic stretch fixture, compressor	121	
*ATT0383	11688	Cover	Vacuum air flow check cover, #2-#3 brg intermediate case	121	
*ATT0385	11695	Plug	Vacuum check stand, diffuser case housing	121	
*ATT0402	11727A	Reinforce rod	Push out low turbine shaft	102	
*ATT0402	11727B	Reinforce rod	Push out low turbine shaft	102	
*ATT0410	11740A	Pusher	Low compressor	102	
*ATT0418	11760	Post	3 point stand, hold engine	121	
*ATT0419	11761	Arm	Attachment for 3 point stand	121	
*ATT0420	11762	Stand	Rear support of engine, 3 point stand	121	
*ATT0421	11763A	Sling	Sling for hoist, engine lift	121	
*ATT0421	11763C	Sling	Sling for hoist, engine lift	121	
*ATT0428	11770D	Stand	3 point rear stand	121	
*ATT0430	11772A	Stand	Inlet case, -200	121	
*ATT0430	11772E	Stand	Inlet case, -200	121	
*ATT0430	11772F	Stand	Inlet case support, -200	121	
*ATT0431	11773A	Stand	Nozzle case, 3 point adjustable stand, -200	121	
*ATT0431	11773C	Stand	Nozzle case, 3 point adjustable stand, -200	121	
*ATT0431	11773D	Stand	Nozzle case, 3 point adjustable stand, -200	121	
*ATT0432	11774A	Stand	Horizontal hot section disassembly fixture	121	
*ATT0432	11774B	Stand	Horizontal hot section disassembly fixture	121	
*ATT0442	11788	Stand	Fan inlet case stand	102	
*ATT0444	11791	CSD storage box	Constant speed drive storage box	102	
*ATT0445	11729A	Fixture	Low turbine storage fixture	102	
*ATT0446	11793	Fixture	Low turbine shaft holding fixture	102	
*ATT0450	11798	Stand	Fan inlet case stand	102	
*ATT0453	11801	CSD storage box	Constant speed drive storage box	102	
*ATT0454	11802	Removal tool	C-1 stator Remover	102	
*ATT0457	11806A	Stand	Low turbine shaft fixture	102	
*ATT0473	11186	Rivet flare	Front hub rivet flaring tool	219	
*ATT0474	11200	Drift	Turbine rear bearings spacer drift	219	
*ATT0475	11266	Removal tool	N1 tach drive remover	219	
*ATT0476	11281	Fixture	Inlet compressor, front accessory drive housing	219	
*ATT0477	11326	Fixture, assy/disassy	Engine exhaust case section group	102	72-54-00
*ATT0478	11328	Fingers	Compressor short stack fixture	102	
*ATT0479	11352	Runout bar	T1 runout tool	121	

P/N	S/N	Description	Application	Dept	ATA
*ATT0481	11585	Nut remover	Strut nut remover	102	
*ATT0482	11654	Drift	#6 bearing inner race installation tool	121	
*ATT0483	11701	Valve	Check lines	102	
*ATT0485	11783	Disassembly fixture	Disassemble #5 bearing housing	102	
*ATT0486	11807A	Stand	Cold section buildup stand	102	
*ATT0486	11807B	Stand	Cold section buildup stand	102	
*ATT0486	11807C	Stand	Cold section buildup stand	102	
*ATT0487	11269A	T-bar	Sweeney holder	220	
*ATT0487	11269B	T-bar	Sweeney holder	220	
*ATT0488	11366	Torque tool	Torque multiplier	121	
*ATT0505	11837	Knocker	Vertical gear removal tool	502	72-61-0
*ATT0587	11975B	Plate	I.D. bearings, measure radial internal clearance	672	72-61-00
*ATT0587	11975C	Plate	I.S. bearings, measure radial internal clearance	672	72-61-00
*ATT0604	12007	Spring checker	Oil pressure relief valve, spring checker machine	520	72-61-00
*ATT0697	12109	Depth micrometer	Vernier depth micrometer, general use	228	
*ATT0698	12110	Dial indicator	Dial indicator gauge, general use	228	
*ATT0699	12111	Dial indicator	.0001 dial indicator, general use	228	
*ATT0700	12112	O.D. micrometer	1-2" outside diameter micrometer, general use	228	
*ATT0701	12113	Vernier caliper	6" Vernier dial caliper, general use	228	
*ATT0702	12114	Depth micrometer	1" depth micrometer, general use	228	
*ATT0703	12115	I.D. micrometer	0-6" inside diameter micrometer set, general use	228	
*ATT0704	12116	I.D. micrometer	Anvil type 1-2" inside diameter micrometer, general use	228	
*ATT0705	12117	O.D. micrometer	0-1" outside diameter micrometer, general use	228	
*ATT0706	12118	Micrometer, O.D.	0-1" outside diameter micrometer	228	
*ATT0707	12119	Micrometer, I.D.	0-12" set, Inside diameter micrometer	228	
*ATT0708	12119	Micrometer, I.D.	0-6" set, inside diameter micrometer	228	
*ATT0709	12121	Micrometer, tube	0-1" .0001 tube micrometer	228	
*ATT0710	12122	Micrometer, O.D.	5-6" .001 outside diameter micrometer	228	
*ATT0711	12123	Micrometer, O.D.	2-3" outside diameter micrometer	228	
*ATT0712	12124	Micrometer, blade	2-3" O.D. blade micrometer	228	
*ATT0713	12125	micrometer, blade	3-4" O.D. blade micrometer	228	
*ATT0714	12126	Micrometer, O.D.	4-5" outside diameter micrometer	228	
*ATT0715	12127	Micrometer, O.D.	3-4" outside diameter micrometer	228	
*ATT0716	12128	Micrometer, O.D.	6-7" outside diameter micrometer	228	
*ATT0717	12129	Micrometer, O.D.	4-5" outside diameter micrometer	228	
*ATT0718	12130	Micrometer, O.D.	5-6" outside diameter micrometer	228	

P/N	S/N	Description	Application	Dept	ATA
*ATT0719	12131	Micrometer, O.D.	9-10" outside diameter micrometer	228	
*ATT0720	12132	Micrometer, O.D.	11-12" outside diameter micrometer	228	
*ATT0721	12133	Gauge	.492 measuring bar	228	
*ATT0722	12134	Gauge, ring	5.5647 I.D. ring gauge	228	
*ATT0723	12135	Gauge, ring	5.3151 I.D. ring gauge	228	
*ATT0724	12136	Gauge, ring	7.4845 I.D. no go gauge	228	
*ATT0725	12137	Micrometer, O.D.	7-8" outside diameter micrometer	228	
*ATT0726	12138	Micrometer, I.D.	7-8" outside diameter micrometer	228	
*ATT0728	12140	Dial bore Gauge	.0001 Dial bore gauge	228	
*ATT0729	12141	Micrometer, O.D.	15-16" .001 outside diameter micrometer	228	
*ATT0730	12142	Micrometer, O.D.	14-15" .001 outside diameter micrometer	228	
*ATT0731	12143	Dial Caliper gauge	12" dial caliper	228	
*ATT0732	12144	Micrometer, depth	0-12" depth micrometer set	228	
*ATT0733	12145	Vernier caliper gauge	26" vernier micrometer	228	
*ATT0734	12146	Vernier caliper gauge	26" vernier caliper	228	
*ATT0735	12147	Digital caliper gauge	24" .0001 digital caliper	228	
*ATT0736	12148	Gauge Set	Functional gauge, turbine blade vanes, includes PWA#(seeMemo)	319	
*ATT0745	12162	Drift	Install bushing in gearbox	528	72-61-00
*ATT0748	12165	Fixture	Hold gearbox to machine tachometer drive	528	72-61-00
*ATT0755	12159	Drift	Install bushings in gearbox	528	72-61-00
*ATT0756	12156	Drift	Install bushings in gearbox	528	72-61-00
*ATT0801	12217	Covers	Various covers for gearbox liner holding fixtures	528	72-61-00
*ATT0839	12255	Blocks	Fan inlet case SB fixture	628	
*ATT0893	12343	Blade rivet set	Turbine blade rivet set	320	
*ATT0896	12347	Pneumatic rivet gun	Sheetmetal riveting	317	
*ATT0912	12368	Anvil, riveting	Bucking bar, rivet gun, sheetmetal	317	
*ATT0919	12395	Anvil, riveting	Hold rivet, C-3 stator	217	
*ATT0925	12408	Template, sheetmetal	Mold aluminum strips, exhaust leading edge	317	
*ATT0926	12419	Fixture, plating	For plating C-8 hub tubes	614	
*ATT0945	12438	Fixture, plating	C-8 tube for hub	614	
*ATT0946	12439	Fixture, plating	Couplings, gearbox	614	
*ATT0948	12441	Fixture, plating	Bleed valve, intermediate case	614	
*ATT0951	12444	Fixture, plating	Bevel gears, #3 housing	614	
*ATT0953	12446	Fixture, plating	Bearings, various sizes, with adjustable c-clamps	614	
*ATT0957	12500	Fixture, plating	#1 Bearing housing	614	
*ATT0959	12502	Fixture, plating	#6 Bearing housing	614	

P/N	S/N	Description	Application	Dept	ATA
*ATT0960	12503	Fixture, plating	#3 Bearing housing	614	
*ATT0961	12504	Fixture, plating	Adjustable fixture for various -200 bearing housings	614	
*ATT0962	12449	Fixture, plating	Plating bevel gear	614	
*ATT0963	12450	Fixture, plating	Plating tower shaft house	614	
*ATT0964	12451	Fixture, plating	Plating poppet bleed valve	614	
*ATT0966	12453	Fixture, plating	Plating #4 housing bleed valve	614	
*ATT0968	12455	Fixture, plating	Various size/adjustable fixture-plate gear shaft	614	
*ATT0969	12456	Fixture, plating	Adjustable, #4&5 scavenge tube & pump,cplg.tower shaft gear	614	
*ATT0971	12458	Fixture, plating	Universal race & journal chrome plating fixture, iron	614	
*ATT0972	12459	Fixture, plating	Chrome plating, universal parts holder	614	
*ATT0994	12490	Fixture	Various size upper O.D.,Gearbox drive towershaft bearing	428	72-34-10
*ATT1051	12557	Comparator, degree	Angle comparator for tool grinding dimensions	691	
*ATT1092	12607	Fixture	Grind OD and journal, bevel gear	428	72-34-31
*ATT1098	12613	Fixture	Grind coupling, intermediate case. Out of service	428	
*ATT1101	12616	Fixture	Out of service, unknown	428	
*ATT1103	12618A	Fixture	Unknown, out of service	428	
*ATT1103	12618B	Fixture	Unknown, out of service	428	
*ATT1118	12663	Dummy bearing	Assembly, No. 3 bearing (PWA P/N 577596)	420	72-34-00
*ATT1126	12675	Clamp, pressure test	Fuel nozzle and support assembly, diffuser case, -200	420	72-37-00
*ATT1127	12676	Clamp, sealing	Fuel nozzle sealing, pressure check	420	72-37-00
*ATT1163	12770	Cover, pressure check	Unknown, not in use	615	
*ATT1169	12787	Wrench, socket	#6 bearing support rod ring	320	72-54-00
*ATT1183	12537	Fixture	Repair #3, mixer cover	328	72-55-07
*ATT1188	12815	Puller/Jackscrew	Remove T3 & T4 disks, low turbine	320	72-53-00
*ATT1192	12831	Knocker	Remove exhause case bosses	102	
*ATT1205	12871	Hoist	Lifting bar and bolts, unknown usage	317	
*ATT1206	12877	Hoist & cables	1300 lb. limit sling hoist and cables	121	
*ATT1209	12885	Gage	Drop check, low turbine	319	72-53-00
*ATT1214	12893	Sweeney, air adapter	#4-1/2 nut, #5 nut, high turbine	320	
*ATT1215	12901	Wrench, combo	Snap-on 13/16", torque & stretch, -200 turbine exhaust	320	
*ATT1216	12902	Wrench, combo	3/4", Torque and stretch, -200 turbine exhaust	320	
*ATT1218	12947	Sleeves	Tierod sleeves, low turbine assy	320	72-53-00
*ATT1227	12999	Arbor, calibration	Turbine balance, weight.	219	
*ATT1229	13003	Fixture	Combustion ring, machine ID and OD	427	72-51-80
*ATT1230	13018	Fixture	Unknown, part of fixture	691	
*ATT1231	13021	Fixture	Plasma coat deoiler lining on Gearbox front housing	613	72-61-00

P/N	S/N	Description	Application	Dept	ATA
*ATT1232	13022A	Studs	Hold down studs for balance plate.	219	
*ATT1232	13022B	Studs	Hold down studs for balance plate	219	
*ATT1233	13023A	Studs	Hold down studs for balance plate	219	
*ATT1233	13023B	Studs	Hold down studs for balance plate	219	
*ATT1234	13025	Fixture	Low compressor #1 bearing support, machine rear snap	228	72-23-03
*ATT1235	13026	Wrench, torque	Nut, turbine exhaust case strut, set of 8	354	72-54-00
*ATT1236	13032	Fixture	For blast procedure on combustion cans	613	
*ATT1237	13033	Support, engine	Horizontal supports to spread clam shells, 2 parts(SN A&B)	121	
*ATT1239	13035	Packing installer	Install packing on diffuser case tube		
*ATT1240	13036A	Tube installer	Install PCP pressure fitting tube in diffuser case	420	
*ATT1240	13036B	Tube installer	Install PCP pressure fitting tube in diffuser case	420	
*ATT1241	13038	Gage	#6 bearing shoulder check	328	72-54-00
*ATT1242	13043	Fixture	Mount J067 manifold to table, and eliminate tape-up	613	
*ATT1242	13045	Fixture	Plasma, mount J067 manifold to table & elimanate tape-up	613	
*ATT1243	13049	Puller	Jackscrew to remove T3 disks, low turbine	102	
*ATT1244	13050	Fixture	Parts holding, C-1 stators, etc	417	
*ATT1252	13076	Hardware, balance plate	T-1 disk shaft mating parts, set of 4	319	
*ATT1253	13078	Vanes, dummy	1st stg turbine dummy nozzle guid vanes for positioning	102	
*ATT1253	13078A	Vane, dummy	1st stg. turbine disassembly	102	72-51-00
*ATT1253	13078B	Vane, dummy	1st stage turbine disassembly	102	72-51-00
*ATT1253	13078C	Vane, dummy	1st stage turbine disassembly	102	72-51-00
*ATT1253	13078D	Vane, dummy	1st stage turbine disassembly	102	72-51-00
*ATT1255	13090	Wrench, torque	750"lb., turbine balance, plugs	319	72-53-00
*ATT1256	13092	Plugs, hold down	Static balance, T-2 disk	319	
*ATT1257	13093	Plugs, hold down	Static balance, T-3 disk	319	
*ATT1258	13094	Plugs, hold down	Static balance, for PWA12579 plate	319	
*ATT1259	13095	Plugs, hold down	Static balance, for PWA12579 plate	319	
*ATT1260	13096	Plugs, hold down	Static balance, disk # unknown	319	
*ATT1261	13097	Spacers, hold down plugs	Static balance, disk & plug # unknown	319	
*ATT1262	13098	Pliers	Removal/Installation tool, LPT spacer, -200	121	
*ATT1263	13099A	Tool plate	#2 bearing, prevent slippage of tower shaft	420	
*ATT1264	13100	Fixture	Grinding bearing journal on #5 brg.housing, -200	328	
*ATT1265	13128	Puller, seal	Main oil pump	520	72-61-00
*ATT1266	13135	Wrench	Gearbox, unused tool	520	
*ATT1267	13144	Plate	Gearbox, unidentified	520	



P/N	S/N	Description	Application	Dept	ATA
*ATT1269	13148	Lifting eye	Screws into thin end low turbine shaft for lifting	320	
*ATT1270	13150	Pliers	Install locks on OCC D-bolts, modified channel lock No.909	121	
*ATT1271	13151	Puller, jackscrew	Remove T3 and T4 disks, low turbine	102	
*ATT1272	13152	Puller, jackscrew	Remove T4 disks, -200	102	
*ATT1273	13153	Pliers	Transfer tube remover	102	
*ATT1274	13173	Support, engine	Horizontal support, clam shell spreader, 2 pieces (SN A&B)	121	
*ATT1275	13155	Plate	Grinding plate, attaches to collet, various parts machining	328	
*ATT1277	13157	Punch, riveting	Trim balance, front counterwght rivets	622	72-00-00
*ATT1278	13158	Fixture	To mount 2F024 manifold for plasma application	613	
*ATT1279	13159	Pliers	Modified Channellock pliers, remove OCC D-bolts	121	
*ATT1281	13168	PS3 tube protector	Protect PS3 tubes, diss'y, intermediate case	102	
*ATT1285	13176	Vane grind fixture	4th stage vane, 1st grind	329	72-53-00
*ATT1286	13177	Vane grind fixture	2nd stage vane, 1st grind	329	72-53-00
*ATT1287	13178A	Vane grind fixture	Unidentified, part of vane grind fixture	329	72-53-00
*ATT1287	13178B	Vane grind fixture	Unidentified, part of vane grind fixture	329	72-53-00
*ATT1289	13179	Vane grind fixture	3rd stage vane, 1st grind	329	72-53-00
*ATT1290	13180	Vane grind fixture	3rd stage vane, 2nd grind	329	72-53-00
*ATT1291	13181	Vane grind fixture	4th stage vane, 2nd grind	329	72-53-00
*ATT1292	13182	Vane grind fixture	2nd stage vane, 2nd grind fixture	329	72-53-00
*ATT1293	13183	Vane grind fixture	2nd, 3rd & 4th stage vane, 2nd grind fixture	329	72-53-00
*ATT1294	13184	Vane grind fixture	2nd & 3rd stage vanes, 1st grind fixture	329	72-53-00
*ATT1295	13188	Pin removal tool	Rear turbine case pin removal tool, SB5800	328	72-33-51
*ATT1296	13189	Contour cam	Gage standard, equivalent to P&W print# 564901	328	
*ATT1297	13190	Contour cam	Gage standard, equivalent to P&W print# 557302	328	
*ATT1298	13191	Contour cam	Gage standard, equivalent to P&W print# 616903	328	
*ATT1299	13193	Pliers	Chanel-lock pliers, unmodified, OCC D-bolts	417	
*ATT1301	13211	Wrench, socket	Exhaust case strut nut socket, adjust & stretch, inner, -200	320	
*ATT1302	13212	Fixture	Hold C-8 Disk	628	
*ATT1303	13214	Fixture	#4-1/2 bearing outer race spacer	528	72-52-82
*ATT1315	13229	Fixture	Mask fixture, seal ring repair, liner expansion joint	613	
*ATT1330	13260A	Plate, support	Support T2 disk	320	
*ATT1330	13260B	Plate, support	Support T2 disk	320	
*ATT1331	13263	Removal tool	For removal of rivet heads in C-2, C-7 disks, HPC	102	
*ATT1332	13271	Puller	No. 1 bearing puller		
*ATT1333	13272	Knocker	Bearing installation tool		
*ATT1334	13274	Hammer	Dead blow hammer, for general use, part of field service kit		

P/N	S/N	Description	Application	Dept	ATA
*ATT1335	12789	Wrench, 11/16 box	Set of 8 box wrenches, strut ball, exhaust case	320	72-54-00
*ATT1335	13275	Mallet	Nylon mallet, general use, part of field service kit		
*ATT1336	13276	Wrench, torque	1/2" drive torqu wrench, general use, part of fld.svcs. kit		
*ATT1337	13277	Wrench, torque	1/4" drive torque wrench, general use, part of fld.svcs. kit		
*ATT1338	13278	Wire puller	Threaded safety wire puller, part of field services kit		
*ATT1339	13279	Drill	Battery operated drill, general use, Field services kit		
*ATT1340	13282	Torque plate	Tierods torque sequence plate		
*ATT1341	13291A	Socket wrench	Tierod removal socket wrench, part of field services kit		
*ATT1341	13291B	Socket wrench	Tierod removal wrench, part of field services kit		
*ATT1342	13295	Stator remover	C-1 stator removal tool		
*ATT1343	13297A	Wrench, torque	Torque wrench, general use, part of field services kit		
*ATT1343	13297B	Wrench, torque	Torque wrench, general use, part of Field services kit		
*ATT1344	13298A	Dial indicator	Dial indicator, general use, part of field service kit		
*ATT1344	13298B	Dial indicator	Dial indicator, general use, part of field service kit		
*ATT1345	13301	Torque plate	Front compressor tierod nuts torque sequence plate		
*ATT1346	13302	Spacer	Front compressor fixture		
*ATT1347	11344A	Mount	Diffuser case	121	72-00-00
*ATT1347	11344B	Mount	Diffuser case	121	72-00-00
*ATT1347	11344C	Mount	Diffuser case	121	72-00-00
*ATT1347	11344D	Mount	Diffuser case	121	72-00-00
*ATT1347	11344E	Mount	Diffuser case	121	72-00-00
*ATT1347	11344F	Mount	Diffuser case	121	72-00-00
*ATT1348	13305	Hydraulic jack	Enerpac hydraulic jack, general use, field services kit		
*ATT1349	13306	Hydraulic pump	Enerpac hydraulic pump, gen'l use, part of fld.svc.kit		
*ATT1350	13310	Rod, indicator	Hold indicator, gen'l use, part of field service kit		
*ATT1351	13314A	Wrench	Open end wrench, gen'l use, part of field services kit		
*ATT1351	13314B	Wrench	Open end wrench, gen'l use, part of field services kit		
*ATT1352	13317A	Wrench, torque	3/8 drv.torque wrench, gen'l use, field service kit		
*ATT1352	13317B	Wrench, torque	3/9 drv.torque wrench, gen'l use, field service kit		
*ATT1353	13321	Vibration transduller	Pick up vibrations on C-1 mod (A-C)		
*ATT1354	13322	Drill	Makita battery operated drill, general use		
*ATT1355	13323	IBM cap tom	Vibration survey		
*ATT1356	13324	Balance tool	Portable balancing system		
*ATT1357	13328	Gear removal tool	N1 spur gear removal tool		
*ATT1358	13329	C-knocker	C-knocker and handle		
*ATT1359	13330A	Wrench, torque	0-70 lbs. torque wrench, general usage		

P/N	S/N	Description	Application	Dept	ATA
*ATT1359	13330B	Wrench, torque	0-75 lbs. torque wrench, general usage.		
*ATT1360	13331	Removal tool	C-1 Stator removal tool		
*ATT1361	13333	Spacer	LPT Stretch Fixture spacer		
*ATT1362	13334	Plate, sequence	Sequence plate		
*ATT1363	13335	Installation tool	No. 1 bearing spacer installation tool		
*ATT1364	13337	Puller	No. 1 bearing puller		
*ATT1365	13338	Wrench, torque	50-250 ft.lbs. torque wrench, general usage		
*ATT1366	13339	Wrench, torque	0-200 in.lbs. Torque wrench, general usage		
*ATT1367	13342	Hammer	Dead blow hammer, general usage		
*ATT1368	13343	Hammer	Snap-on impact hammer, general usage		
*ATT1369	13344	Boroscope screen	Videotronics boroscope screen		
*ATT1370	13347	Removal tool	Bleed valve manifold line removal tool		
*ATT1371	13353	Spacer	No. 1 balance bearing, -217C, -219	220	
*ATT1372	13357	Test plate	Ultrasonic test plate		
*ATT1373	13358	Retrieval tool	"Magic finger", retrieve articles in module		
*ATT1374	13359	Boroscope	Boroscope camera lens		
*ATT1375	13360	Light	High intensity light source, field service tool		
*ATT1376	13361	Extension cord	Multiple socket extension cord, general use, field service		
*ATT1377	13363	Vibration check	MTI portable balance system and cables		
*ATT1378	13364	Adapter	Gearbox adapter		
*ATT1379	13365	Puller/tester	Mini cable wad puller, tester		
*ATT1380	13366	Wrench adapter	1/2"-3/4" drive adapter, general usage		
*ATT1381	13367	Crimper	Crimping tool, general usage		
*ATT1382	13368	Hammer drill	Accessories, general usage		
*ATT1383	13369	Blade fixture	Calibration fixture, blade blending		
*ATT1384	13370	Surge suppressor	General usage, surge suppression		
*ATT1385	13371	Probe ass'y kit	Ultrasonic probe ass'y kit		
*ATT1387	13375	Concentricity Gage			
*ATT1388	13376	Set Gage			
*ATT1726	12851	Spacers	Hold under #5 balance bearing for removal	319	
*ATT2324	12796	Press. check gage & hoses	Leak & pressurization check on PT7 probe	320	
*F72999-1	13390A	Wrench	Air Breather Duct	102	
*F-72999-1	13390B	Wrench	Air Breather Duct	102	
*PWA101112	13346	Handle, power	Engine assy, HPC, blade blending		
*PWA101113	13077	Adapter, blending tip	Engine assy, HPC, blade blending (7-8-9 Stg.)		

P/N	S/N	Description	Application	Dept	ATA
*PWA101113	13352	Adapter, blending tip	Engine assy, HPC, blade blending (7-8-9 stg)		
*PWA101114	13355	Adapter, blending tip	Engine assy, HPC, blade blending (7-8-9 stg)		
*PWA101115	13348	Adapter, measurement	Engine assy, HPC, blade blending (7-8-9 stg.)		
*PWA101116	13349	Fixture, calibration	Engine assy, HPC, blade blending (7-8-9 stg)		
*PWA101117	13345	Adapter, Install/Remove	Engine assy, hpc, bleed/polish tip, blade blending		
*PWA101781	12096	Adapter	Install/Remove Cplg.Nut	202	
*PWA101781	12097	Adapter	Engine assembly, LPT coupling nut, install/remove	202	72-00-53
*PWA10223	13118	Pin, aligning	Accessory drv brg hsg,#1 brg support alignment,Diff/Int case	520	72-23-00
*PWA10322	13048A	Sling, lift & trunnion	Strongback, 1900 lb. capacity	121	72-33-00
*PWA10322	13048B	Sling, lift & trunnion	Strongback, 1900 lb. capacity	136	72-33-00
*PWA10322	13048C	Sling, lift & trunnion	Strongback, 1900 lb. capacity	136	72-33-00
*PWA103291	13029	Probe	Compressor blades eddy current inspection	282	72-33-31
*PWA10381	11854	Drift, installation	main oil pump drive shaft seal	502	72-61-50
*PWA10931	12392	Riveter, hand	Turbine blade retaining rivet 1st thru 4th stages	317	72-53-00
*PWA11224	13199	Shroud	Rear compressor drive turbine balance	319	72-52-00
*PWA12001	11313	Ring	Compr.inlet case removal	121	72-23-00
*PWA12008	11284A	Bar, aligning	Aligning 3rd stg.disks	219	72-33-00
*PWA12008	11284B	Bar, aligning	Aligning 3rd stg.disks	219	72-33-00
*PWA12014	11243A	Spacer	No.1 balance bearing	219	72-33-00
*PWA12014	11243B	spacer	No.1 balance bearing	219	72-33-00
*PWA12015		Drift	No. 1 seal slinger and bearing inner race		72-33-00
*PWA12015	11657	Drift	#1 bearing seal slinger and bearing inner race	121	72-33-00
*PWA12015	13313	Drift	No. 1 seal slinger and bearing inner race		72-33-00
*PWA12018	13269	Puller	No. 1 hub		72-00-33
*PWA12018	13299	Puller	No. 1 hub		72-00-33
*PWA12018	13315	Puller	No. 1 hub		72-33-00
*PWA12018	13325	Puller	No. 1 Hub		72-00-33
*PWA12020	11221	Plate, balance	Fr.compr.rotor&stator, fr.bal	219	72-33-00
*PWA12021	11205	Pulley	Low compressor	219	72-33-00
*PWA12029	11227A	Eye	No.1 hub	219	72-33-00
*PWA12029	11227B	Eye	No.1 hub	219	72-33-00
*PWA12029	11227C	Eye	No.1 hub	219	72-33-00
*PWA12029	11227D	Eye	No.1 hub	219	72-33-00
*PWA12031	11463A	Puller	#2 Hub	102	72-33-00
*PWA12031	11463B	Puller	#2 Hub	102	72-33-00
*PWA12034	13145	Puller	Starter drv gearshaft seal hsg, CSD/alt.driv, hydr.pump drv	520	72-61-00

P/N	S/N	Description	Application	Dept	ATA
*PWA12036	11932	Holder	Gearbox seal installer/remover	520	72-61-00
*PWA12039	11851	Drift, disassembly	Fuel pump drive oil seal	502	72-61-00
*PWA12044	11365A	Collar, case	Combustion chamber outer case	121	72-00-00
*PWA12044	11365B	Collar, case	Combustion chamber outer case	121	72-00-00
*PWA12044	11365C	Collar, case	Combustion chamber outer case	121	72-00-00
*PWA12046	13108	Drift	Slabe end pin, outer fan exhaust duct	520	
*PWA12049	11530	Puller	Rcompr rotor fr.balance brg	102	72-36-00
*PWA12049	11670	Puller	Rear compressor rotor front balance bearing	121	72-36-00
*PWA12052	11201	Puller	Rear compr.rotor fr.airseal	219	72-36-00
*PWA12052	11531A	Puller	Rear compr rotor front airseal	102	72-36-00
*PWA12052	11531B	Puller	Rear compr rotor front airseal	102	72-36-00
*PWA12060	12562	Drift	Combustion chambr tube connector guide wear plate	328	72-71-03
*PWA12067	11487	Extractor	#4 brg.outer race retng nut	102	72-00-00
*PWA12076	11499B	Puller	Accy drv gearshaft roller brg	102	72-00-00
*PWA12078	11293	Plate	Accy Drv Gearshaft roller brg	219	72-61-00
*PWA12080	13042	Drift, assembly	Accessory drive gearshaft roller bearing	520	72-61-30
*PWA12085	11843	Drift	Starter shaft roller bearing inner race	502	72-61-10
*PWA12086	11844	Drift	Fuel pump drive roller bearing	502	72-61-25
*PWA12087	11249A	spacer,balance	Rear compr.rotor/stator	219	72-36-00
*PWA12087	11249B	Spacer, balance	Rear compr.rotor/stator	219	72-36-00
*PWA12091	11499A	Guide	#4 brg outer race case & balls	102	72-00-00
*PWA12099	12845	Drift	Rear compressor drive turbine front balance bearing	319	72-52-00
*PWA12104	12161	Drift	Idler gearshaft rear bearing bushing	528	72-61-01
*PWA12106	12389	Jig	Compressor airseal ring, 1st stage, drill	317	72-33-51
*PWA12107	11849	Drift	Constant speed drive/alternator drive gearshaft seal	502	72-61-59
*PWA12108	11846	Drift	Constant speed drv/alternator drv.gearshaft seal,fan exhdcut	502	72-61-59
*PWA12115	12388	Jig	Compressor airseal ring, 3rd stage, drill	317	72-33-54
*PWA12119	13043	Drift	Fuel pump drive ball bearing	520	72-61-25
*PWA12121	13044	Drift	Gearbox drive gear, assembly	520	72-61-25
*PWA12121	13133	Drift	Gearbox drive gear	520	72-61-25
*PWA12122	11877	Drift	Fuel pump driveshaft oil supply tube	502	72-61-25
*PWA12123	11829	Puller	Fuel pump driveshaft oil supply tube	502	72-61-25
*PWA12124	13131A	Lock	Main accessory drive gear	520	72-61-00
*PWA12124	13131B	Lock	Main accessory drive gear	520	72-61-00
*PWA12125	11840	Wrench	Main accessory drive gear roller bearing retaining nut	502	72-61-00
*PWA12125	13138A	Wrench	Main accessory drive ger roller bering retaining nut	520	72-61-00

P/N	S/N	Description	Application	Dept	ATA
*PWA12125	13138B	Wrench	main accessory drv gear roller bearing retaining nut	520	72-61-00
*PWA12127	11995A	Plate	Accessory drive gear and roller bearing	520	72-61-20
*PWA12127	11995B	Plate	Accessory drive gear and roller bearing	520	72-61-20
*PWA12129	11848	Drift	Accessory drive gear and roller bearing	502	72-61-20
*PWA12133	11853	Wrench	Gearbox outer driveshaft retaining nut wrench	502	72-61-00
*PWA12133	13139	Wrench	Gearbox outer driveshaft retaining nut wrench	520	72-61-00
*PWA12134	11987	Pusher	Gearbox outer driveshaft	520	72-61-00
*PWA12136	12486A	Plate	Idler gearshaft ball bearing	457	72-61-15
*PWA12136	12486B	Plate	Idler gearshaft ball bearings	457	72-61-15
*PWA12141	11850	Drift	Idler gearshaft roller bearing	502	72-61-15
*PWA12143	11868	Drift	Starter shaft	502	72-61-10
*PWA12143	13102	Drift	Starter shaft	520	72-61-10
*PWA12144	11930	Holder	Starter shaft, gearbox	520	72-61-10
*PWA12144	13134	Holder	Starter shaft	520	72-61-10
*PWA12145	11839A	Wrench	Starter shaft ball bearing retaining nut	502	72-61-00
*PWA12145	11839B	Wrench	Starter shaft ball bearing retaining nut	502	72-61-00
*PWA12146	11841	Wrench	Impeller retaining nut	502	72-61-10
*PWA12146	13141	Wrench	Impeller retaining nut	520	72-61-10
*PWA12147	11838	Wrench	Starter shaft roller bearing retaining nut	502	72-61-00
*PWA12149	11827	Puller	Breather seal	502	72-61-00
*PWA12149	13137	Puller	Breather seal	320	72-61-00
*PWA12150	11852	Drift	N2 tachometer driveshaft bearing	502	72-61-40
*PWA12152	13121	Drift	Power cross-over shaft outer bearing	520	
*PWA12153	11874	Holder	Powerlever crossover shaft, inner shaft	502	72-61-58
*PWA12153	13120	Holder	Powerlever crossover shaft (inner)	520	72-61-58
*PWA12153	13307	Holder	Powerlevel crossover shaft, inner		72-61-58
*PWA12154	11873	Wrench	Crossover & inner shaft bearing retaining nut	502	72-61-00
*PWA12154	13125	Wrench	Crossover shaft-brg.retaining nut (inner)	520	72-61-58
*PWA12154	13308	Wrench	Crossover shaft-bearing retaining nut, inner		72-61-58
*PWA12155	11876	Holder	Powerlever crossover shaft	502	72-61-00
*PWA12155	13119A	Holder	Powerlever crossover shaft (outer)	520	72-61-00
*PWA12155	13119B	Holder	Powerlever crossover shaft (outer)	520	72-61-00
*PWA12155	13309	Holder	Powerlever crossover shaft (outer)		72-61-58
*PWA12156	11875	Wrench	Crossover & outer shaft bearing retaining nut	502	72-61-00
*PWA12156	13126	Wrench	Crossover shaft-bearing retaining nut (outer)	520	72-61-00
*PWA12156	13312	Wrench	Crossover shaft-bearing retaining nut, outer		72-61-58

P/N	S/N	Description	Application	Dept	ATA
*PWA12173	12907	Fixture, checking	3rd stage turbine blade	381	72-53-00
*PWA12174	12908	Fixture	Notch wear inspection, 4th stage turbine blade	381	72-53-00
*PWA12180	12329	Riveter	Compressor vane and shroud, 3rd stage	317	72-33-54
*PWA12183	11468	Puller	#2 brg.outer race & balls	102	72-00-00
*PWA12189	12396	Anvil, riveting	Compressor vane airseal riveting	317	72-33-53
*PWA12191	11986	Support	Main accessory drive gear ball bearing	520	72-61-00
*PWA12191	12013	Support	Main accessory drive gear ball bearing	520	72-61-00
*PWA12212	12746	Fixture	#1 bearing oil nozzle flow	615	72-21-01
*PWA12232	11268A	Drift	No.2 bearing inner race, seal	219	72-00-00
*PWA12232	11268B	Drift	#2 bearing inner race seal	219	72-00-00
*PWA12241	12646	Drift	Accessory drive roller bearing inner race	420	72-34-50
*PWA12242	12485A	Plate	Accessory drive roller bearing inner race	457	72-34-50
*PWA12242	12485B	Plate	Accessory drive roller bearing inner race	457	72-34-50
*PWA12243	12483	Drift	Accessory drive gearshaft	457	72-34-50
*PWA12244	12647	Drift	Accessory drive ball bearing	420	72-34-50
*PWA12245	13143	Plate	Accessory drive ball bearing	520	72-34-50
*PWA12246	12645	Drift, assembly	No. 3 bearing, seal assembly drift	420	72-34-00
*PWA12247	12484A	Plate	No. 3 bearing, press disassembly	457	72-34-30
*PWA12247	12484B	Plate	No. 3 bearing, press disassembly	457	72-34-30
*PWA12248	12478	Drift	Accessory drive gear	457	72-34-30
*PWA12251	12637	Puller, jackscrew	No. 3 bearing seal	420	72-34-00
*PWA12255	12793	Gage	#6 bearing support rod stretch	320	72-54-00
*PWA12258		Ring	Turbine blade support, 2nd stage	102	72-53-02
*PWA12261	12879	Yoke	Front compressor drive turbine rotor assembly	319	72-53-00
*PWA12262		Sling	2nd stage turbine disk and blades	102	72-53-00
*PWA12263		Sling	Third stage turbine disk and blades	102	72-53-00
*PWA12264		Sling	4th stage turbine disk and blades	102	72-53-00
*PWA12265	11512A	Puller	3rd stage turbine disk	102	72-53-00
*PWA12265	11512B	Puller	3rd stage turbine disk	102	72-53-00
*PWA12265	11512C	Puller	3rd stage turbine disk	102	72-53-00
*PWA12265	12812	Puller	3rd stage turbine disk	320	72-53-00
*PWA12265	13373A	Puller	3rd stage turbine disk	102	72-53-00
*PWA12265	13373B	Puller	3rd stage turbine disk		72-53-00
*PWA12270	11505	Wrench	#4.5 brg.inner race retng nut	102	72-53-00
*PWA12270	11519	Wrench	#4.5 brg inner race rtng nut	102	72-53-00
*PWA12270	12817	Wrench	No. 4-1/2 Bearing inner race retaining nut	320	72-53-00

P/N	S/N	Description	Application	Dept	ATA
*PWA12273	12816	Drift	Front compressor drive turbine torotor front bearing	320	72-53-00
*PWA12280	12811	Drift	Front compressor drive turbine rear bearing spacer, #6	320	72-53-00
*PWA12281	11551	Puller	Turb.brg oil press & scav.tube	102	72-53-00
*PWA12287	13202	Pilot	Turbine disk 2nd stage	102	72-53-02
*PWA12292	13270	Puller	Front accessory drive gearshaft		72-00-00
*PWA12293		Ring	Turbine blade support, 3rd stage	102	72-53-03
*PWA12294		Ring	Turbine blade support, 4th stage	102	72-53-04
*PWA12297	11358	Holder	#5 Bearing housing support asy	121	72-41-00
*PWA12299	11317	Retainer	Fr.compr.rotor & stator,rear	219	72-33-00
*PWA12301	12026	Drift	Compressor Front bearing seal ring	228	72-23-02
*PWA12308	11514	Eye	3rd stage turbine disk & blades, vertical lift	102	72-53-00
*PWA12308	12825A	Eye	3rd stage turbine disk & blades, vertical lift	320	72-53-00
*PWA12308	12825B	Eye	3rd stage turbine disk and blades, vertical lift	102	72-53-00
*PWA12309	11510	Eye	Vert.lift 4thStg Hub&oil tube	102	72-53-00
*PWA12309	12823A	Eye	Vertical lifting 4th stage hub & 4-1/2 oil tube	320	72-53-00
*PWA12309	12823B	Eye	Vertical lifting 4th stage hub & 4-1/2 oil tube	320	72-53-00
*PWA12312	12792	Gage	#6 bearing support concentricity check	320	72-54-00
*PWA12312	12848	Gage	No. 6 bearing support concentricity check	121	72-54-00
*PWA12312	12860	Gage	No.6 Bearing support concentricity check	102	72-54-00
*PWA12313	11579A	Wrench	#6 bearing support rod ring	102	72-54-00
*PWA12313	11579B	Wrench	#6 Bearing support rod ring	102	72-54-00
*PWA12313	11579C	Wrench	#6 bearing support rod ring	102	72-54-00
*PWA12313	12786	Wrench	#6 bearing support rod ring	320	72-54-00
*PWA12315	11580A	Wrench	#6 bearing support rod nut	102	72-54-00
*PWA12315	11580B	Wrench	#6 bearing support rod nut	102	72-54-00
*PWA12315	12779A	Wrench	#6 bearing support rod nut	320	72-54-00
*PWA12315	12779B	Wrench	#6 bearing support rod nut	320	72-54-00
*PWA12316	13028A	Sling	Turbine exhaust and outer cases, vertical lift	121	72-54-00
*PWA12316	13038B	Sling	Turbine exhaust & outer cases, vertical lift	121	72-54-00
*PWA12322	11191	Wrench	Turbine coupling front break	219	72-00-00
*PWA12327	13111	Drift	Turbine rear bearing support shoulder pin	520	72-54-16
*PWA12331	13109	Drift	Compressor vane outer shroud pin	520	72-33-56
*PWA12332	13268	Wrench	No. 1 bearing retaining nut (hand)		72-00-53
*PWA12332	13336	Wrench	No. 1 balance bearing retaining nut (hand)		72-53-00
*PWA12333	11377A	Removal fixture	Intermed.Case removal cross	102	
*PWA12333	11377D	Removal fixture	Intermediate case	102	



P/N	S/N	Description	Application	Dept	ATA
*PWA12338	12063	Jig	Tachometer shaft gear bearing housing	228	72-21-01
*PWA12344	12784	Drift	Turbine exhaust fan outer duct ball socket seat	320	72-54-00
*PWA12345	13362	Wrench	Turbine exhaust fan duct outer duct ball housing, rtng nut	320	72-54-00
*PWA12348		Pilot	Turbine disk, 3rd stage	102	72-53-03
*PWA12351		Pusher	Turbine disk, 4th stage	102	72-53-04
*PWA12355	12366	Plug	Accesory drive gearbox oil jet oil flow	317	72-61-01
*PWA12362	12797	Gage, set	Turbine exhaust fan duct strut, stretch	320	72-54-00
*PWA12367		Pilot	Turbine disk 4th stage deblading	102	72-53-04
*PWA12370		Fixture	Turbine blade checking, 1st stage		
*PWA12379	13116	Punch	2nd stage compressor vane airseal	520	72-33-53
*PWA12386		Adapter	Fuel system flushing & preserving outlet		72-00-00
*PWA12386	11540	Puller	#5 bearing seal and spacer	102	
*PWA12387	11340A	Bracket, lift&trunnion	Fan exhaust outer duct assy	102	72-00-00
*PWA12387	11340B	Bracket, lift&trunnion	Fan exhaust outer duct assy	102	72-00-00
*PWA12387	12794A	Bracket, lift & trunnion	Fan exhaust outer duct assembly, lift & trunnion	320	72-00-54
*PWA12387	12794B	Bracket, lift & trunnion	Fan exhaust outer duct assembly, lift & trunnion	320	72-00-54
*PWA12395	12157	Drift	Diffuser air supply expansion joint sleeve	528	72-37-01
*PWA12396		Drift, installation	Rear compressor air supply expansion joint sleeve		72-34-00
*PWA12399		Drift	Fuel manifold inlet tube inner sealing seat		72-38-01
*PWA12400	11349	Puller	RearCompr.driv.Turb.rotorSpacer	121	72-52-00
*PWA12402	11260A	Wrench	No.1 hub plug	220	72-00-00
*PWA12402	13296	Wrench	No. 1 hub plug		72-00-00
*PWA12402	13327	Wrench	No. 1 hub plug		72-00-00
*PWA12404	12872	Adapter, build	Front compressor drive turbine rotor build, vertical	320	72-53-00
*PWA12422	11583	Wrench	Turb.Exhaust fan outer duct strut ball seat retaining nuts	102	72-54-00
*PWA12424	12747	Fixture	#2 & #3 bearing nozzle, oil flow	615	72-34-09
*PWA12428	11707	Gage, stretch	RR compressor, rotor tierod stretch, upper (mechanical only)	121	72-36-00
*PWA12430	11228A	Pedestal	Rotor & stator-vertical build	219	72-36-00
*PWA12430	11228B	Pedestal	Rotor & stator-vertical build	219	72-36-00
*PWA12444	11536	Puller	Rear compressor rotor front hub	102	72-36-00
*PWA12454	11247A	Spacer	No.2 balance bearing	219	72-33-00
*PWA12454	11247B	Spacer	No.2 balance bearing	219	72-33-00
*PWA12456	11493	Guide	Diff.Case #4 brg hsg,#4 hub	102	72-00-00
*PWA12482	12917	Master	Checking fixture, setting, 3rd stage turbine blade	381	72-53-12
*PWA12483	12916	master	Checking fixture, setting, 4th stage turbine blade	381	72-53-13
*PWA12485	13201	Pusher	Turbine 2nd stage disk	102	72-53-02

P/N	S/N	Description	Application	Dept	ATA
*PWA12486		Pusher	3rd stage turbine disk	102	72-53-03
*PWA12493	13124	Puller	Gearbox outer drive shaft	520	
*PWA12498	11884	Drift	Oil pressure relief valve seat	502	
*PWA12516	11498	Drift, assembly	#4 brg inner race rtng nut	102	72-00-00
*PWA12521	11382	Yoke	FrComprDrvTurbRotorTierodStret	102	72-00-00
*PWA12522	12970	Adapter, static balance	Front compressor drive turbine rotor seals static	319	72-53-27
*PWA12525	12912	Gage, pretwist inspection	Rear compressor drive turbine blades	381	72-52-00
*PWA12534	11192	Riveter	RR.compr.RR.hub,Intermed&Front	219	72-36-00
*PWA12534	12332	Riveter	Rr. compressor rr.hub, intermediate and front	317	72-36-00
*PWA12534-20	11189	Riveter	RR.compr.RR.hub,Intermed&Front	219	72-36-00
*PWA12539	13104	Drift	N1 tachometer drive seal	520	
*PWA12541	13113	Drift	N2 tachometer drive seal	520	72-61-44
*PWA12542	13122	Base	N2 tachometer drive seal housing	520	72-61-44
*PWA12543	11662	Drift, assembly	#2 bearing inner race retaining nut lock-washer crimping	121	72-00-00
*PWA12546	12783	Wrench	Turbine exhaust fan outer duct strut ball seal retaining nut	320	72-54-00
*PWA12547	13110	Drift	N1 tachometer drive seal	520	72-21-05
*PWA12548	11710A	Gage	Front compressor rear tierods stretch, lower (mechanical)	121	72-33-00
*PWA12548	11710B	Gage	Front compressor tierod stretch, lower (mechanical)	121	72-33-00
*PWA12549	11213	Gage	Fr.compr.rear tierods stretch	119	72-33-00
*PWA12550	11316A	Stand	Fr.compressor rotor & stator	219	72-33-00
*PWA12550	11316B	Stand	Fr.Compressor Rotor & Stator	219	72-33-00
*PWA12557	11706	Gage	Rear compressor rotor tierods stretch, mechanical	121	72-36-00
*PWA12578	11209	Adapter	Static balance-disk spacers	219	72-36-00
*PWA12578	13070	Adapter, static balance	Static balance-disk spacers, all stages rear compr. hubs	319	72-36-00
*PWA12579	11212	Adapter	Static balance-disk&blade assy	219	72-36-00
*PWA12579	13065	Adapter, static balance	Static balance-disk and blade assemblies, all stages	319	72-36-00
*PWA12584	12415	Fixture, plating	8th stage compressor disk, plating	614	72-36-42
*PWA12585	12412	Fixture, plating	9th stage compressor disk, plating	614	72-36-43
*PWA12586	12413	Fixture, plating	10th stage compressor disk, plating	614	72-36-44
*PWA12587	12414	Fixture, plating	11th stage compressor disk, plating	614	72-36-45
*PWA12588	12411	Fixture, plating	12th stage compressor disk, plating	614	72-36-46
*PWA12592	12900	Fixture	Front & rear compressor rotor tierods, plating	614	72-33-00
*PWA12595	11282A	Plate	N2 Tach Drv Shaftgear brg	220	72-61-00
*PWA12595	11282B	Plate	N2 Tach Drv shaftgear brg	219	72-61-00
*PWA12596	11610	Puller	#4-1/2 engine and balance bearing	102	72-53-00
*PWA12596	12949	Puller	No. 4-1/2 engine and balance bearing	320	72-53-00

P/N	S/N	Description	Application	Dept	ATA
*PWA12597	11518A	Plate	#4.5 roller brg inner race	102	72-53-00
*PWA12597	11518B	Plate	#4.5 Roller brg inner race	102	72-53-00
*PWA12598	12854	Housing	No. 4-1/2 balance bearing, shaft balance	320	72-53-00
*PWA12599	13252	Housing	Front compressor drive turbine motor rear balance bearing	616	72-53-00
*PWA12616	11239	Plate	Clamp 2nd stg comp disk/spacer	219	72-33-00
*PWA12622	11312	Adapter	Fr.compr.rear rotor & stator	219	72-33-00
*PWA12625	11115	Fixture	Rear compr tablock bending	219	72-36-00
*PWA12629	11323	Adapter	Rear Compr.rotor & stator	219	72-36-00
*PWA12652	13300	Gage	Front compressor front tierods stretch (mechanical)		72-00-33
*PWA12654	11113	Base, riveting	2nd stg.fan blade riveting	219	72-33-00
*PWA12660	11507	Puller	4th stage turbine hub, hydraulic	102	72-53-00
*PWA12662	13253	Housing	Balance bearing and vibrator mounting	319	72-53-00
*PWA12667	11345A	Eye	RearComprDrvTurbRotorVert.Lift	121	72-52-00
*PWA12667	11345B	Eye	RearComprDrvTurbRotorVert.lift	121	72-52-00
*PWA12697	13204	Puller	2nd stage turbine static balance counterweights	102	72-53-02
*PWA12702	12819	Drift	No. 4-1/2 bearing oil tube seal	320	72-53-00
*PWA12702	13316	Drift	No. 4-1/2 bearing oil tube seal		72-53-00
*PWA12743		Gage	RR.compr.driv.turbine shaft inside dia.thrds,plug & depth		
*PWA12745	11229	Distributor, stretching	Compr hydraulic tierod stretch	219	72-36-00
*PWA12746	12594	Pusher	Rear compressor drive turbine rotor plug (hydraulic)	328	72-52-03
*PWA12761	12751	Fixture	#5 bearing seal assembly pressure test	615	72-52-11
*PWA12777	12840	Wrench	Front compr.rotor & stator hydr.tierod stretch,fan package	319	72-33-00
*PWA12778	12905	Gage	2nd stage turbine vane check, axial displacement	381	72-53-71
*PWA12778	13017	Gage, axial displacement	2nd stage turbine vane (check)	691	72-53-71
*PWA12779	12906	Gage	3rd stage turbine vane axial displacement, checking	381	72-53-00
*PWA12780	12904	Gage	4th stage turbine vane axial displacement, checking	381	72-53-73
*PWA12789	12148	Punch	Turbine blade retaining rivets (pneumatic),use w/PWA17409	319	72-52-00
*PWA12790	12148	Rivet cup	1st stage turbine blade retaining rivets, flaring	319	72-52-00
*PWA12793	12418	Fixture, plating	Rear compressor front hub, plating	614	72-36-17
*PWA12803	13084	Puller	2nd & 3rd stage trubine counterweights	319	72-53-02
*PWA12812	12769	Fixture	Compr.rear bearing seal air pressure tube connector,preloadg	615	72-37-01
*PWA12816	12403	Anvil, riveting	1st stage compressor rotor air flow duct, riveting	317	72-33-51
*PWA12817	12870A	Stand assembly	Turbine rotor and stator	320	72-53-00
*PWA12817	12870B	Stand assembly	Turbine rotor and stator	320	72-53-00
*PWA12822	11193	Riveter	Fr.compr.counterweight rivets	219	72-33-00
*PWA12822	12325	Riveter	Front compressor counterweight rivets	317	72-33-00

P/N	S/N	Description	Application	Dept	ATA
*PWA12831	13123	Pusher	Gearbox bracket bushing	520	72-09-73
*PWA12840		Pilot	4th stage turbine disk, deblading	102	72-53-04
*PWA12841	11230	Adapter, stretch	Rearcompressor hydraulic tierod stretcher	219	72-36-00
*PWA12842	11231	Wrench	Hydraulic tierod stretch	219	72-36-00
*PWA12843	11681	Thimble & rod	Rear compressor hydraulic tierod	121	72-36-00
*PWA12847	12882	Retainer	Low compr. dr.unit turb.rotor/stator assy.rr (horiz/vert)	319	72-53-00
*PWA12854	12942	Press	Turbine disk installation	320	72-53-00
*PWA12858	11299	Fixture	Low turbine rotor/stator assy balance (unit build)	320	72-53-00
*PWA12858	11823	Fixture	Low turbine rotor/stator assy balance (unit build)	320	72-53-00
*PWA12859	12852A	Locator	Low turbine shaft spline (unit build)	320	72-53-00
*PWA12859	12852B	Locator	Low turbine shaft spline (unit build)	320	72-53-00
*PWA12862	12964	Support	Indicator probe	320	72-53-00
*PWA12867	11300	Fixture	Front compressor drive unit turbine rotor rear balance	320	72-53-00
*PWA12867	11824	Fixture	Front compressor drive unit turbine rotor rear balance	320	72-53-00
*PWA12868	13079	Riveter	Front compressor drive unit turbine front, counterweights	319	72-53-00
*PWA12869	13385A	Retainer	Turbine Rotor	102	72-53-00
*PWA12884	13117	Pin	Fuel control linkage alignment	520	72-61-00
*PWA12888	12722	Plug	#2 bearing oil pressure tube boss (inner) pressure check	615	72-34-01
*PWA12889	12724	Plug	#2 bearing oil pressure tube boss (outer) pressure test	615	72-34-01
*PWA12891	12726	Adapter, pressure test	#3 bearing and seal area pressure test	615	72-34-01
*PWA12892	11658	Gage	Front compressor drive turbine distance	121	72-00-00
*PWA12897	12727	Plug	#2 bearing seal support flange pressure test	615	72-34-01
*PWA12898	12723	Plug	Outer towershaft port	615	72-34-01
*PWA12908	12748	Plug	Diffuser Case & #4 bearing housing oil pressure scavenge pts	615	72-37-00
*PWA12915	13085	Ring	No. 4 turbine disk static balance	319	72-53-04
*PWA12916	11845	Drift, installation	Breather seal installation, main gearbox	502	72-61-00
*PWA12918	11847	Drift	hydraulic pump & starter drive gearshaft seals, gearbox	502	72-61-59
*PWA12934	11508	Wrench	#4.5 brg oil press.&scav.tube	102	72-53-00
*PWA12934	12832	Wrench	No. 4-1/2 bearing oil pressure and scavenge tool	320	72-53-00
*PWA12963	12935	Fixture	2nd stage turbine blade notch wear, checking	381	72-53-11
*PWA12964	12936	Master	Fixture checking, setting	381	72-53-11
*PWA12965	12407	Anvil, riveting	2nd stage compressor airflow duct, riveting	317	72-33-53
*PWA12966	12730	Cap, pressure test	Inlet case oil pressure/scavenge tubes, pressure check	615	72-23-01
*PWA12967	12731	Cap, pessure test	Inlet case oil breather tube, pressure test	615	72-23-01
*PWA12969	11665	Riveter	#2 bearing outer race retaining nut rivet	121	72-00-00
*PWA12971	12803	Bar, parallel	2nd,3rd & 4th stage turbine stator locating	320	72-53-0

P/N	S/N	Description	Application	Dept	ATA
*PWA12985	12735	Cover, pressure test	#4 bearing housing front flange, pressure test	615	72-37-07
*PWA12986	12733	Cover, pressure check	#4 bearing housing rear flange, pressure test	615	72-37-07
*PWA14107	11869	Drift	Accessory drive gear shaft front bearing bushing	502	72-61-02
*PWA14132	13112	Drift	N2 tachometer drive shaft gear bearing	520	72-61-40
*PWA14152	11855	Drift, install	Main gearbox, fuel pump pad coupling adapter, tablocks	502	72-61-00
*PWA14159	13114	Drift	Oil pressure relief valve strainer	520	
*PWA14262	11667	Eye	Rear compressor assembly lift & turn (#4 main hub)	121	72-00-00
*PWA14362	13256	Ring, concentricity	Front compressor drive turbine shaft spline	616	72-53-00
*PWA14406	11864	Fixture	Main oil screen assembly, (40 micron filter)	502	72-61-55
*PWA14438	12820A	Plate	No. 4-1/2 balance bearing puller	320	72-53-00
*PWA14438	12820B	Plate	No. 4-1/2 balance bearing puller	320	72-53-00
*PWA14614	11497A	Riveter	#4 brg outer race retng. nut	102	72-00-00
*PWA14614	11497B	Riveter	#4 brg outer race retng. nut	102	72-00-00
*PWA14896	12148	Punch	1st stage turbine blade retaining rivet (pneumatic)	319	72-52-00
*PWA16139	13294	Puller	2nd stage disk and blades		72-00-33
*PWA16178	11185	Eye	Handling compr.disk&blade assy	219	72-33-00
*PWA16178	12096	Eye	Compressor disk & blade assembly, handling	202	72-33-00
*PWA16178	13067	Eye	Compressor disk and blade assembly, handling	319	72-33-00
*PWA17019	12911	Holder	Dial indicator, 1st stg.turbine blade inspection	381	72-53-00
*PWA17138		Gage, depth	Ind. flush pin turbine blade notch depth		72-52-01
*PWA17477	12148	Anvil, riveting	Turbine blade riveting (hollow rivets, 1st, 2nd)	319	72-53-00
*PWA17479	12148	Rivet cup	Turbine blade retaining, hollow rivets (pneumatic)	319	72-53-00
*PWA17559	12873	Stand	Vertical build, front compressor drive turbine rotor	320	72-53-00
*PWA17629	13203	Fixture	Turbine blade removal, all stages	102	72-53-02
*PWA18692	12742	Adapter, oil flow	#4-12/ & #6 bearing sheild tube, oil inlet	615	72-53-30
*PWA21350-18	11245A	Bearing	Fr.compr.bal & concentr.chk	219	72-33-00
*PWA21350-18	11245B	Bearing	Fr.compr.Bal&concentr.chk	219	72-33-00
*PWA21350-19	11246A	Bearing	Fr.compr,rear bal&conc chk	219	72-33-00
*PWA21350-19	11246B	Bearing	Fr.compr.rear bal&conc chk	219	72-33-00
*PWA21350-20	11244	Bearing	Balance & concentr. check	219	72-36-00
*PWA21350-21	11248A	Bearing	Balance & concentr check	219	72-36-00
*PWA21350-21	11248B	Bearing	Balance & concentr check	219	72-36-00
*PWA21350-26	11251	Bearing	Balance & concentr check	219	
*PWA21350-31	12853	Bearing, bal.& conc.check	Rear compressor drive turbine, rear	320	72-53-00
*PWA21350-47	11253	Bearing	Balance & concentr check	219	72-33-00

P/N	S/N	Description	Application	Dept	ATA
*PWA21598	12992	Riveter	No. 1 bearing inner race retaining nut	220	72-00-23
*PWA21598	12994	Riveter	No. 1 bearing inner race retaining nut	220	72-00-23
*PWA21598	13195	Riveter	No. 1 bearing inner race retaining nut	220	72-00-23
*PWA21598	13273	Riveter	No. 1 bearing inner race retaining nut		72-00-00
*PWA21598	13326	Riveter	No. 1 bearing inner race retaining nut		72-23-00
*PWA21736	11169	Plugs, hold down	Static balance	219	72-36-00
*PWA21736	11170	Plugs, hold down	Static balance	219	72-36-00
*PWA21737	11165	Plugs, location	Static balance	219	72-36-00
*PWA21737	11166	Plugs, location	Static balance	219	72-36-00
*PWA21737	11167	Plugs, location	Static balance	219	72-36-00
*PWA21737	11168	Plugs, location	Static balance	219	72-36-00
*PWA25381	11733A	Sling, handling	Strongback, two cable (6400 lb. capacity)	102	72-00-00
*PWA25381	11733B	Sling, handling	Strongback, two cable (6400 lb. capacity)	102	72-00-00
*PWA28818		Gage, thickness	L.E. & T.E., 1st stage fan blade		
*PWA29099	11734A	Adapter, lift & trunnion	Lift & trunnion, 2-3/4 inch spools	102	72-34-00
*PWA29099	11734B	Adapter, lift & trunnion	Lift & trunnion 2-3/4 inch spools	102	72-34-00
*PWA29099	11734C	Lift & trunnion	Lift & trunnion, 2-3/4 inch spools	102	72-34-00
*PWA29099	11734D	Lift & trunnion	Lift & trunnion, 2-3/4 inch spools	102	72-34-00
*PWA29317-19		Block, setting	4th Stage LPT LE airseal height		72-53-13
*PWA29317-20		Block, setting	4th stage LPT TE airseal height		72-53-13
*PWA29317-21		Block, setting	3rd stage LPT LE airseal height		72-53-12
*PWA29317-22		Block, setting	3rd stage LPT TE airseal height		72-53-12
*PWA29317-23		Block, setting	2nd stage LPT LE airseal height		72-53-11
*PWA29317-24		Block, setting	2nd stage LPT TE airseal height		72-53-11
*PWA29317-46		Block, setting	2nd stage turbine blade L.E. airseal height		72-53-00
*PWA29317-47		Block, setting	2nd stage turbine blade T.E. airseal height		72-53-00
*PWA29317-48		Block, setting	3rd stage turbine blade L.E. airseal height		72-53-00
*PWA29317-49		Block, setting	3rd stage turbine blade T.E. airseal height		72-53-00
*PWA29317-50		Block, setting	4th stage turbine blade L.E. airseal height		72-53-00
*PWA29317-51		Block, setting	4th stage turbine blade T.E. airseal height		72-53-00
*PWA29754	12954	Control, heater	Engine assembly, universal	320	72-53-00
*PWA29754	13027	Control, heater	Engine assembly, universal	320	72-53-00
*PWA29971	13082	Riveter	LPT 2nd and 4th stage counterweight rivet	319	72-53-00
*PWA30148		Plugs, locating	Static balance (2.0 in.height w/.130 long shoulder)		72-33-06
*PWA30148	11120	Plugs, locating	Static balance	219	72-33-00
*PWA30148	11121	Plugs, locating	Static balance	219	72-33-00

P/N	S/N	Description	Application	Dept	ATA
*PWA30148	11122	Plugs, locating	Static balance	219	72-33-00
*PWA30148	11123	Plugs, locating	Static balance	219	72-33-00
*PWA30463	12148	Anvil, riveting	Compressor and turbine blade riveting (hollow)	319	72-53-00
*PWA32000	13187	Gage	Vane check gage	381	
*PWA32001	13186	Gage	Vane check gage	381	
*PWA32002	13185	Gage	Vane check gage	381	
*PWA32052	11374	Puller, knocker	#4-1/2 bearing outer rear retainer nut lock	102	72-00-52
*PWA32059	12867	Tierod	Working, front compressor drive turbine	320	72-53-00
*PWA32065	13136	Wrench	Starter driveshaft bearing inner race retaining nut	520	72-61-00
*PWA32075		Gage	4th compressor blade tip wear		
*PWA32076	12148	Anvil, riveting	3rd stage turbine blade riveting (pneumatic)	319	72-53-00
*PWA32082	11484A	Puller	#4 Inner race puller	102	
*PWA32082	11484B	Puller	#4 Inner race puller	102	
*PWA32154	11674	Wrench, set	Rear compressor tierod nuts, mechanical stretch	121	72-36-00
*PWA32158	11219A	Adapter, assembly	fr.compr.Rotor/stator rear	219	72-33-00
*PWA32158	11219B	Adapter, assembly	Fr.compr.Rotor/Stator rear	219	72-33-00
*PWA32159	11112	Base, riveting	2nd compr.blade riveting	219	72-33-00
*PWA32162	11705	Gage	Front compressor front tierod stretch, mechanical	121	72-33-00
*PWA32162	13332	Gage	Front compressor front tierod stretch, mechanical		72-00-33
*PWA32165	13303	Wrench	Front compressor front tierod nuts, mechanical stretch		72-00-33
*PWA32165	13340	Wrench	Front compressor front tierod nuts, mechanical stretch		72-33-00
*PWA32171	11720	Eye	#2 hub	121	72-33-00
*PWA32185		Adapter, balance fixture	Front compressor rear package, front balance fixture		
*PWA32187	12548	Pulley & Cartridge Ass'y	Front compressor rotor & stator rear drive	256	72-33-00
*PWA32193	11590	holder	Discharge duct strut ball housing	102	72-54-00
*PWA32193	12778	Holder	Discharge duct strut ball housing	320	72-54-00
*PWA32202	13165	Fixture	Gearbox drive bevel gear, loading, detail 203	121	72-00-34
*PWA32202	13166	Fixture	Gearbox drive bevel gear, loading	121	72-00-34
*PWA32226	12390	Jig	1st stage compressor stator air seal ring, drill	317	72-33-51
*PWA32227	12393A	Rivet cup	1st stage compressor air seal	317	72-33-51
*PWA32227	12393B	Rivet cup	1st stage compressor air seal	317	72-33-51
*PWA32228	12326	Riveter	1st stage compressor stator positioning plate	317	72-33-51
*PWA32228	12344	Riveter	1st stage compressor stator positioning plate	317	72-33-51
*PWA32243	11183	Retainer	Fr.compr.drive removal&install	219	72-33-00
*PWA32243	13320	Retainer	Front compr. drive removal and inst.	219	72-33-00
*PWA32285	13083	Drift, offset	3rd stage turbine disk couterweight removal(integral spacer	319	72-53-03

P/N	S/N	Description	Application	Dept	ATA
*PWA32294	11881	Drift	Bearing sleeve cover and housing main pump	502	72-61-50
*PWA32312	12074	Fixture	Anti-icing manifold & fuel heater inlet bushing, reaming	228	72-09-00
*PWA32314	11275A	Puller	No.4 Bearing seal oil baffle	220	72-00-00
*PWA32314	11275B	Puller	#4 bearing seal oil baffle	220	72-00-00
*PWA32317	11272A	Puller	#2 bearing front seal	102	72-00-00
*PWA32317	11272B	Puller	#2 bearing front seal	102	72-00-00
*PWA32317	11469B	Puller	#2 bearing front seal	102	72-00-00
*PWA32318	11273A	Puller	No.2 bearing rear seal & baffl	202	72-00-00
*PWA32318	11273C	Puller	#2 bearing seal and baffle	202	72-00-00
*PWA32324	11275B	Puller	No.4 bearing seal oil baffle	119	72-00-00
*PWA32346	12327	Flaring tool	Front turbine case shoulder pin	330	72-51-02
*PWA32346	13037A	Flaring tool	Front turbine case shoulder pin	330	72-53-00
*PWA32346	13037B	Flaring tool	Front turbine case shoulder pin	330	72-53-00
*PWA32346	13046	Flaring tool	Front turbine case shoulder pin	330	
*PWA32386		Gage	1st turbine blade stretch		
*PWA32388	12913	Fixture	1st stage turbine vane twist check	381	72-51-04
*PWA32390		Fixture	Checking 3rd stage turbine vane (twist)		
*PWA32391		Fixture	Checking, 4th stage turbine vane 9twist)		
*PWA32435	12480	Gage	2nd compressor blade wear	457	
*PWA32450	12743	Adapter, oil flow	#4-1/2 & #6 bearing tube oil flow & pressure test	615	72-53-30
*PWA32458	13039	Eye, lifting	Vertical lift, turbine shaft and second stage disk	102	72-53-00
*PWA32458	13147	Knobs, lifting eye	Vertical lift, turbine shaft & 2nd stg disk, 1/2"X20" thrds	102	72-53-00
*PWA32459	11523	Eye	Vertical lift, turbine shaft and 2nd stage disk	102	72-53-00
*PWA32487	12037	Drift	#1 bearing housing	228	72-23-02
*PWA32488	11210A	Adapter	Static balance disk&blade assy	219	72-33-00
*PWA32488	11210B	Adapter	Static bal. disk&blade assy	219	72-33-00
*PWA32488	12340	Adapter, static balance	Static balance disk and blade assembly	317	72-33-00
*PWA32489	13075	Plug set	hold down front compressor static balance 6th stage	319	
*PWA32490	11116	Plug set	Locating static balance	219	72-33-00
*PWA32490	11117	Plug set	locating Static balance	219	72-33-00
*PWA32490	11118	Plug set	Locating static balance	219	72-33-00
*PWA32490	11119	Plug set	Locating static balance	219	72-33-00
*PWA32490	13064	Plug set	Locating static balance (1.0625 locating hght w/.250 should)	319	72-33-00
*PWA32490	13074	Plug, set	Locating static balance (1.0625 locating hght.w/.250 should)	319	72-33-00
*PWA32490	13091	Plug set	Locating static balance (1.0625 locating hght.w/.250 should)	319	72-33-00
*PWA32491	11153	Washer set	Static balance	219	72-33-00



P/N	S/N	Description	Application	Dept	ATA
*PWA32491	11154	Washer set	Static balance	219	72-33-00
*PWA32495	11133A	Screw set	Hold down static balance	219	72-33-00
*PWA32495	11133B	Screw set	Hold down static balance	219	72-33-00
*PWA32495	11134A	Screw set	Hold down static balance	219	72-33-00
*PWA32495	11134B	Screw set	Hold down static balance	219	72-33-00
*PWA32495	11135A	Screw set	Hold down static balance	219	72-33-00
*PWA32495	11135B	Screw set	Hold down static balance	219	72-33-00
*PWA32495	11136A	Screw set	Hold down static balance	219	72-33-00
*PWA32495	11136B	Screw set	Hold down static balance	219	72-33-00
*PWA32500	13161	Riveter	Trim balance, counterweight rivets	622	72-33-00
*PWA32500	13341A	Riveter	Trim balance, front counterweight rivets		72-33-00
*PWA32500	13341B	Riveter	Trim balance, front counterweight rivets		72-33-00
*PWA32500	13341C	Riveter	Trim balance, front counterweight rivets		72-33-00
*PWA32527	12148	Anvil, riveting	1st stage turbine blade rivet (pneumatic)	319	72-53-00
*PWA32536		Fixture	1st stage turbine blade notch grind, convex side		
*PWA32540		Fixture	1st stage turbine blade notch grinding, concave side		
*PWA32551	11664	Riveter	#2 bearing outer race retaining nut rivet	121	
*PWA32572	13162	Riveter	Trim balance turbine counterweight rivets	622	72-00-00
*PWA32625	11190A	Riveter	HPT counterweight rivet	219	72-52-00
*PWA32625	11190B	Riveter	HPT counterweight rivet	219	72-52-00
*PWA32625	13080	Riveter	Compressor and turbine counterweight rivets	319	72-53-0
*PWA32646	12752	Fixture	#4 & #5 bearing inner heatshield	615	72-41-01
*PWA32667	12976	Gage	compressor stator vane L.E. & T.E. angle checking, 7,8,9th st	256	72-36-51
*PWA32668	12977	Gage	Compressor stator vane L.E. & T.E. angle chkg, 10th, 13th stg	256	72-36-54
*PWA32669	12978	Gage	Compr. stator vane L.E. & T.E. angle checking 11 & 12th stage	256	72-36-55
*PWA32696	12910	Gage	1st stage turbine vane airfoil contour repair	381	72-51-04
*PWA32753	12725	Adapter, pressure test	#3 bearing and seal area pressure test	615	72-34-01
*PWA32770		Remover	2nd stage turbine disk straddle counterweight rivet	102	72-53-00
*PWA32876	12417	Fixture, plating	Steel front compressor rear hub N1-CAD plate	614	72-33-35
*PWA32882	12920	Gage, classification	Cradle type, 1st stage turbine vane classification	381	72-51-04
*PWA32883	12921	Master	1st stage turbine vane classification	381	72-51-04
*PWA33037	12367	Anvil, riveting	1st stage compressor air seal riveting	317	72-33-51
*PWA33037	12394	Anvil, riveting	1st stage compressor air sealing riveting	317	72-33-51
*PWA33040	13000	Fixture, plating	Compressor rotor spacer (Ni-Cad)	614	72-36-00
*PWA33050	12927	Gage, classification	1st stage turbine vane classification and twist	381	72-51-04
*PWA33051	12926	Master, classification	1st stage turbine vane classification gage	381	72-51-04

P/N	S/N	Description	Application	Dept	ATA
*PWA33052	12938	Gage, classification	2nd stage turbine vane classification and twist	381	72-53-71
*PWA33053	12939	Master, classification	2nd stage turbine vane classification gage	381	72-53-71
*PWA33066	11908	cover, pressure check	Gearbox #1 bearing scavenge tube boss	520	72-61-00
*PWA33067	11909	Cover, pressure check	Gearbox intermediate bearing pressure tube boss	520	72-61-00
*PWA33068	11910	Cover, pressure check	Gearbox oil cooler outlet sensing boss	520	72-61-00
*PWA33122	12397	Anvil, riveting	1st compressor air sealing ring, rivet	317	72-33-51
*PWA33123	12404	Anvil, riveting	1st compressor air flow duct riveting	317	72-33-51
*PWA33127	13262	Drift & guide	1st compressor hub counterweight	219	72-33-02
*PWA33158	12737A	Fixture	Anti-icing air tube repair pressure test	615	72-09-71
*PWA33158	12737B	Fixture	Anti-icing air tube repair pressure test	615	72-09-71
*PWA33158	12738	Fixture	Anti-icing air tube repair pressure test	615	72-09-71
*PWA33159	12739	Cap, pressure test	Anti-icing tube repair pressure test	615	72-09-71
*PWA33172	12405	Riveter	1st compressor stator positioning plate	317	72-33-51
*PWA33175	12148	Anvil, riveting	3rd stage turbine blade riveting	319	72-53-00
*PWA33183	12915	Master	1st stage turbine blade notch gage	381	72-52-01
*PWA33212	12319	Probe	1st fan blade eddy current crack check	258	72-33-21
*PWA33213	12903	Blade, serialized	Root crack standard & eddy current signal trace	258	72-33-21
*PWA33217	12914	Crack std, eddy current	Eddy current signal trace, crack standard	381	72-52-01
*PWA33217	12929	Crack std, eddy current	Eddy current signal trace, crack standard	381	72-52-01
*PWA33256	11535	Puller	Rear compr front hub,hydraulic	102	72-36-00
*PWA33281	12886	Gage	No. 4-1/2 brg. outer race retaining nut thread, depth/locatn	319	72-52-00
*PWA33286		Ring	No. 4-1/2 bearing outer race retaining nut wrench guide		72-00-52
*PWA33298	12928	Probe, eddy current	1st stage turbine blade	381	72-52-01
*PWA33304	11343A	Eye	RearCompr.driv.Turbine rotor	121	72-00-00
*PWA33304	11343B	Eye	Rear compr.driv.Turbine rotor	121	72-00-00
*PWA33307	11866	Drift	Gearbox de-oiler seal installation	502	72-61-59
*PWA33308	13142A	Puller	Gearbox deoiler seal	520	72-61-59
*PWA33308	13142B	Puller	Gearbox deoiler seal	520	72-61-59
*PWA33314	12316	Gage	1st compressor blade mid-span hardface wear	258	72-33-21
*PWA33326	13205	Bracket, support	Diffuser case support rail stand method	121	72-00-52
*PWA33332	12409	Fixture	Rear compressor front hub Ni-cad plating	614	72-36-42
*PWA33373	12986	Gage, no-go	Chordal width high compressor blade, 7th stage	256	72-36-31
*PWA33373	12987	Gage, no-go	Chordal width high compressor blade 7th stage	256	72-36-31
*PWA33374	12988	Gage, no-go	Chord width, compressor blade, 8th stage	256	72-36-32
*PWA33374	12989	Gage, no-go	Chord width, compressor blade, 8th stage	256	72-36-32
*PWA33374	12991	Gage, no-go	Chord width, compressor blade, 8th stage	256	72-36-32

P/N	S/N	Description	Application	Dept	ATA
*PWA33375	12990	Gage, no-go	Chord width compressor blade, 9th stage	256	72-36-33
*PWA33376	11327	Support	2nd Stage stator	219	72-33-00
*PWA33376	11327A	Support	Second stage stator	102	72-33-00
*PWA33376	11327B	Support	Second stage stator	102	72-33-00
*PWA33376	11327C	Support	Second stage stator	102	72-33-00
*PWA33376	11327D	Support	Second stage stator	102	72-33-00
*PWA33416	12002	Plug, pressure test	Gearbox rear housing, oil pump bore	520	72-61-01
*PWA33418	12004	Plug, pressure test	Gearbox rear husing, oil pressure signal boss	520	72-61-01
*PWA33419	11999	Plug, pressure test	Gearbox rear housing, oil strainer boss	520	72-61-01
*PWA33420	12006	Plug, pressure test	Gearbox rear housing, LP5 and LP6 boss	520	72-61-01
*PWA33421	12003	Adapter, pressure test	Gearbox rear housing, oil temperature cooler boss	520	72-61-01
*PWA33422	12001	Plug, pressure test	Gearbox rear housing, oil transfer holes	520	72-61-01
*PWA33441	12148	Punch	Turbine blade retaining rivets (pneumatic)	319	72-53-00
*PWA33449	12782	Wrench	Turbine exhaust case thermocouple retaining nut	320	72-54-00
*PWA33449	13311	Wrench	Turbine exhaust case thermocouple retaining nut		72-54-00
*PWA33457	11860	Puller, seal	Main oil pump	502	72-61-50
*PWA33457	13127	Puller, seal	main oil pump	520	72-61-50
*PWA33458	11704	Gage, concentricity	#3 hub to 7th disk bore	121	72-36-00
*PWA33474	13372A	Puller	3rd stage turbine disk	102	72-53-00
*PWA33474	13372B	Puller	3rd stage turbine disk	102	72-53-00
*PWA33498	11114	Base, riveting	2nd stg fan blade riveting	219	72-33-00
*PWA33528	12416	Fixture, plating	Platingin compressor disk, 7th stage	614	72-36-41
*PWA33533	11182	Riveter	2nd stg.fan blade riveting	219	72-33-00
*PWA33631	12148	Punch, riveting	3rd stage retaining rivets (pneumatic)	319	72-53-00
*PWA33691		Guide, drill	Turbine nozzle case pin removal		
*PWA33775	12644	Puller, jackscrew	No. 3 bearing air seal	420	72-34-00
*PWA33797	13264	Clamp, pressure check	Fuel nozzle and support assembly	420	
*PWA33799	12313	Gage, no-go	Chordal width, 3rd stage compressor blade	258	72-33-24
*PWA33800	12312	Gage, no-go	Chordal width, 4th stage compressor blade	258	72-33-25
*PWA33801	12311	Gage, no-go	Chordal width, 5th stage compressor blade	258	72-33-26
*PWA33802	12314	Gage, no-go	Chord width, 6th stage compressor blade	528	72-33-27
*PWA33803	12979	Gage, no-go	Chord width 10th stage compressor blade	256	72-36-34
*PWA33804	12980	Gage, no-go	Chord width 11th stage compressor blade	256	72-36-35
*PWA33805	12981	Gage, no-go	Chord width 12th stage compressor blade	256	72-36-36
*PWA33806	12982	Gage, no-go	Chord width 13th stage compressor blade	256	72-36-37
*PWA33807	11478	Puller, knocker	#3 bearing sealing ring	102	72-00-00

P/N	S/N	Description	Application	Dept	ATA
*PWA33809	11470A	Puller, hydraulic	#2 bearing inner race	102	72-00-00
*PWA33809	11470B	Puller, hydraulic	#2 bearing inner race	102	72-00-00
*PWA33812	12983	Gage, no-go	Chord width HPC blade 7th stage	256	72-36-31
*PWA33813	12984	Gage, no-go	Chord width HPC blade 8th stage	256	72-36-32
*PWA33814	12985	Gage, no-go	Chord width HPC blade 9th stage	256	72-36-33
*PWA33839	12763	Fixture, air leakage test	#4 bearing seal assembly	615	72-37-08
*PWA33840	11690	Adapter, vacuum check	#4 & #5 bearing compartment	121	72-00-00
*PWA33861	11680	Gage, concentricity	Bull gear, #3 bearing housing & compr. case flange	121	72-00-00
*PWA33864	12321A	Drift	Pin, #4 bearing seal support assembly	317	72-37-08
*PWA33864	12321B	Drift	Pin, #4 bearing seal support assembly	317	72-37-08
*PWA33926	11318A	Stand, vertical build	Rear compressor	121	72-36-00
*PWA33926	11318B	Stand, vertical build	Rear compressor	121	72-36-00
*PWA33926	11318C	Stand, vertical build	Rear compressor	121	72-36-00
*PWA33926	11318D	Stand, vertical build	Rear compressor	121	72-36-00
*PWA33927	11329	Retainer	Fr.compr.rotor&stator, rear	102	72-33-00
*PWA33932	12894A	Ring, thief	Rear compressor disk nickel plating	614	72-36-00
*PWA33932	12895B	Ring, thief	Rear compressor disk nickel plating	614	72-36-00
*PWA33932	12896C	Ring, thief	Rear compressor disk nickel plating	614	72-36-00
*PWA33932	12897D	Ring, thief	Rear compressor disk nickel plating	614	72-36-00
*PWA33932	12898E	Ring, thief	Rear compressor disk nickel plating	614	72-36-00
*PWA33932	12899F	Ring, thief	Rear compressor disk nickel plating	614	72-36-00
*PWA33933	13012A	Fixture, drill guide	Compressor disk ultrasonic & eddy current inspection	691	
*PWA33933	13012B	Fixture, drill guide	Compressor disk ultrasonic and eddy current inspection	691	
*PWA33933	13280	Fixture, drill guide	Ultrasonic & eddy current insp, C-10 compr disk & 9-10spacer		
*PWA33947	12406	Riveter	1st & 2nd stage airflow duct and inner airseal rings	317	72-33-51
*PWA33957	12802A	Support	Indication probe, turbine disk runout	320	72-53-00
*PWA33957	12802B	Support	Indicator probe, turbine disk runout	320	72-53-00
*PWA33986	13207A	Riveter	Turbine rotor, rear compr. drive, counterweight	219	72-33-00
*PWA33986	13207B	Riveter	Turbine rotor, rear compr. drive, counterweight	219	72-33-00
*PWA33990	12971	Adapter, static balance	Turbine disk and blades	319	72-53-02
*PWA3572	12192	Puller & pusher	Gearbox plug	528	72-61-00
*PWA3790-43-8	13215A	Puller	Borescope plug remover	102	
*PWA3790-43-8	13215B	Puller	Borescope plug remover	102	
*PWA3790-8D	11831	Puller, knocker	Pull seal on main oil pump, gearbox	502	72-61-00
*PWA45005	11199A	Eye, lifting	Front hub & fan assy	219	72-33-00
*PWA45005	11199B	Eye, lifting	Fr.compr,Fr.hub & fan assy	219	72-33-00

P/N	S/N	Description	Application	Dept	ATA
*PWA45005	11199C	Eye, lifting	Fr.compr, fr.hub & fan assy	219	72-33-00
*PWA45005	11199D	Eye, lifting	Fr.compr, fr.hub & fan assy	219	72-33-00
*PWA45005	11199E	Eye, lifting	Fr.compr, Fr.hub & fan assy	219	72-33-00
*PWA45005	11199F	Eye, lifting	Fr.compr, fr.hub & fan assy	219	72-33-00
*PWA45005	11199G	Eye, lifting	Fr.compr, fr.hub & fan assy	219	72-33-00
*PWA45005	11199H	Eye, lifting	Fr.compr, fr.hub & fan assy	219	72-33-00
*PWA45005	11199I	Eye, lifting	Fr.compr, fr.hub & fan assy	219	72-33-00
*PWA45005	11199J	Eye, lifting	Fr.compr, fr.hub & fan assy	219	72-33-00
*PWA45005	11199K	Eye, lifting	Fr.compr, fr.hub & fan assy	219	72-33-00
*PWA45005	11199L	Eye, lifting	Front hub & fan ass'y	219	72-33-00
*PWA45005	11199M	Eye, lifting	Front hub & fan ass'y	219	72-33-00
*PWA45005	13156	Eye, lifting	Front hub (C-1) and fan assembly	220	72-33-00
*PWA45010	11729A	Driver	Knocker, Turbine shaft Coupling lock	102	72-00-53
*PWA45011	11725	Extractor	Retaining ring, front compressor coupling	102	72-00-00
*PWA45011	11731	Extractor	Retaining ring, front compressor coupling	102	72-00-00
*PWA45012	11606	Adapter, front break	Turbine shaft coupling	102	72-00-00
*PWA45012	11622	Adapter, front break	Turbine shaft coupling	121	72-00-00
*PWA45014	13163	Wrench	Break, (hand) front compressor coupling	121	
*PWA45015	11747A	Retainer	Rear front compressor drive turbine rotor and stator	102	72-53-00
*PWA45015	11747B	Retainer	Rear front compressor drive turbine rotor and stator	102	72-53-00
*PWA45015	12881	Retainer	Rear front compressor drive turbine rotor and stator	319	72-53-00
*PWA45019	11611	Puller	#4 1/2 bearing inner race & balance bearing	102	72-53-00
*PWA45019	12950	Puller	#4 1/2 bearing inner race and balance bearing	320	72-53-00
*PWA45021	11576	Puller	#2 bearing seal assy	102	72-00-00
*PWA45023	11624	Wrench	#1 bearing inner race retaining nut	121	72-23-00
*PWA45023	13283	Wrench	No. 1 bearing inner race retaining nut		72-23-00
*PWA45024	11625	Adapter, wrench	#1 bearing inner race retaining nut	121	72-23-00
*PWA45024	13285	Puller, hydraulic	No. 1 bearing inner race and seal seat		72-23-00
*PWA45025	13154A	Puller, hydraulic	No. 1 bearing inner race and seal seat	102	72-23-00
*PWA45025	13154B	Puller, hydraulic	No. 1 bearing inner race and seal seat	102	72-23-00
*PWA45025	13289	Puller, hydraulic	No. 1 bearing inner race and seal seat		72-23-00
*PWA45027	11615	Drift	Balance bearing and radial restraint bearing	121	72-33-00
*PWA45029	11577	Puller	#3 bearing seal ring seal assy & housing assy	102	72-34-00
*PWA45030	11572	Wrench	#3 bearing seal ring retaining nut	102	72-34-00
*PWA45030	12652	Wrench	No. 3 bearing seal ring retaining nut	420	72-34-00
*PWA45031	12662	Adapter, wrench	No. 3 bearing seal ring retaining nut wrench	420	72-34-00

P/N	S/N	Description	Application	Dept	ATA
*PWA45034	12634	Wrencyh	No. 2 bearing inner race retaining nut	420	72-34-20
*PWA45035	12633	Adapter, wrench	No. 2 bearing inner race retaining nut wrench	420	72-34-20
*PWA45036	12673A	Puller	No. 2 bearing inner race	420	72-34-20
*PWA45038	12679	Base	Turbine shaft coupling	420	72-34-00
*PWA45040	12631	Drift	No. 2 bearing inner race, seal plate & seal ring	420	72-34-00
*PWA45040	12681A	Drift	No. 2 bearing inner race, seal plate and seal ring	420	72-34-20
*PWA45040	12681B	Drift	no. 2 bearing inner race, seal plate and seal ring	420	72-34-20
*PWA45042		Puller	No. 2 bearing knife edge seal and seal seat		72-34-20
*PWA45042	12658	Puller	No. 2 bearing knife edge seal & seal seat	420	72-34-20
*PWA45047	11736A	Bracket, lift & trunnion	Lift & trunnion compressor intermediate group	102	72-34-00
*PWA45047	11736B	Bracket, lift & trunnion	Lift & trunnion compressor intermediate group	102	72-34-00
*PWA45050	11717	Eye, lifting	Compressor inlet case	121	72-23-00
*PWA45051	11552	Puller, jackscrew	Front compressor inlet duct	102	72-23-00
*PWA45058	12629	Wrench	No. 3 bearing outer race retaining nut	420	72-34-00
*PWA45059	11616	Holder	#6 bearing seal assembly	121	72-53-00
*PWA45060	11617	Wrench	#6 bearing seal spacer	121	72-53-00
*PWA45062	12868A	Stand, build	Front compressor drive turbine	320	72-53-00
*PWA45062	12868B	Stand, build	Front compressor drive turbine	320	72-53-00
*PWA45070	11776	Adapter, build stand	Front compressor dr.turbine vertical build	102	72-53-00
*PWA45071	11549	Eye, lifting	Fr.compr.dr.turbine shaft rear	102	72-53-00
*PWA45076	12000	Puller	3rd stage turbine air seal	520	72-53-00
*PWA45079	11526A	Pusher	Front compr.from intermed.case	102	72-00-00
*PWA45079	11526B	Pusher	Front compressor from intermediate case	102	72-00-00
*PWA45079	11565	Pusher	Fr.compr. from intermed.case	102	72-00-00
*PWA45079	11730	Pusher	Front compressor from intermediate case	102	72-00-00
*PWA45104	11124	Adapter	Static balance	219	72-33-00
*PWA45104	11125	Adapter	Static balance	219	72-33-00
*PWA45104	11126	Adapter	Static balance	219	72-33-00
*PWA45104	11127	Adapter	Static balance	219	72-33-00
*PWA45104	11128	Adapter	Static balance	219	72-33-00
*PWA45104	11129	Adapter	Static balance	219	72-33-00
*PWA45104	11130	Adapter	Static balance	219	72-33-00
*PWA45104	11131	Adapter	Static balance	219	72-33-00
*PWA45104	11132	Adapter	Static balance	219	72-33-00
*PWA45104	11172	Adapter	Static balance	219	72-33-00
*PWA45104	11173	Adapter	Static balance	219	72-33-00

P/N	S/N	Description	Application	Dept	ATA
*PWA45104	11174	Adapter	Static balance	219	72-33-00
*PWA45104	13071	Adapter, static balance	Various disk and blade assemblies	319	72-33-00
*PWA45106	11489	Puller	#1 Bearing sealing ring	102	72-23-00
*PWA45109	12670	Puller	No. 1 bearing seal assembly	420	72-23-00
*PWA45112	13267	Gage, flush pin	Turbine stator axial position check	320	72-53-00
*PWA45113	12948	locator, spline	Front compressor drive turbine shaft	320	72-53-00
*PWA45117	12880	Fixture, balance	Front compressor drive turbine, rear	319	72-53-00
*PWA45121	11406A	Puller	No.6 bearing inner race	102	72-00-00
*PWA45121	11406B	Puller	#6 bearing inner race	102	72-00-00
*PWA45121	11406C	Puller	#6 bearing inner race	102	72-00-00
*PWA45121	11619	Puller	#6 bearing inner race	121	72-00-00
*PWA45121	12841	Puller	No. 6 bearing inner race	320	72-53-00
*PWA45126	11301	Pusher	No.1 hub & blades 1.5 disk	219	72-33-00
*PWA45126	11560	Pusher	#1 hubs & blades from 1.5 disk	102	72-00-00
*PWA45151	11175	Drift & guide	counterweights, 1st stage hub	219	72-33-00
*PWA45151	11176	Drift & guide	Counterweights, 1st stage hub	219	72-33-00
*PWA45151	11177	Drift & guide	Counterweights, 1st stage hub	219	72-33-00
*PWA45151	11178	Drift & guide	counterweights, 1st stage hub	219	72-33-00
*PWA45151	11179	Drift & guide	counterweights, 1st stage hub	219	72-33-00
*PWA45151	11180	Drift & guide	counterweights, 1st stage hub	219	72-33-00
*PWA45151	11181	Drift & guide	counterweights, 1st stage hub	219	72-33-00
*PWA45186	11648	Retainer, splined	Bushed balance bearing	121	72-33-00
*PWA45187	11211A	Pulley cartridge	Bal.drive fr.compr,rear hub	219	72-33-00
*PWA45187	11211B	Pulley cartridge	Balance drive front compressor rear hub	219	72-33-00
*PWA45192	11626	Wrench	Balance bearing retaining nut	121	72-33-00
*PWA45194	11644	Aligning pins, set	Compressor disk tie bolt hole 6th stage LPC	121	72-33-00
*PWA45202	11250	Spacer	Rear compr.rotor rear bal.brg	219	72-36-00
*PWA45202	13019	Spacer	Rear compressor rotor rear balance bearing	219	72-36-00
*PWA45203	13293	Wrench assembly	Fan to 1.5 stage tierod nuts, torquing		72-33-02
*PWA45210	11749	Retainer	Holding fixture, fr.compr.ass'y and inlet group front	102	72-00-00
*PWA45210	11750	Retainer, fastener	Fastener, fr.compr.ass'y and inlet front group	102	72-00-00
*PWA45210	11755	Retainer, holders	Holding fixtures, fr.compr.ass'y and inlet group front	121	72-00-00
*PWA45210	11757	Retainer, fastener	Fastener, fr.compr.ass'y and inlet group front	121	72-00-00
*PWA45218	12708	Heater	Compressor intermediate case front middle flange	420	72-34-00
*PWA45221	11718	Eye	Lifting, fan exhaust outer duct ass'y, rear	121	72-00-00
*PWA45221	13149	Eye	Lifting, fan exhaust outer duct ass'y, rear	320	72-00-00

P/N	S/N	Description	Application	Dept	ATA
*PWA45222	11264A	Puller, knocker	Front acc'y drive group, Tach N1 cover	102	72-00-00
*PWA45222	11264B	Puller, Knocker	Front acc'y drive grp, Tach N1 cover	102	72-00-00
*PWA45222	11264C	Puller, knocker	Front acc'y drive group, Tach N1 cover	102	72-00-00
*PWA45223	11457	Sling, lifting	Engine assembly (front)	102	72-00-00
*PWA45232	11620	Adapter, wrench	Sweeney SWE-8100 to PWA splined adapter	121	72-52-00
*PWA45232	13286	Adapter, wrench	Sweeney6 SWE-8100 to PWA splined adapter		72-23-00
*PWA45233	11623	Adapter, wrench	Sweeney SWE8100 to PWA wrench	121	72-34-00
*PWA45233	13284	Adapter, wrench	Sweeney SWE8100 to PWA wrench		72-34-00
*PWA45234	11627	Compressor	#1 bearing face seal assembly	121	72-23-00
*PWA45235	11449A	Wrench	Install & remv borescope plug	121	72-34-00
*PWA45235	11449B	Wrench	Install & rmv borescope plug	121	72-34-00
*PWA45237	11618	Puller	#6 bearing seal spacer	121	72-00-00
*PWA45240		Eye, lifting	Fan stage assembly, rear		72-33-02
*PWA45243	12993	Spreader	Front compressor drive turbine spacer	121	72-00-53
*PWA45244	12806	Fixture	Guide, #6 bearing seal and guide assembly	320	72-00-53
*PWA45249	11324	Stand, storage	Fr.compr.inlet & compr.groups	219	72-33-00
*PWA45260		Eye, lift & turn	Front compressor inlet thru diffuser cases	121	72-00-00
*PWA45260	11558	Eye, lift & turn	Fr.compr. inlet thru diffuser	102	72-00-00
*PWA45263	11548A	Bracket, lift & turn	Front compressor inlet group	102	72-00-00
*PWA45263	11548B	Bracket, lift & turn	Front compressor inlet group	102	72-00-00
*PWA45263	11548C	Bracket, lift & turn	Front compressor inlet group	102	72-00-00
*PWA45263	11548D	Bracket, lift & turn	Front compressor inlet group	102	72-00-00
*PWA45265	11364A	Collar, case	Combustion chamber outer case	121	72-00-00
*PWA45265	11364B	Collar, case	Combustion chamber outer case	121	72-00-00
*PWA45265	11364C	Collar, case	Combustion chamber outer case	121	72-00-00
*PWA45268	11443	Adapter, turning	Turn towershaft drive gear	121	72-34-00
*PWA45269	11687	Plug, vacuum check	#4 bearing compartment	121	72-00-00
*PWA45269	11689	Plug, vacuum check	#4 bearing compartment	121	72-00-00
*PWA45270	11693	Adapter, vacuum check	Vacuum check, evacuate #2&#3 bearing compartment	121	72-34-00
*PWA45271	11694	Plug	Vacuum check, #2 & #3 bearing compartment	121	72-34-00
*PWA45280	12678	Base	No. 3 bearing housing and bevel drive gear	420	72-34-00
*PWA45283	11390	Wrench, torque	#6 bearing housing struts	102	72-54-00
*PWA45286	13210	Gage, stretch measurement	Fan exhaust struts	420	72-54-00
*PWA45288	13030	Wrench, torque	Fan exhaust strut socket retaining nut	102	72-54-00
*PWA45289	11588	Wrench, torque	Turbine exhaust strut nut (outer lock)	102	72-54-00



P/N	S/N	Description	Application	Dept	ATA
*PWA45290	11389	Wrench, torque	FanExhStrut ball seat rtngRing	102	72-54-00
*PWA45295	12654	Drift	#3 bearing sealing ring	420	72-34-00
*PWA45296	12684	Fixture, grshaft loading	Gearbox drive gearshaft	420	72-34-00
*PWA45297	12685	Fixture, gear loading	gearbox drive bevel gear	420	72-34-00
*PWA45298	11391	Wrench, torque	Connector or strainer housing	102	72-00-00
*PWA45300	11421	Wrench, torque	#4&5 Oil pressure tee,hex nut	121	72-00-00
*PWA45303	12632	Drift, crimping	No. 3 bearing outer race nut lock	420	72-34-30
*PWA45307	11387A	Bracket, lifting	Front fan case assy	102	72-33-00
*PWA45307	11387B	Bracket, lifting	Front fan case assy	102	72-33-00
*PWA45307	11387C	Bracket, lifting	Front fan case assy	102	72-33-00
*PWA45307	11387D	Bracket, lifting	Front fan case assy	102	72-33-00
*PWA45309	11759A	Adapter, spline alignment	Turbine shaft coupling to front compressor rear hub	121	72-34-00
*PWA45309	11759B	Adapter, spline alignment	Turbine shaft coupling to front compressor rear hub	121	72-34-00
*PWA45314	11215	Stand	Build R&S compr.assy	219	72-33-00
*PWA45317	11217	Chuck, hydraulic	Build stand to rear hub	219	72-33-00
*PWA45322	11214	Support	Fr.compr.4th stg.case&stator	219	72-33-00
*PWA45324	11216	Wrench, spanner	Build stand rear hub lockscrew	219	72-33-00
*PWA45328	11640	Protractor, turn angle	Tierod 6th stage LPC	121	72-33-00
*PWA45329	11646	Wrench & pointer	Tierod torque, 6th stage	121	72-33-00
*PWA45330	11639	Wrench, assembly	3rd to 4th to 5th stage tierod	121	72-33-00
*PWA45332	11645	Aligning pins, set	1.5, 2nd, 3rd stage disk, LPC	121	72-33-00
*PWA45333	11614	Sling, handling	Fan stage install and remove	102	72-33-00
*PWA45334	11630	LPC Torque Fixture			
*PWA45334	11630A	Fixture, torque	1.5 to 2nd to 3rd stage tierod nuts (angle of turn)	121	72-33-00
*PWA45334	11630B	Fixture, torque	1.5 to 2nd to 3rd stage tierod nuts (angle of turn)	121	72-33-00
*PWA45334	11638	Fixture, torque	1.5 to 2nd to 3rd stage tierod nuts (angle of turn)	121	72-33-00
*PWA45340	11252A	Bushing, bearing	Fr.compr.rear balance brg	219	72-33-00
*PWA45340	11252B	Bushing, bearing	Fr.compr.rear balance brg.	219	72-33-00
*PWA45342	11223	Stand, transport	LPC/LPT rotor & stator	219	72-33-00
*PWA45343	11634A	Wrench	Splined retainer nut	121	72-33-00
*PWA45343	11634B	Wrench	Splined retainer nut	121	72-33-00
*PWA45344	11600	Puller	Rear balance bearing bushing	102	72-33-00
*PWA45350		Arbor, balance	Balance splined adapter		72-53-00
*PWA45353	11652	Holder	Splined retainer adapter, LPC	121	72-33-00
*PWA45354		Arbor, balance	Front compressor rear balance brg. bushing		72-53-00
*PWA45357		Base, disassembly	Balance bearing from balance bushing rear LPC		72-33-00

P/N	S/N	Description	Application	Dept	ATA
*PWA45360	11224	Fixture, balance	Fr.compressor front balance	219	72-33-00
*PWA45361	11202	Spacer	Fr. balance brg. LPC	219	72-33-00
*PWA45361	11254	Spacer	Fr.balance bearing LPC	219	72-33-00
*PWA45362	11636	Wrench, spanner	#1 balance bearing retaining nut, LPC	121	72-33-00
*PWA45364	11225	Fixture, lift & trunion	4th-6th stage sub assy rear	219	72-33-00
*PWA45365	11235	fixture, Lift & Trunnion	4th-6th stage sub assy front	219	72-33-00
*PWA45366	11444	Pin	Aligning, duct w/frt.hub lpc	121	72-33-00
*PWA45367		Drift	Cwgt remove from 1st stage hub		72-33-02
*PWA45377	11334	Stand	Trunnion&Dissy.4th-6thStgDisks	102	72-33-00
*PWA45378	13072	Support, legs	2nd and 6th stage disk - LPC	319	72-33-00
*PWA45382	11261	Puller	1.5 stage compressor duct	219	72-33-00
*PWA45383	12058	Puller, knocker	Front compressor vanes	228	72-33-00
*PWA45386	11653	Wrench	Chuck adapter LPC	121	72-33-00
*PWA45390	11194	Riveter, hand pliers	5thStg LPC counterweight rivet	219	72-33-00
*PWA45391	11635	Holder	Splined retainer for torquing LPC	121	72-33-00
*PWA45394	11643	Aligning pins, set	5th stage disk to rear hub, LPC	121	72-33-00
*PWA45398		Bracket, lifting	Fan exhaust outer rear duct assembly (transition)		72-00-55
*PWA45399	11642	Plate, spacer	Assemble 2nd to 3rd stage disk LPC	121	72-33-00
*PWA45406	12762	Fixture, air leakage test	#2 bearing seal assembly	615	72-34-26
*PWA45407	12764	Fixture, air leakage test	#3 bearing seal assembly	615	72-34-38
*PWA45410	12765	Fixture, air leakage test	#1 bearing seal assembly	615	72-23-10
*PWA45412	11561	Spacer	Fanstage removal (vertical)	102	72-33-00
*PWA45413	12869A	Fixture, build & balance	Low turbine rotor, front	320	72-53-00
*PWA45413	12869B	Fixture, build & balance	Low turbine rotor, front	320	72-53-00
*PWA45416	12969	Adapter, static balance	Static balance turbine air seals	319	72-53-00
*PWA45417	12952	Heater	Turbine shaft and 3rd stage disk rear flanges	320	72-53-00
*PWA45424		Ring	Graduated, No. 2 bearing contact angle		72-34-24
*PWA45425	13227	Fuel nozzle crimp tool			
*PWA45427	12709	Heater, compressor case	Front and rear outer flanges I.D.	420	72-34-00
*PWA45429	12959	Adapter, lifting	2nd stage airseal ring and vane clusters	320	72-53-0
*PWA45431	11769A	Plate	Lift & trunnion engine section, fr.turbine thru inlet case	121	72-00-00
*PWA45431	11769B	Plate	Lift & trunnion engine section, fr.turbine thru inlet case	121	72-00-00
*PWA45431	11769C	Plate	Lift & trunnion engine section, fr.turbine thru inlet case	121	72-00-00
*PWA45431	11769D	Plate	Lift & trunnion engine section, fr.turbine thru inlet case	121	72-00-00
*PWA45431	11769E	Plate	Lift & trunnion engine section, fr.turb. thru inlet case	121	72-00-00
*PWA45432	12828	Eye, lifting	3rd and 4th stage turbine	320	72-53-00

P/N	S/N	Description	Application	Dept	ATA
*PWA45433	12943	Press, hydraulic	Low turbine shaft, disks & hub assembly	320	72-53-00
*PWA45435	12686A	Thimble	Turbine 2nd, 3rd, 4th disks and hub press	320	72-53-00
*PWA45435	12686B	Thimble	Turbine 2nd, 3rd, 4th disks & hub press	420	72-53-00
*PWA45435	12686C	Thimble	Turbine 2nd, 3rd, 4th disks & hub press	420	72-53-00
*PWA45435	12686D	Thimble	Turbine 2nd, 3rd, 4th disks & hub press	420	72-53-00
*PWA45435	12720A	Thimble	Turbine 2nd, 3rd, 4th disks and hub press	320	72-53-00
*PWA45435	12720B	Thimble	Turbine 2nd, 3rd & 4th disks and hub press	320	72-53-00
*PWA45435	12720C	Thimble	Turbine 2nd, 3rd & 4th disks and hub press	320	72-53-00
*PWA45435	12945	Thimble	Turbine, 3rd and 4th stage disks	320	72-53-00
*PWA45436	12866	Tierod, work	2nd stage turbine disk adapt to press	320	72-53-00
*PWA45436	13041	Tierod, work	2nd stage turbine disk adapt to press	320	72-53-00
*PWA45437	12941	Spacer	3rd stage turbine disk press	320	72-53-00
*PWA45438	12940	Spacer	4th stage turbine disk press	320	72-53-00
*PWA4544	11492	Puller	#6 Balance bearing & seal spacers	102	72-53-00
*PWA45441	12838	Gage	Low turbine rotor tierod stretch (Manual)	320	72-53-00
*PWA45444	11407	Puller	#6 Balance brg & seal spacers	102	72-53-00
*PWA45448	11516	Puller	4th stage turbine air seal	102	72-53-04
*PWA45449	12923	Gage, classification	1st stage turbine vane, blocked area	381	72-51-04
*PWA45450	12922	Master, classification	1st stage turbine vane , blocked area	381	72-51-04
*PWA45481	12953	Heater, assemble	8th thru 13th stage disks	320	72-36-00
*PWA45483	11226	Fixture, hand peening	Front compressor bladlocks	219	72-33-00
*PWA45484	12799	Retainer	5th stage tierod nuts	220	72-33-00
*PWA45486	13132	Lock	Main accessory drive gear	520	72-61-00
*PWA45490	12975	Gage, vane angle checking	Compressor stator 4th 7 5th stage, L.E. & T.E.	256	72-33-56
*PWA45492		Screw set, hold down	Static balance (.3125X18X1.5)		72-53-00
*PWA45493		Plugs, hold down	Static balance (.75X1.383X.375-16thd)		72-33-04
*PWA45493	11137	Plugs, hold down	Static balance	219	72-33-00
*PWA45493	11138	Plugs, hold down	Static balance	219	72-33-00
*PWA45493	11139	Plugs, hold down	Static balance	219	72-33-00
*PWA45493	11140	Plugs, hold down	Static balance	219	72-33-00
*PWA45493	13088	Plugs, hold down	Static balance (.75X1.383X.375-16thd)	319	72-53-04
*PWA45494	11159	Washer, hold down	Static balance	219	72-33-00
*PWA45494	11160	Washer, hold down	Static balance	219	72-33-00
*PWA45494	11161	Washer, hold down	Static balance	219	72-33-00
*PWA45494	11162	Washer, hold down	Static balance	219	72-33-00

P/N	S/N	Description	Application	Dept	ATA
*PWA45494	11163	Washer, hold down	Static balance	219	72-33-00
*PWA45494	11164	Washer, hold down	Static balance	219	72-33-00
*PWA45495		Plugs, hold down	Static balance 9.750DX2.7475X.375-16thd)		72-53-02
*PWA45495	13087	Plugs, hold down	Static balance (.7500X2.7475X.376-16thd0	319	72-53-02
*PWA45496	11149	Plugs, hold down	Static balance	219	72-33-00
*PWA45496	11150	Plugs, hold down	Static balance	219	72-33-00
*PWA45496	11151	Plugs, hold down	Static balance	219	72-33-00
*PWA45496	11152	Plugs, hold down	Static balance	219	72-33-00
*PWA45496	11155	Plugs, hold down	Static balance	219	72-33-00
*PWA45496	11156	Plugs, hold down	Static balance	219	72-33-00
*PWA45496	11157	Plugs, hold down	Static balance	219	72-33-00
*PWA45496	11158	Plugs, hold down	Static balance	219	72-33-00
*PWA45496	13089	Plugs, hold down	Set, static balance (.750 D.X 1.085X.375 I.D.)	319	72-53-03
*PWA45499	12745	Fixture, oil flow	1st stage bearing and seal nozzles	615	72-21-01
*PWA45501	11633	Crimper	Fan tierod keywasher tab bending	121	72-33-00
*PWA45502	11641	Spacer, ring	Front compressor rear hub work bolts	121	72-33-00
*PWA45506	11692	Adapter, vacuum check	#4 & #5 bearing compartment	121	72-00-00
*PWA45514	12732A	Plug, air test	Front compressor inlet case pressure, scav. brether fitting	615	72-23-0
*PWA45514	12732B	Plug, air test	Front compressor inlet case pressure, scav. breather fitting	615	72-23-00
*PWA45515	11255A	Bearing	Dummy brg, radial restraint	219	72-00-00
*PWA45515	11255B	Bearing	Dummy brg, radial restraint	219	72-00-00
*PWA45515	11255D	Bearing	Dummy brg, radial restraint	219	72-00-00
*PWA45517	11988	Puller	Gearbox outer drive shaft	520	72-61-00
*PWA45520	11726A	Pusher/Puller	Rmv & Install front compressor drive turbine	102	72-00-53
*PWA45520	11726B	Pusher/Puller	Remove and install front compressor drive turbine	102	72-00--5
*PWA45522	12740	Fixture, oil flow	#4-1/2 & #6 Bearing and seal jets	615	72-54-25
*PWA45529	11415A	Puller, hydraulic	#4 bearing seal	102	72-36-00
*PWA45529	11415B	Puller, hydraulic	#4 Bearing seal	102	72-36-00
*PWA45529	11415C	Puller, hydraulic	#4 bearing seal	102	72-36-00
*PWA45529	11415D	Puller, hydraulic	#4 Bearing seal	102	72-36-00
*PWA45532	11562	Adapter, front hub	Fr.compr.rotor anti-rotation	102	72-33-00
*PWA45532	13290	Adapter, front hub	Front compressor rotor anti rotation		72-33-02
*PWA45533	11903A	Connector, pressure check	Gearbox towershaft coupling drive pad	520	72-61-00
*PWA45533	11903B	Connector, pressure check	Gearbox towershaft coupling drive pad	520	72-61-00

P/N	S/N	Description	Application	Dept	ATA
*PWA45534		Plug, pressure check	Gearbox impeller gearshaft	561	72-61-00
*PWA45537	12744	Sleeve, oil flow	#4-1/2 & #6 bearing tube assembly	615	72-53-30
*PWA45538	12759A	Sleeve, pressure check	#4-1/2 & #6 Bearing tube assembly	615	72-53-30
*PWA45538	12759B	Sleeve, pressure check	#4-1/2 & #6 bearing tube assembly	615	72-53-30
*PWA45540	13129	Cover, pressure check	Gearbox oil strainerr pad	520	72-61-00
*PWA45542	11920	Cover ass'y, press.check	Gearbox oil tank transfer sleeves	520	72-61-00
*PWA45542	11985	Cover assy,Pressure check	Gearbox oil tank transfer sleeves	520	72-61-00
*PWA45543	11403	Jackscrew set of 3	#2 brg. housing removal	121	72-34-00
*PWA45543	11404	Jackscrew set of 3	#2 brg. housing removal	121	72-34-00
*PWA45543	11405	Jackscrew set of 3	#2 brg. housing removal	121	72-34-00
*PWA45553		Gage,tilt&outer foot wear	3rd stage turbine stator vane cluster assembly		72-53-72
*PWA45565	11557	Puller, jackscrew	Compressor disk 1.5 stage	102	72-33-00
*PWA45566	11553	Puller, jackscrew	2nd&3rd stage compressor disks	102	72-33-00
*PWA45575	11803	Puller, hydraulic	Compressor, 5th & 6th stage disks	102	72-33-00
*PWA45579	12821	Holder, anti-rotation	Front compressor drive turbine	320	72-53-00
*PWA45587	11555	Plate jackscrew bucking	Compressor 1.5 stage	102	72-33-00
*PWA45592	12320	Master, gage	1st stage fan blade cross shroud	258	72-33-21
*PWA45604	12716	Adapter, pressure test	Intermediate case, #2 and #3 bearing drain tube	615	72-34-01
*PWA45606	12712	Adapter, pressure test	Intermediate case #3 bearing end	615	72-34-01
*PWA45606	12768	Adapter, pressure test	Intermediate case #3 bearing end	615	72-34-01
*PWA45609	12719	Adapter, pressure test	intermediate case air bleed boss, air inlet	615	72-34-01
*PWA45615	12814	Puller, jackscrew	3rd & 4th stage turbine disks	320	72-53-00
*PWA45618	11758A	Adapter, lift & trunnion	Compressor inlet through intermediate group	121	72-34-00
*PWA45618	11758B	Adapter, lift & trunnion	Compressor inlet through intermediate group	121	72-34-00
*PWA45621	12410	Plate, plating	Electrical contact, turbine hub	614	72-53-19
*PWA45628	12659	Adapter, turning	Turn - towershaft drive gear	420	72-34-00
*PWA45670	12909	Gage, stretch	1st stage turbine blade	381	72-52-01
*PWA45673	13024	Wrench, torque	Nut, turbine exhaust case strut	320	72-54-00
*PWA45683	11609	Eye, lift & trunnion	1st stage rotor, front compressor	102	72-33-00
*pwa45685		Fixture	Disassy.	120	72-54-00
*PWA45713		Master, zero set	1st stage turbine blade (convex shroud repair)		72-52-01
*PWA45719	13174A	Holder, disassemble	Fuel nozzle nut lock	616	
*PWA45719	13174B	Holder, disassemble	Fuel nozzle nut lock	616	
*PWA45766-1	12307	Gage, no-go	Chordal width 1.5 stage compressor blade	258	72-33-22
*PWA45766-2	12306	Gage, no-go	Chordal width 2 stage compressor blade	258	72-33-23

P/N	S/N	Description	Application	Dept	ATA
*PWA45773		Gage,spoiler displacement	First stage turbine blade inspection		72-52-01
*PWA45786	12887	Pusher	No. 6 hub heatshield	319	72-53-19
*PWA45787	12963	Drift	No. 6 hub heatshield	320	72-53-19
*PWA45819	11647	Fixture, grind	Compressor stator support rubstrip	121	72-34-00
*PWA45833	12318	Probe, eddy current	LPC 1st stage compressor blade	258	72-33-21
*PWA45838	12370	Puller, hydraulic	No. 1 bearing lab seal from no.1 hub	317	72-33-31
*PWA45841		Gage, stretch & twist	2nd stage turbine blade		72-53-11
*PWA45844	12932	Gage, stretch	1st stage turbine blade	381	72-52-01
*PWA45849	11573A	Adapter, anti-rotation	#3 bearing sealing ring	102	72-34-00
*PWA45849	11573B	Adapter, anti-rotation	#3 bearing sealing ring	102	72-34-00
*PWA45849	11573C	Adapter, anti-rotation	#3 bearing sealing ring	102	72-34-00
*PWA45849	12653	Adapter, anti-rotation	No. 3 bearing sealing ring	420	72-34-00
*PWA45849	12656	Adapter, Anti-rotation	No. 3 bearing sealing ring	420	72-34-00
*PWA45855	12925	Gage, classification	1st stage turbine vane (Compair blocked area)	381	72-51-04
*PWA45856	12924	master,classification	1st stage turbine vane (Compair blocked area)	381	72-51-04
*PWA45858	12968	Clamp, pressure	Fuel nozzle and support assembly	420	72-37-00
*PWA45858	13265	Clamp, pressure test	Fuel nozzle and support assembly	420	72-00-37
*PWA45866-1	11145	Plugs, hold down	Static balance rear hub	219	72-33-00
*PWA45866-1	11146	Plugs, hold down	Static balance rear hub	219	72-33-00
*PWA45866-1	11147	Plugs, hold down	Static balance rear hub	219	72-33-00
*PWA45866-1	11148	Plugs, hold down	Static balance rear hub	219	72-33-00
*PWA45866-2	11141	Plugs, hold down	Static balance 6th stg rotor	219	72-33-00
*PWA45866-2	11142	Plugs, hold down	Static balance 6th stg lo comp	219	72-33-00
*PWA45866-2	11143	Plugs, hold down	Static balance 6th stg rotor	219	72-33-00
*PWA45866-2	11144	Plugs, hold down	Static balance 6th stage rotor	219	72-33-00
*PWA45869	11187	Riveter	Counterweight, 1st stg airseal	219	72-33-00
*PWA45883	12382A	Puller	Rear compressor case from intermediate case	317	72-34-01
*PWA45883	12382B	Puller	Rear compressor case from intermediate case	317	72-34-01
*PWA45884	12707	Fixture, assembly	Rear case to intermediate case	420	72-34-01
*PWA45901	12348	Yoke	Compressor case #2 bearing support clinch nut flaring	317	72-34-01
*PWA45901	12351	Yoke	Compressor case #2 bearing support clinch nut flaring	317	72-34-01
*PWA45904	12364	Bar, bucking	compressor stator support to intermediate case riveting	317	72-34-01
*PWA45906	12353	yoke	Compressor intermediate case clinch nuts, flaring	317	72-34-01
*PWA45936		Gage, stretch	1st stage turbine blade		72-52-01
*PWA45938	12285	Standard, eddy current	8th stage blade root	258	72-36-32

P/N	S/N	Description	Application	Dept	ATA
*PWA45942	12317	Standard, crack	LPC, 1st stage blade, eddy current	258	72-33-21
*PWA45944	13053	Puller, hydraulic	Low pressure turbine hub assembly	102	72-53-00
*PWA45956	12362	Puller	Intermediate case 5th stage stator support	317	72-34-01
*PWA45961	12639	Adapter, heating	No.2 and No.3 bearing housing support	420	72-34-00
*PWA45963	12352	Riveter jaw	Turbine stator inner support assembly	317	72-51-01
*PWA45963	12996A	Riveter, pneumatic	Turbine stator inner support assembly	417	72-51-01
*PWA45963	12996B	Riveter, pneumatic	Turbine stator inner support assembly	417	72-51-01
*PWA45963	12997A	Riveter, pneumatic	Turbine stator inner support assembly	417	72-51-01
*PWA45963	12997B	Riveter, pneumatic	Turbine stator inner support assembly	417	72-51-01
*PWA45963	12998A	Riveter, pneumatic	Turbine stator inner support assembly	417	72-51-01
*PWA45963	12998B	Riveter, pneumatic	Turbine stator inner support assembly	417	72-51-01
*PWA45990	11651	Puller, jackscrew	#1 balance bearing & balance bearing spacer	121	72-33-00
*PWA45992		Gage, inspection	1st stage turbine blade, cross notch/cross shroud		72-52-01
*PWA45992	12934	Gage, inspection	1st stage turbine blade, cross notch/cross shroud	381	72-52-01
*PWA45993	11242	Support, axial stability	R.fan case-2ndStg compr.case	219	72-33-00
*PWA46000		Flaring tool, pin	Turbine stator support assembly		
*PWA46003	11559	Puller, knocker	Fr.cwt support, rear compress	102	72-36-00
*PWA46008		Gage, stretch & twist	3rd stage turbine blade		72-53-12
*PWA46011		Fixture, twist check	1st stage turbine vane (convex)		72-51-04
*PWA46013		Gage, stretch & twist	2nd stage turbine blade		72-53-11
*PWA46014	11342	Eye, lifting	Rear compr.driv.Turbine rotor	121	72-00-00
*PWA46015	11456	Sling	R.compr.driv.Turb.rotor/Horiz	102	72-00-00
*PWA46016		Ring, guide	HPT coupling nut & 4-1/2 bearing retaining nut wrenches		72-00-52
*PWA46054	13196	Fixture, drill	J1 flange, turbine & combustion chamber outer duct		72- -
*PWA46055	13197	Fixture, drill	J2 flange, turbine & combustion chamber outer duct		
*PWA46056		Fixture, stretch	Fan tierods, mechanical method	102	72-33-00
*PWA46065	13034	Puller, hydraulic	Hydraulic T-4 disk puller	320	72-53-00
*PWA46078	13175	Mask, flame spray	4th stage turbine blade root	102	72-53-13
*PWA46103	11836	Puller	Starter drive shaftgear, seal (de-oiler pad)	502	72-61-59
*PWA46112	12286	Probe, eddy current	Blade root HPC 8th and 9th stage	258	72-36-33
*PWA46127	12284	Standard, crack	Eddy current, blade root HPC 9th stage, dummy blade	258	72-36-33
*PWA46155	12584	Probe, ultrasonic insp	#4 & 5 bearing heatshield skirt weld	441	
*PWA46156	13198	Fixture,weld & heat treat	No.4 bearing housing heat shield and elbow	102	72-37-07
*PWA46162	11991	Fixture, test	Pressure relief valve	561	72-61-54
*PWA46170	13056	Wrench, coupling nut	Fuel manifold, diffuser case	420	72-37-00
*PWA46171	13057	Adapter, coupling nut	Fuel manifold, diffuser case	420	72-37-00

P/N	S/N	Description	Application	Dept	ATA
*PWA46179	13001A	Probe, eddy current	Hub rear compressor spline inspection	256	
*PWA46179	13001B	Probe, eddy current	Hub rear compressor spline inspection	256	
*PWA46180	13002	Standard, crack eddy	Current-hub rear compressor spline inspection	256	
*PWA46183	13356	Probe, eddy current	Outer combustion chamber case rear flange		
*PWA46195	13047	Adapter, torque	Fuel nozzle nut	616	
*PWA46195	13051	Adapter, torque	Fuel nozzle nut	616	
*PWA46199	13232	Puller, hydraulic	3rd & 4th stage turbine airseal from disk	320	72-53-03
*PWA46232	11425	Wrench, coupling nut	#2 Fuel nozzle location	121	72-37-00
*PWA46253	12966	Fixture, plating	Front compressor rear hub, Ni-cad	614	72-33-35
*PWA46258	13013	Fixture, drill guide	7-8 and 8-9 spacer, eddy current inspection	691	
*PWA46258	13281	Fixture, drill guide	7-8 and 8-9 spacer, eddy current inspection		
*PWA46267		Gage, inspection	1st stg.turbine blade,cross notch/shroud-reduced tang.width		72-52-01
*PWA46270	13389A	Puller	#4 bearing inner races front & rear halves	102	72-00-37
*PWA46277	12756	Fixture, air flow	#5 bearing seal assembly	615	72-52-11
*PWA46281		Gage, no-go	2nd stage turbine disk Z plane slot wear		72-53-16
*PWA46281	11957	Gage, no go	2nd stage turbine disk Z plane slot wear	352	72-53-00
*PWA46282		Gage, no-go	3rd stage turbine disk Z plane slot wear		72-53-17
*PWA46282	11958	Gage, no go	3rd stage turbine disk z plane slot wear	352	72-53-17
*PWA46283		Gage, no-go	4th stage turbine disk Z plane slot wear		72-53-18
*PWA46283	11959	Gage, no go	4th stage turbine disk z plane slot wear	352	72-53-18
*PWA46284	12655	Pusher, hydraulic	No. 3 bearing package	420	72-34-00
*PWA46293	12301	Tank & traversing machine	2nd stage fan blade, ultrasonic inspection	258	72-33-23
*PWA46296	11628	Pusher, hydraulic	#1 bearing inner race	121	72-23-00
*PWA46296	13208	Pusher, hydraulic	No. 1 bearing inner race	121	72-23-00
*PWA46296	13292	Pusher, hydraulic	No. 1 bearing inner race		72-23-00
*PWA46311	11752A	Sling, cantilever	Front compressor or low turbine retainer (12 o'clock)	102	72-00-00
*PWA46311	11752B	Sling, cantilever	Front compressor or low turbine retainer (12 o'clock)	102	72-00-00
*PWA46311	12965	Sling, cantilever	Front compressor or low turbine retainer (12 o'clock)	320	72-53-00
*PWA46317		Fixture, locating	Fan blade chordal width, leading & trailing edge		
*PWA46320	11188	Riveter, hand	2nd/4thStg counterwght rivet	219	72-53-00
*PWA46320	13081	Riveter, hand	LPT 2nd and 4th stage counterweight rivet		72-53-00
*PWA46322	11541	Puller	#5 bearing seal and spacer	102	
*PWA46325	13318	Probe, ultrasonic insp	Outer combustion chamber case		
*PWA46326	13319	Standard, crack	Ultrasonic inspection, outer combustion chamber case		72-00-00
*PWA46328	12380	Fixture, holding	2nd stage turbine vane anti-rotation pin replacement	317	72-53-56



P/N	S/N	Description	Application	Dept	ATA
*PWA46329	12381	Fixture, holding	3rd stage turbine vane anti-rotation pin replacement	317	72-53-57
*PWA46330	12377	Fixture, holding	4th stage turbine vane anit-rotation pin replacement	317	72-53-58
*PWA46370	13015	Gage, shroud	2nd stage turbine rotor blade	691	72-53-11
*PWA46373	13016	Gage, shroud	3rd stage turbine rotor blade	691	72-53-12
*PWA46376	13014	Gage, shroud	4th stage turbine rotor shroud	691	
*PWA46382	13160	Puller	No. 5 bearing seal puller	102	72-52-00
*PWA46398	12951	Heater, calrod	Front compressor drive turbine hub assembly	320	72-53-00
*PWA46418	13020	Heater	#4 bearing seal ring or housing assembly	420	72-37-07
*PWA46443	13206A	Sling	Strongback,44.75in. span 1,900 lb. capacity	102	
*PWA46443	13206B	Sling	Strongback, 44.75in. span, 1,900 lb. capacity	220	
*PWA46443	13206C	Sling	Strongback, 44.75in. span, 1,900 lb. capacity	319	
*PWA47001	11515	Eye, lifting	3rd 7 4th stage turbine disk and blade	102	72-53-00
*PWA47001	12827	Eye, lifting	3rd and 4th stage turbine disk and blade	320	72-53-00
*PWA47008		Base, installation	#6 hub heatshield install		72-53-19
*PWA47009	12962	Drift	#6 hub heatshield	320	72-53-19
*PWA47012	12956	Adapter, lift & load	2nd stage turbine vanes	320	72-53-00
*PWA47013	12957	Adapter, lift & load	3rd stage turbine nozzle guide vanes	320	72-53-00
*PWA47014	12958	Adapter, lift & load	4th stage turbine nozzle guide vanes	320	72-53-00
*PWA47015	11567A	Puller, hydraulic	4th turbine disk from low turbine	102	72-53-00
*PWA47015	11567B	Puller, hydraulic	4th turbine disk from low turbine	102	72-53-00
*PWA47015	11568A	Puller, hydraulic	4th turbine disk from low turbine	102	72-53-00
*PWA47015	11568B	Puller, hydraulic	4th turbine disk from low turbine	102	72-53-00
*PWA47016	11525A	Puller, knocker	3rd turbine disk from low turbine shaft	102	72-53-00
*PWA47016	11525B	Puller, knocker	3rd turbine disk from low turbine shaft	102	72-53-00
*PWA47024	11527	Eye,lifting	RearCompr front hub & blades	102	72-36-00
*PWA47024	11673	Eye, lifting	Rear compressor front hub & blades	121	72-36-00
*PWA47026	11538	Puller, hydraulic	Rear compressor front hub	102	72-36-00
*PWA47033		Fixture, checking	1st sta ge turbine blade lean		72-52-01
*PWA47036	11546	Puller, hydraulic	#5 brg inner race & seal plate	102	72-52-00
*PWA47044	12369	Riveter	2nd stage compressor stator airseal rivets	317	72-33-53
*PWA47051	12148	Anvil, riveting	2nd & 4th stage turbine blade riveting	319	72-53-00
*PWA47056	13058	Puller, knocker	No. 3 bearing sealing ring	121	72-00-34
*PWA47062	11467	Pusher	#2 Brg.outer race & balls	102	72-00-00
*PWA47071	12005	Plug, pressure test	Gearbox rear housing, oil press relief valve boss	520	72-61-01
*PWA47094	12919	Gage, classification	1st stage turbine vane (blocked area)	381	72-51-04
*PWA47095	12918	Master, classification	1st stage trubine vane (blocked area)	381	72-51-04

P/N	S/N	Description	Application	Dept	ATA
*PWA47096		Sling, lift & trunnion	4th turbine disk and blade	102	72-53-00
*PWA47097		Eye, lifting	4th stage turbine disk and blade assembly	102	72-53-04
*PWA47098	11524A	Puller, knocker	4th turbine disk	102	72-53-00
*PWA47098	11524B	Puller, knocker	4th turbine disk	102	72-53-00
*PWA47108	11503	Pusher	1st stg turb.disk from shaft	121	72-52-00
*PWA47109	11570A	Puller, hydraulic	4th turbine disk from low turbine	102	72-53-00
*PWA47109	11570B	Puller, hydraulic	4th turbine disk from low turbine	102	72-53-00
*PWA47117		Gage, stretch & twist	3rd stage turbine blade		72-53-12
*PWA47118	12937	Fixture, checking	3rd stage turbine blade, cross notch	381	72-53-12
*PWA47150	12839	Clamp	No. 6 bearing seals and spacer	319	72-53-00
*PWA47158		Fixture, Inspect	1st stage turbine blade, pretwist		72-52-01
*PWA47171		Gage, no-go	1st stage turbine disk, Z plane slot wear		72-53-00
*PWA47200	12565	Fixture, holding	Machine low turbine shaft	328	72-53-20
*PWA47201		Gage, flush pin	LPT shaft oil hole O.D. chamfer check (.140-.155 Dia)		72-53-00
*PWA47268	186	Crack Standard		623	
*PWA47278	12933	Gage, inspect	1st stage turbine blade, cross notch & reduced width	381	72-52-01
*PWA47283	13052	Plug	Inlet case lab seal housing	615	72-23-00
*PWA47284	12378	Fixture, holding	2nd stage turbine vane anti-rotation pin replacement	317	72-53-56
*PWA47285	12376	Fixture, holding	3rd stage turbine vane anti-rotation pin replacement	317	72-53-57
*PWA47286	12379	Fixture, holding	4th stage turbine vane anti-rotation pin replacement	317	72-53-58
*PWA47303	12755	Fixture, airflow	HPT, #5 bearing seal assembly	615	72-52-11
*pwa47603		Press fixture	#3 BRG.STACK		72-34-30
*PWA47754		Fixture	2nd & 3rd stage disk low compressor	219	72-33-00
*PWA47908		Fixture, stretch	LPC front tierods, mechanical	102	72-33-00
*PWA47929	13031A	Probe	LPC, No.1 hub, eddy current inspection	282	72-33-31
*PWA47929	13031B	Probe	LPC, No. 1 hub eddy current inspection	282	72-33-31
*PWA47930	13040	Standard	LPC, No. 1 hub, eddy current inspection	282	72-33-31
*PWA49091	13351	controller, power handle	Engine assy, HPC, blade blending		
*PWA49092	13350	Pedal, foot	Eng. Assy, HPC, power handle, blade blending		
*PWA6320	12857A	Fixture, concentricity	Rotor assemblies	320	72-53-00
*PWA6320	13250	Fixture, concentricity	Rotor assemblies, run-out check (optional)	319	72-36-00
*PWA6510	11882	Drift	Oil suction pump intermediate drive bearing rear liner	502	72-37-88
*PWA6580	12374A	Sling, lifting	Removal, installation front & rear compressor rotor assy	121	72-00-00
*PWA6580	12878	Sling, lifting	For use in hoisting various engine parts, 1000 lb.limit	121	
*PWA6660	12479	Base, disassembly	Oil suction pump intermed.driveshaft & N2 Tach dr.gear brg	457	72-37-88
*PWA6959	13103	Drift	Tachometer shaft gear bearing housing	520	72-21-01

P/N	S/N	Description	Application	Dept	ATA
*PWA6960	11879	Drift	Tachometer shaft gear bearing housing	502	72-21-01
*PWA7026	13107	Drift	Tachometer shaft gear plug	520	72-21-03
*PWA7147	11290	Drift	N1 Tachometer drive bearing	219	72-21-00
*PWA7260	13106	Drift	No. 6 bearing pump idler shaft	520	72-54-25
*PWA7285	13140	Unknown	Not in P&W numerical index, unused tool, gearbox cell	520	
*PWA75134	11722	Hook, safety	Lift eye for hoist, 6000 lb. capacity, general use	121	72-00-00
*PWA75135	13261	Hook, safety	Engine component lifts, hoists 1600 lb. capacity	102	
*PWA76156	13054	Adapter, lift & turn	Lift and turn (2-3/4 in. spools)	102	72-34-00
*PWA77036	11608	Puller, hydraulic	#1 bearing inner race and seal seat	102	72-23-00
*PWA77039	11629	Puller, hydraulic	Engine assy, remove #1 bearing outer race and rollers	121	72-23-00
*PWA77438	13167	Puller	HPT, No. 5 bearing spacer and airseal	319	72-52-00
*PWA8170	11203A	Housing	Bal & concentr.chk-low compr	219	72-33-00
*PWA8170-3		Housing	Balance and concentricity check, low compressor	320	72-33-00
*PWA8180-27	13213	Brg, balance & conc.check	Fr.compr.driv.shaft fr.balance, Rear compr.driv.turbine	320	72-52-00
*PWA8185	12482	Base, disassembly	Engine assy, support split plates	457	72-34-30
*PWA8460	11880	Drift	n1 tachometer drive gearshaft	502	72-21-00
*PWA8536		Gage	Ball bearing contact angle		72-34-24
*PWA8640	11571	Adapter, wrench	Coupling, splined drive of Sweeney #8100	102	72-00-00
*PWA8641		Adapter, wrench	Spline drive of Sweeney 8100 to PWA hex wrenches		72-00-52
*PWA8642	11605	Adapter, wrench	Sweeney powerwrench SWE#8100 to PWA wrenches	102	72-34-00
*PWA8645	11574	Adapter, wrench	Sweeney powerwrench #8100 to PWA wrenches	102	72-00-00
*PWA8645	12657	Adapter, wrench	Sweeney powerwrench #8100 to PWA wrenches	420	72-34-00
*PWA9503	11283A	Bar, alignment	Hubs & spacer alignment	219	72-36-00
*PWA9503	11283B	Bar, alignment	Hubs & spacer alignment	219	72-36-00
*PWA9503	11283C	Bar, alignment	Hubs & spacer alignment	219	72-36-00
*PWA9503	11283D	Bar, alignment	Hubs & spacer alignment	219	72-36-00
*PWA9508	13115	Drift	Oil pump body cover assembly shaft	520	72-61-50
*PWA9519	11834	Puller	N2 Tachometer drive seal husing	502	72-61-44
*PWA9531	11885	Drift	No.4 & 5 scavenge pump assy ball bearings	502	72-37-88
*PWA9532	13105	Drift	No. 4 & 5 scavenge pumpassy bal bearing, gearshafts (dissy)	520	72-37-88
*PWA9555	11671	Locator	Rear compressor drive rotor front balance bearing	121	72-36-00
*PWA9598	12846	Puller	Rear compressor drive turbine front balance bearing	319	72-52-00
*PWA9709	12818	Fixture	No. 4-1/2 bearing seals and spacers	320	72-53-00
*PWA9710	12833	clamp, seal	No. 4-1/2 bearing seals and spacers	320	72-53-00
*PWA9716	11655	Drift	Front compressor drive turbine rotor spacer	121	72-00-00

P/N	S/N	Description	Application	Dept	ATA
*PWA9728	11348	Drift	RearComprDrvTurbineRotorSpacer	121	72-00-00
*PWA9728	12771	Drift	Rear compressor drive turbine rotor spacer	320	72-00-52
*PWA9885	11533	Puller	Rear compr rotor 12-13 disk	102	72-36-00
*PWA9885	11833	Puller	Rear compressor rotor 12th-13th stage disk	502	72-36-00
*PWA9885	12807	Puller	Rear Compress. Rotor disk, used in low turbine	320	72-53-00
*PWA9904	12155	Drift	Idler gearshaft front bearing bushing	528	72-61-02
*PWA9933	13130	Unknown	Tool not listed in P&W index, unused tool from gearbox cell	520	
*SWE10480	11466A	Sweeney Holder	#3 bearing anti-rotation device	102	72-34-00
*SWE104801	12677	Base	#3 bearing housing & drive gear bolted in #3 bearing config	420	72-34-00
*SWE104822	11997	Wrench	#4-1/2 bearing inner race retaining nut	102	72-53-00
*SWE10485	11480A	Sweeney holder	#4 bearing outer race retaining nut	102	72-00-00
*SWE10485	11480B	Sweeney holder	#4 bearing outer race retaining nut	102	72-00-00
*SWE10491	13288	T-bar lock	Sweeney, lock, No.1 abearing inner race retaining nut		72-00-00
*SWE10678	12780	Wrench	Turbine exhaust fan duct outer duct ball housing	320	72-54-00
*SWE10691	13287	Wrench	No. 1 bearing inner race retaining nut remover		72-00-00
*SWE106921	11472A	Wrench	#3 bearing outer race retaining nut remover	102	72-34-00
*SWE22008	11675	Puller	#4 bearing front airseal	121	72-36-00
*SWE22016	11483	Puller	#4 bearing outer race cage & balls	102	72-00-00
*SWE22504		Holder, install/remove	#4 & #5 scavenge pump drive gear retaining nut		72-37-88
*SWE22507		Base	N1 Tach drive gear		72-21-03
*SWE22550		Holder	No. 5 bearing damper		72-41-21
*SWE22671	11715A	Wrench	Break-front compressor coupling	121	72-00-00
*SWE22710	11465A	Rivet removal tool	#1 bearing outer race retaining nut	102	72-00-23
*SWE22710	11465B	Rivet removal tool	#1 bearing outer race retaining nut	102	72-00-23
*SWE8100-24	13200	Adapter, Lift handle	For Sweeney torque multiplier	102	
*SWE8102-5	11367	Multiplier, pneumatic	Wrench, pneumatic power source, air ratchet torque multipl.	121	72-34-00
*SWE8202	11713B	Sweeney wrench	Sweeney torque multiplier	121	
ATT0104		EXHAUST RUNOUTS	ASSY/DISSY	154	72-54-00
ATT0107	12777	Wrench	1-7/16 box wrench, 1400"lbs, #6 bearing housing support pads	320	
ATT0150	11184	Lock plate	Rivet fixt,blade C-5 disk	219	
ATT0151	11195	Rivet flare	Front counterwght,Hi compress	219	
ATT0152	11196	Rivet fixture	C3-6,7-9 Compressor disk	219	
ATT0153	11197	Rivet fixture	C10-13 Compressor disk	219	
ATT0154	11198	Rivet fixture	C3-6 Compressor disk	219	
ATT0155	11204A	Cradle	Rear holder, -200	219	
ATT0155	11204B	Cradle	Rear holder, -200	219	

P/N	S/N	Description	Application	Dept	ATA
ATT0156	11206	Nut	Rear nut, low compressor	219	
ATT0157	11207	Nut	Front nut, low compressor	219	
ATT0158	11218	Work hub	Low compressor buildup, -200	219	
ATT0159	11220	Cover	Balance, front compressor	219	
ATT0160	11222	Fixture	Balance, low compressor,-200	219	
ATT0164	11236B	Fixture	Hi compr. balance fixture	219	
ATT0165	11237A	Fixture	Hi compr. balance fixture	219	
ATT0165	11237B	Fixture	Hi compr. balance fixture	219	
ATT0166	11238A	Arms, fixture	Hi compr. balance fixture	219	
ATT0166	11238B	Arms, fixture	Hi compr. balance fixture	219	
ATT0167	11240	Build fixture	Front acc'y drive, -200	219	
ATT0168	11241	Build fixture	Front acc'y drive,baby 8	219	
ATT0169	11256A	Bearing	Dummy bearing, compressor	220	
ATT0169	11256B	Bearing	Dummy bearing, compressor	220	
ATT0170	11258	Check if tool is unusable	#8 cart diss'y	102	
ATT0171	11259	Puller	#6 bearing puller	102	
ATT0172	11262A	Wrench	Transfer tube remover	102	
ATT0172	11262B	Wrench	Transfer tube remover	102	
ATT0176	11270A	Nut remover	#2 left inner hand thread	102	
ATT0176	11270B	Nut remover	#2 left inner hand thread	102	
ATT0177	11271A	Nut remover	#2 outer hand thread	102	
ATT0177	11271B	Nut remover	#2 outer hand thread	102	
ATT0178	11809A	Magnetic particle tester	Test tube, check magnetic particle concentration	604	
ATT0178	11809B	Magnetic particle tester	Test tube, check magnetic particle concentration, NDT	604	
ATT0179	11274	Remover tool	Remove #2 outer race	102	
ATT0180	11276	Separator	#2 bearing airseal	102	
ATT0181	11277	Threaded pin	May not belong on #2dissy cart	102	
ATT0182	11278A	Wrench, ratchet	Torque low compressor	220	
ATT0182	11278B	Wrench, ratchet	Torque low compressor	220	
ATT0182	11278C	Wrench, ratchet	Torque, low compressor	220	
ATT0183	11279A	Wrench, ratchet	Torque low compressor, -200	121	
ATT0183	11279B	Wrench, ratchet	Torque low compressor, -200	220	
ATT0184	11280	Seal remover tool	Front accessory drive	220	
ATT0185	11285	Seal remover	Drive seal housing N1 Tach	220	
ATT0186	11286A	Wrench, ratchet	Torque tierods,Hi&Lo compress	220	
ATT0186	11286B	Wrench, ratchet	Torque tierods, Hi&Lo compress	220	

P/N	S/N	Description	Application	Dept	ATA
ATT0187	11287A	Lift tool	-200 LPC	220	
ATT0187	11287B	Lift tool	-200 LPC	220	
ATT0188	11288A	Wrench, torque	-200	220	
ATT0188	11288B	Wrench, torque	-200	220	
ATT0189	11289	Pull tool	HPC spacer puller	220	
ATT0190	11291	Pull tool	Balance bearing puller,-200	220	
ATT0191	11292A	Lifting arms	Trunion arms	220	
ATT0191	11292B	Lifting arms	Trunion arms	220	
ATT0191	11292C	Lifting arms	Trunion arms	220	
ATT0191	11292D	Lifting arms	Trunion arms	220	
ATT0192	11294	Thermometer	Check temperature of disk	220	
ATT0193	11295	Cooling ring	Cool bearings	220	
ATT0194	11296	Hydraulic ram	Disk removal	220	
ATT0195	11297	Impact socket	Air gun	220	
ATT0196	11298A	Wrench heads, torque	Attachments to loCompr wrench	220	
ATT0196	11298B	Wrench heads, torque	Attachments to LoCompr wrench	220	
ATT0196	11298C	Wrench heads, torque	Attachments to LoCompr wrench	220	
ATT0197	11302A	Wrench		220	
ATT0197	11302B	Wrench		220	
ATT0198	11303	Wrench, socket adapter		220	
ATT0199	11304A	Wrench, socket adapter	Tiebolts	220	
ATT0199	11304B	Wrench, socket adapters	Tiebolts	220	
ATT0200	11305	Wrench, socket		220	
ATT0201	11306	Wrench, socket adapter	tiebolts	220	
ATT0202	11307A	Clevis arm	Trunnioning -200 LPC	220	
ATT0202	11307B	Clevis arm	Trunnioning -200 LPC	220	
ATT0202	11307C	Clevis arm	Trunnioning -200 LPC	220	
ATT0202	11307D	Clevis arm	Trunnioning -200 LPC	220	
ATT0203	11308	Dummy tierod	Dummy	220	
ATT0204	11309	Eye bolt	lift tool	220	
ATT0205	11310	Wrench, allen	Brakes,-200 transport fixture	220	
ATT0206	11311A	Fixture	Low compressor diss'y	220	
ATT0206	11311B	Fixture	Low compressor diss'y	220	
ATT0206	11311C	Fixture	Low compressor diss'y	220	
ATT0206	11311D	Fixture	Low compressor diss'y	220	
ATT0207	11314	Stand	Cold section	121	

P/N	S/N	Description	Application	Dept	ATA
ATT0208	11315A	Stand	Buildup low compressor	121	
ATT0208	11315B	Stand	Buildup low compressor	121	
ATT0211	11321	Stand	Low compressor dissy fixture	219	
ATT0212	11322	Stand	High compressor dissy fixture	121	
ATT0213	11325	Fixture	Low compressor dissy	219	
ATT0214	11330	Fixture	Exhaust case dissy fixture	102	
ATT0215	11331A	Dummy C-1 hub	-200 dummy fixture C-1 hub	102	
ATT0215	11331B	Dummy C-1 hub	-200 C-1 hub dummy fixture	102	
ATT0216	11332	Stand	Hold C-1 hub dummy fixture	102	
ATT0217	11333	Stand	Exhaust case dissy fixture	102	
ATT0218	11335A	Dummy C-1 hub	-7 C-1 dummy hub fixture	102	
ATT0218	11335B	Dummy C-1 hub	-7 C-1 dummy hub fixture	102	
ATT0219	11336	Dummy inlet case	Dummy tool dissy cold section	102	
ATT022	12824	Lifting eye	Lift T2 disk and shaft assembly, low turbine	320	
ATT0220	11337	Dummy Front fan case	Dummy tool dissy cold section	102	
ATT0221	11338A	Cover	LoCompr.Blade protector	102	
ATT0221	11338B	Cover	Low Compr. blade protector	102	
ATT0221	11338C	Cover	Low compr. blade protector	102	
ATT0221	11338D	Cover	Low compr. blade protector	102	
ATT0221	11338E	Cover	Low compr. blade protector	102	
ATT0221	11338F	Cover	Low compr. blade protector	102	
ATT0223	11340A	Lifting eye	Fan exhaust outer duct assy	202	
ATT0223	11341B	Lifting eye	Fan exhaust outer duct assy	102	
ATT0224	11347	Placement tool	4 1/2 bearing placement tool	121	
ATT0225	11350	Bar	Drop check bar	121	
ATT0226	11351A	Retaining tool	#5 bearing housing retainer	121	
ATT0226	11351B	Retaining tool	#5 bearing housing retainer	121	
ATT0226	11351C	Retaining tool	#5 bearing housing retainer	121	
ATT0226	11351D	Retaining tool	#5 bearing housing retainer	121	
ATT0227	11353	Removal tool	#4 1/2 brg&spacer removal tool	121	
ATT0228	11354	Lock remover	#4 1/2 lock remover	121	
ATT0229	11355A	Lock remover	#4 1/2 lock nut removal tool	121	
ATT0229	11355B	Lock remover	#4 1/2 lock nut removal tool	121	
ATT0230	11357A	Runout tool	#7 Disk journal runout tool	121	
ATT0230	11357B	Runout tool	#7 Disk journal runout tool	121	
ATT0231	11359	Nut remover/installer	#5 brg.housing nut	121	

P/N	S/N	Description	Application	Dept	ATA
ATT0232	11360A	Lock remover	#4 1/2 lock remover	121	
ATT0232	11360B	Lock remover	#4 1/2 lock remover	121	
ATT0233	11361A	Retaining tool	T1 retaining tool, -17	121	
ATT0233	11361B	Retaining tool	T1 Retaining tool, -17	121	
ATT0235	11363	Fixture	#4 1/2 Pump buildup fixture	121	
ATT0236	11368	Torque wrench	0-250 ft.lbs.torque wrench	121	
ATT0237	11369A	Torque wrench	0-150 in.lbs. torque wrench	121	
ATT0237	11369B	Torque wrench	0-150 in.lbs. torque wrench	121	
ATT0237	11369C	Torque wrench	0-150 in.lbs. torque wrench	121	
ATT0238	11370	Torque wrench	0-750 in.lbs. torque wrench	121	
ATT0239	11371	Alignment tool	Alignment igniter tool	121	
ATT0240	11372	Dummy igniter plug	Dummy tool	121	
ATT0241	11373	Knocker	#4 1/2 Brg&Coupling high turb	102	
ATT0243	11375A	Eye, lifting	Diffuser case	102	
ATT0243	11375B	Eye,lifting	Diffuser case	102	
ATT0243	11375C	Eye, lifting	Diffuser case	102	
ATT0244	11376	Eye, lifting	C-1 hub	102	
ATT0246	11378	Holding fixture	Horizontal Nozzle case holder	102	
ATT0247	11379A	Boomerang	Inlet case lifting tool	102	
ATT0247	11379B	Boomerang	Inlet case lifting tool	102	
ATT0247	11379C	Boomerang	Inlet case lifting tool	102	
ATT0248	11380	Holding fixture	Horizontal DiffuserCaseHolder	102	
ATT0249	11381	Holding fixture	Gearbox holder	102	
ATT0250	11383	Removal tool	Remove T1 in horiz. Position	102	
ATT0251	11384	TR fixture	TR fixture, cross reverser	102	
ATT0252	11385	Banana tool	Engine lifting tool	102	
ATT0253	11386A	Trunnion arms	Intermediate case	102	
ATT0253	11386B	Trunnion arms	Intermediate case	102	
ATT0255	11392	Die Grinder	General	102	
ATT0256	11393	Pneumatic wrench	3/8" Drive impact wrench	102	
ATT0257	11408A	Torque gun, pneumatic	Torque impact gun	102	
ATT0257	11408B	Torque gun, pneumatic	Torque impact gun	102	
ATT0257	11408C	Torque gun, pneumatic	Torque impact gun	102	
ATT0258	11409A	Jack hammer, pneumatic	Nut buster	102	
ATT0258	11409B	Jack hammer, pneumatic	Nut buster	102	
ATT0259	11410	Impact gun extension	For pneumatic jack hammer	102	



P/N	S/N	Description	Application	Dept	ATA
ATT0260	11411	Apex tip	Pneumatic jack hammer tip	102	
ATT0261	11412	Apex tip	Pneumatic jack hammer tip	102	
ATT0262	11413A	Chuck key	Pneumatic jack hammer	102	
ATT0262	11413B	Chuck key	Pneumatic jack hammer	102	
ATT0262	11413C	Chuck key	Pneumatic jack hammer	102	
ATT0263	11414A	Chuck key	Die grinder	102	
ATT0263	11414B	Chuck key	Die grinder	102	
ATT0264	11416A	Cover	Inlet case drain plug	102	
ATT0264	11416B	Cover	Inlet case drain plug	102	
ATT0264	11416C	Cover	Inlet case drain plug	102	
ATT0264	11416D	Cover	Inlet case drain plug	102	
ATT0264	11416E	Cover	Inlet case drain plug	102	
ATT0264	11416F	Cover	Inlet case drain plug	102	
ATT0264	11416G	Cover	Inlet case drain plug	102	
ATT0264	11416H	Cover	Inlet case drain plug	102	
ATT0264	11416I	Cover	Inlet case drain plug	102	
ATT0264	11416J	Cover	Inlet case drain plug	102	
ATT0266	11418	Dummy spacer	#1 bearing air seal spacer	102	
ATT0267	11419A	Dummy spacer	C-1 dummy spacer	219	
ATT0267	11419B	Dummy spacer	C-1 dummy spacer	219	
ATT0267	11419C	Dummy spacer	C-1 dummy spacer	219	
ATT0268	11420	Wrench	1-7/16 Open end wrench	102	
ATT0269	11423	Wrench, spanner	Spanner wrench, general	121	
ATT0270	11424	Pliers	Canon plug pliers	102	
ATT0271	11426A	Wrench, torque	1-1/4 torque wrench crow'sfoot	121	
ATT0271	11426B	Wrench, torque	1-1/4Torque wrench crow's foot	121	
ATT0272	11427	Wrench, socket	7/8" deep socket wrench	121	
ATT0273	11428A	Wrench, torque	150-750"lb, torque nuts	121	
ATT0273	11428B	Wrench, torque	150-750"lb, torque nuts	121	
ATT0273	11428C	Wrench, torque	150-750"lb, torque nuts	121	
ATT0273	11428D	Wrench, torque	150-750"lb, torque nuts	121	
ATT0273	11428E	Wrench, torque	150-750"lb, torque nuts	121	
ATT0274	11429A	Wrench, torque	0-150"lb, torque nuts	121	
ATT0274	11429B	Wrench, torque	0-150"lb, torque nuts	121	
ATT0274	11429C	Wrench, torque	0-150"lb, torque nuts	121	
ATT0274	11429D	Wrench, torque	0-150"lb, torque nuts	121	

P/N	S/N	Description	Application	Dept	ATA
ATT0274	11429E	Wrench, torque	0-150"lb, torque nuts	121	
ATT0275	11430	Wrench attachment	Crow's foot, 1/2" drive	121	
ATT0276	11431	Wrench attachment	Crow's foot, 3/8"drive	121	
ATT0277	11432A	Wrench attachment	1-7/8 crow's foot, 1/2"drv12pt	121	
ATT0277	11432B	Wrench attachment	1-7/8crow'sfoot, 1/2 drv, 12pt	121	
ATT0278	11433	Wrench attachment	2"crow's foot, 1/2"drv, 12 pt.	121	
ATT0279	11434	Wrench attachment	1-3/8crow'sfoot,1/2"drv,12pt	121	
ATT0280	11435A	Wrench attachment	1" crow'sfoot, 3/8"drv, 12pt	121	
ATT0280	11435B	Wrench attachment	1" crow'sfoot, 3/8 drv, 12 pt	121	
ATT0282	11437	Socket	1" socket, 3/4" drive	121	
ATT0283	11438	Socket	1-1/2" socket, 3/4"drv, 12 pt	121	
ATT0284	11439	Socket	1-3/8"socket, 1/2"drv, 12 pt	121	
ATT0285	11440	Socket	1-1/8"socket, 1/2"drv, 10 pt.	121	
ATT0286	11441	Wrench	1/2" offset starter wrench	121	
ATT0287	11442	Wrench	8/8" offset starter wrench	121	
ATT0288	11446	Puller	-200 remove boroscope plug	121	
ATT0289	11447	Wrench, spanner	Remove air duct	121	
ATT0290	11448A	Mallet	General assembly	121	
ATT0290	11448B	Mallet	General assembly	121	
ATT0291	11450	Tie wrap gun	Inlet case tie wraps	121	
ATT0292	11451	Wrench, spanner	Remove air duct lock nut	102	
ATT0294	11453	Pressure tester	Bleed valve pressure tester	121	
ATT0295	11454B	3-point arm	Hold engine in stand	102	
ATT0295	11454C	3-point arm	Hold engine in stand	102	
ATT0295	11454D	3-point arm	Hold engine in stand	102	
ATT0295	11454E	3-point arm	Hold engine in stand	102	
ATT0295	11454F	3-point arm	Hold engine in holding fixture	102	
ATT0295	11454G	3-point arm	Hold engine in holding fixture	102	
ATT0296	11455A	Arm	Horiz.adapter, holding fixture	102	
ATT0296	11455B	Arm	Horiz.adapter, holding fixture	102	
ATT0297	11458	Lifting tool	Outer exhaust case, -200	102	
ATT0298	11459	Dummy bearing hsg	#5 brg.hsg, Turbine dis'y	102	
ATT0299	11460A	Puller	#1 Bearing puller	102	
ATT0299	11460B	Puller	#1 bearing puller	102	
ATT0300	11464	Wrench	#1 brg.outer nut remover	102	
ATT0302	11471A	Screw	#3 brg jack screw & puck	102	

P/N	S/N	Description	Application	Dept	ATA
ATT0302	11471B	Screw	#3 brg jack screw & puck	102	
ATT0303	11474	Puller	#3 baffle plate	102	
ATT0305	11477	Sweeney holder	#3 anti-rotational device	102	
ATT0306	11481A	Wrench	#4 bearing outer nut remover	102	
ATT0306	11481B	Wrench	#4 bearing outer nut remover	102	
ATT0309	11490	Puller	#6 bearing puller	102	
ATT0310	11494	Eye, lifting	Rear compressor hub lifter	102	
ATT0311	11495	Push tool	Inner race pusher	121	
ATT0312	11496	Insulator	Bearing Insulation tool	121	
ATT0313	11500	Installation tool	#5 bearing installation tool	121	
ATT0314	11501	Coupling	High turbine shaft remover	121	
ATT0315	11502	Lock, coupling	High turbine shaft remover	121	
ATT0316	11504	Deblading tool	High turbine deblader	102	
ATT0316	11746B	Lifting chains	Thrust reverser	102	
ATT0317	11506	Push studs set	T4 Low turbine	102	
ATT0318	11509	Puller	T4 Hub removal	102	
ATT0319	11511A	Jack screw	T4 Hub	102	
ATT0319	11511B	Jack screw	T4 Hub	102	
ATT0320	11513A	Jack screw base	Low turbine	102	
ATT0320	11513B	Jack Screw base	Low turbine	102	
ATT0323	11520	Lifter	Low turbine shaft removal	102	
ATT0325	11528	Hydraulic pump lifter	Hydraulic pump lifter, general use	102	
ATT0326	11529	Removal tool	C-8 removal tool	102	
ATT0327	11532A	Puller	Air seal puller, high compressor	102	
ATT0327	11532C	Puller	Air seal puller, high compressor	102	
ATT0328	11534	Jack screw	High compressor, jack screw and base	102	
ATT0329	11537	Pusher, hydraulic	C-8 hydraulic pusher	102	
ATT0331	11542	Anti-rotation device	#5 Nut, anti-rotation device	102	
ATT0333	11547	Puller, hydraulic	Hydraulic derby hat puller	102	
ATT0334	11550	Cylinder, hydraulic	Hydraulic jack cylinder	102	
ATT0335	11554	Plate	Removal of C-3, 4, 5 & 6	102	
ATT0336	11564	Base	Carbon seal remover base	102	
ATT0337	11566	Plunger, hydraulic	Hydraulic plunger, remove disks	102	
ATT0338	11569A	Removal tool	T-2 disk removal	102	
ATT0338	11569B	Removal tool	T2 disk removal	102	
ATT0340	11581	Adapter	1/2 inch driver, wrench adapter	102	

P/N	S/N	Description	Application	Dept	ATA
ATT0341	11584	Holding tool	Inner strut nut holder	102	
ATT0343	11587	Removal tool	Exhaust strut removal fixture	102	
ATT0345	11591	Knocker	Exhaust probe knocker	102	
ATT0346	11592	Wrench	1-7/16 Open/box wrench, general use	102	
ATT0347	11356A	Removal tool	#4 1/2 coupling remover	121	
ATT0347	11356B	Removal tool	#4 1/2 Coupling remover	121	
ATT0349	11594	Wrench	1/2" drive wrench	102	
ATT0350	11595	Wrench	1-7/16" wrench & breaking bar, exhaust case	102	
ATT0351	11596	Pump, hydraulic	Use with hydraulic jacks	102	
ATT0352	11597	Wrench multiplier	Sweeney torque wrench multiplier, tighten nuts	102	
ATT0353	11599	Removal tool	Inlet case, #1 carbon seal remover	102	
ATT0354	11601	Sweeney holder	#3 bearing housing intermediate case	102	
ATT0355	11602	Dummy carbon seal	Intermediate case, dummy carbon seal	102	
ATT0356	11603A	Knocker	Borescope pluG	102	
ATT0356	11603B	Knocker	Borescope plug	102	
ATT0357	11604	Knocker	Knocker, use unknown	102	
ATT0358	11607A	Jack, hydraulic	Remove engine sections	102	
ATT0358	11607B	Jack, hydraulic	Remove engine sections	102	
ATT0359	11612	Removal tool	Thrust reverser removal tool	102	
ATT0360	11613A	Removal tool	Remove gearbox	102	
ATT0360	11613B	Removal tool	Remove gearbox	102	
ATT0361	11631A	Socket wrench	1-1/16" tierod nut compressor remover	121	
ATT0361	11631B	Socket wrench	1-1/16" tierod nut compressor remover	121	
ATT0362	11632A	Socket wrench	9/16" tierod nut remover, compressor	121	
ATT0362	11632B	Socket wrench	9/16" tierod nut remover, compressor	121	
ATT0363	11649	Drift	Low compressor	121	
ATT0364	11650	Lock nut	#1 balance dummy nut	121	
ATT0365	11656	Drift	Installation tool, #2 balance bearing	121	
ATT0366	11659	Coupling remover	Low turbine	121	
ATT0368	11661	Sleeve	13th stage manifold sleeve	121	
ATT0369	11663	Locator tool	#2 bearing placement tool	121	
ATT0370	11666	Stretch fixture	High compressor stretch fixture	121	
ATT0371	11668	Dummy nut	Low compressor dummy nut	121	
ATT0372	11669	Puller	#4 balance bearing puller	121	
ATT0373	11672	Seat	Labryinthe seal seat	121	
ATT0374	11676	Puller	Spacer puller, low compressor	121	

P/N	S/N	Description	Application	Dept	ATA
ATT0379	11683	Gauge	Flowmeter, vacuum air flow test stand	121	
ATT0380	11684B	Gauge	Pressure gauge, vacuum air flow test stand	121	
ATT0381	11685	Gauge	Temperature gauge, vacuum flow test stand	121	
ATT0382	11686	Test stand	Vacuum air flow test stand	121	
ATT0384	11691	Valve	Air valve, vacuum check stand	121	
ATT0386	11696A	Plug	Check pressure on scavenger line	121	
ATT0386	11696B	Plug	Check pressure on scavenger line	121	
ATT0387	11697	Gauge	Flowmeter gauge, compressor tubes, airflow test stand	121	
ATT0388	11698	Gauge	Pressure gauge, airflow test stand	121	
ATT0389	11699	Gauge	Pressure gauge, airflow test stand	121	
ATT0390	11700	Test stand	Airflow test stand with gauges	121	
ATT0391	11703	Gauge	C-4 low compressor runout tool	121	
ATT0392	11708	Gauge	C-1 low compressor stretch fixture	121	
ATT0393	11709	Gauge	Manual stretch fixture	121	
ATT0394	11711	Hydraulic pump	Assembly of engine sections	121	
ATT0396	11714	Test stand	Test hydraulic system on engines	121	
ATT0397	11716	Lifting eye	Lift gearbox	121	
ATT0398	11719	Lift cable	Lift fixtures, various engine sections	121	
ATT0399	11721	Lift eye & cable	Lifting eye, -200 series	121	
ATT040	12775	Nut, locker	Locks Sweeney with inside high turbine	320	
ATT0400	11723	Lift cable	Lift cable, general engine sections	121	
ATT0401	11724A	Lift eye	Lift eye for low compressor	121	
ATT0401	11724B	Lift Eye	List eye for low compressor	121	
ATT0403	11728	Coupling lock remover	Low turbine shaft	102	
ATT0405	11732A	Lift cable	Sling hoists, lift engine sections	102	
ATT0405	11732B	Lift cable	Sling hoist, lift engine sections	102	
ATT0406	11735	Pusher	Seat snap ring, low turbine coupling	102	
ATT0407	11737A	Lifting eye	Lift intermediate case	102	
ATT0407	11737B	Lifting eye	Lift intermediate case	102	
ATT0408	11738A	Lifting eye	Low compressor	102	
ATT0408	11738B	Lifting eye	low compressor	102	
ATT0409	11739	Push tool	Separate low compressor from intermediate case	102	
ATT0410	11740B	Pusher	Low compressor	102	
ATT0410	11740C	Pusher	Low compressor	102	
ATT0410	11740D	Pusher	Low compressor	102	
ATT0411	11741	Adapter, push tool	Push low turbine	102	

P/N	S/N	Description	Application	Dept	ATA
ATT0412	11742	Sling, hoist	Lift front components of engine	102	
ATT0413	11743	Sling, hoist	Lift engine sections	102	
ATT0414	11744A	Lifting eye	Lift engine	102	
ATT0414	11744B	Lifting eye	Lift engine	102	
ATT0415	11745	Lifting eye	Hot section snap ring remover	102	
ATT0416	11746A	Lifting chains	Thrust reverser	102	
ATT0417	11753	Eye, lifting	Lift wagon wheel fixture for inlet case	102	
ATT0421	11763B	Sling	Sling for hoist, engine lift	121	
ATT0421	11763D	Sling	Sling for hoist, engine lift	121	
ATT0422	11764A	S clamp	Lifting eye for hoist	121	
ATT0422	11764B	S clamp	Lifting eye for hoist	121	
ATT0422	11764C	S clamp	Lifting eye for hoist	121	
ATT0423	11765A	Triangular stand	Exhaust case and low turbine	121	
ATT0423	11765B	Triangular stand	Exhaust case and low turbine	121	
ATT0423	11765C	Triangular stand	Exhaust case and low turbine	121	
ATT0424	11766	Stand	Exhaust case only (w/o low turbine)	121	
ATT0425	11767A	3 point stand	Nozzle case, 3 point adjustable stand	121	
ATT0425	11767B	3 point stand	Nozzle case, 3 point adjustable stand	121	
ATT0425	11767C	3 point stand	Nozzle case, 3 point adjustable stand	121	
ATT0425	11767D	3 point stand	Nozzle case, 3 point adjustable stand	121	
ATT0425	11767E	3 point stand	Nozzle case, 3 point adjustable stand	121	
ATT0425	11767F	3 point stand	Nozzle case, 3 point adjustable stand	121	
ATT0425	11767G	3 point stand	Nozzle case, 3 point adjustable stand	121	
ATT0425	11767H	3 point stand	Nozzle case, 3 point adjustable stand	121	
ATT0426	11768	Vise	General use	121	
ATT0427	11808	Ultraviolet lamp	UV lamp, non-destructive testing, magnetic particle insp.	604	
ATT0428	11770A	Stand	3 point rear stand	121	
ATT0428	11770B	Stand	3 point rear stand	121	
ATT0429	11771A	Stand	3 point rear high stand	121	
ATT0429	11771B	Stand	3 point rear high stand	121	
ATT0429	11771C	Stand	3 point rear high stand	121	
ATT0430	11772B	Stand	Inlet case, -200	121	
ATT0430	11772C	Stand	Inlet case, -200	121	
ATT0430	11772D	Stand	Inlet case, -200	121	
ATT0431	11773B	Stand	Nozzle case, 3 point adjustable stand, -200	121	
ATT0433	11775	Removal fixture	Low turbine removal fixture	102	

P/N	S/N	Description	Application	Dept	ATA
ATT0434	11777	Stand	Support disassembly fixture	102	
ATT0435	11778	Jack	Constant speed drive manual jack	102	
ATT0436	11780	C-clamp holder	Sling hoist for engine	102	
ATT0437	11782	Lifting fixture	Hot section lift fixture	102	
ATT0438	11784	Vise	General use	102	
ATT0439	11785	Dummy housing	#5 bearing dummy housing, disassembly	102	
ATT0440	11786	Fixture	Low turbine assembly fixture	102	
ATT0441	11787A	Engine trailer	JT8D engine trailer	102	
ATT0441	11787B	Engine trailer	JT8D engine trailer	102	
ATT0441	11787C	Engine trailer	JT8D engine trailer	102	
ATT0443	11789	Stand	-200 LPT and exhaust fixture	102	
ATT0445	11729B	Fixture	Low turbine storage fixture	102	
ATT0447	11794A	Handle	Engine trailer	102	
ATT0447	11794B	Handle	Engine trailer	102	
ATT0448	11796	Stand	Low turbine stand	102	
ATT0449	11797	Engine trailer	Engine trailer for -200	102	
ATT0451	11799A	Stand	Low turbine storage fixture	102	
ATT0451	11799B	Stand	Low turbine storage fixture	102	
ATT0451	11799C	Stand	Low turbine storage fixture	102	
ATT0452	11800A	Plate	Attachment, low turbine storage fixture	102	
ATT0452	11800B	Plate	Attachment, low turbine storage fixture	102	
ATT0452	11800C	Plate	Attachment, low turbine storage fixture	102	
ATT0455	11804	Fixture	Low turbine removal fixture	102	
ATT0456	11805A	Stand	Inlet case stand	102	
ATT0456	11805B	Stand	Inlet case stand	102	
ATT0458	11790	Stand	-200 LPT and exhaust fixture	102	
ATT0459	11795	Handle	-200 Engine trailer	102	
ATT0460	11810	Magnetic field indicator	Test magnetic field strength	604	
ATT0461	11811	Keto ring	Test magnetization/particles, NDT	604	
ATT0462	11812	Adapter, NDT coil	Check radius inside gearbox spline, for Magnetic part. insp	604	
ATT0463	11813	Ultraviolet lamp	UV lamp, non-destructive testing, liquid penetrant	604	
ATT0464	11814	Adapter arm	Hold ultraviolet lamp, non-destructive testing	604	
ATT0465	11815	Ultraviolet lamp	UV lamp, inside check/long extension, NDT liquid penetrant	604	
ATT0466	11816A	Magnetic field indicator	Test magnetic field strength, non-destructive testing	604	
ATT0466	11816B	Magnetic field indicator	Test magnetic field strength, non-destructive testing	604	
ATT0467	11817	Ultraviolet meter	Long wave ultraviolet test, UV intensity, NDT	604	

P/N	S/N	Description	Application	Dept	ATA
ATT0468	11818	Foot candles meter	Test white light intensity, Non-destructive testing	604	
ATT0469	11819	Refractometer	Check emulsifier strength, non-destructive testing	604	
ATT0470	11820	TAM panel	test ultra-high sensitivity liquid penetrant, NDT	604	
ATT0471	11821	TAM panel	Test high sensitivity liquid penetrant, NDT	604	
ATT0472	11822	TAM panel	Test water wash sensitivity liquid penetrant, NDT	604	
ATT0489	11825	Puller	Pull main oil pump, gearbox	502	
ATT0490	11826	Puller	Deoiler seal, bearing outer race, gearbox	502	
ATT0491	11828A	Puller	Spline and gear puller, gearbox	502	
ATT0491	11828B	Puller	Spline and gear puller, gearbox	502	
ATT0492	11830	Puller	Sleeve puller, gearbox	502	
ATT0493	11832	Puller	Pull deoiler cover, gearbox	502	
ATT0494	11835	Dummy cover	Main oil pump dummy cover, gearbox	502	
ATT0495	11842	Gear lock	Gear lock to torque starter drive nuts, gearbox	502	
ATT0496	11856A	Indicator stand	Rod & indicator stand	502	
ATT0496	11856B	Indicator stand	Rod & indicator stand	502	
ATT0496	11856C	Indicator stand	Rod & indicator stand	502	
ATT0497	11857	Pressure check cover	Pressure check deoiler seal, gearbox	502	
ATT0498	11858	Wrench socket	Snap-on wrench socket, gearbox assy/dissy	502	
ATT0499	11859	Gear holder	Gear holding fixture, gearbox	502	
ATT0500	11861	Adapter	Pressure check, deoiler seal, gearbox	502	
ATT0501	11862	Pressure relief valve	To calibrate pressure release valve, gearbox	502	
ATT0502	11863	Pressure check valve	Pressure check oil tank drain valve	502	
ATT0503	11865	Removal/Inst. tool	Remove, install snap rings, gearbox	502	
ATT0504	11867	Pull tool	Bearing puller, gearbox	502	
ATT0506	11870	Installation tool	Install bushing on crank, gearbox	502	72-61-00
ATT0507	11871	Installation tool	Install bearing, hydraulic, rear gearbox housing	502	72-61-00
ATT0508	11872	Installation tool	Install bearing, starter, rear gearbox housing	502	72-61-00
ATT0509	11878	Wrench	Building up oil filter, gearbox	502	72-61-00
ATT0510	11882	Drift	Push tool, remove bearing, gearbox	502	72-61-00
ATT0511	11887	Drift	Remove bearings, gearbox	502	72-61-00
ATT0512	11888	Pressure check tool	Deoiler pressure check, gearbox	502	72-61-00
ATT0513	11889	Torque check	Torque check studs on split line, gearbox housings	502	72-61-00
ATT0514	11890	Wrench, air ratchet	1/4" drive air ratchet wrench, gearbox assy/disy	502	72-61-00
ATT0515	11891	Wrench, ratchet	Wrench, torque 150 in.lb.	502	
ATT0516	11892	Wrench, ratchet	Wrench, torque 750 in. lb.	502	
ATT0517	11893	Wrench, ratchet	Wrench, torque 1800 in. lb.	502	



P/N	S/N	Description	Application	Dept	ATA
ATT0518	11894	Ring gauge	2.8700 master ring gauge	502	72-61-00
ATT0519	11895	Dial gauge	1 to 1-17/32 dial gauge	502	
ATT0520	11896	Fixture, holding	Install deoiler carbon seal on gearbox	520	72-61-00
ATT0521	11897	Indicator adapter	Runout pad, starter hydraulic pad, gearbox	502	72-61-00
ATT0522	11898	Indicator adapter	Runout pad, fuel pad, gearbox	502	72-61-00
ATT0523	11899	Indicator adapter	N2 tachometer runout, gearbox	502	72-61-00
ATT0524	11900	Wrench, ratchet	Wrench, torque 150 in. lb.	502	
ATT0525	11901	Indicator	.001, .030 TIR indicator and attachments	502	
ATT0526	11902	Micrometer	2-3" micrometer	502	
ATT0527	11905A	Base	Pressure check kit, gearbox	520	72-61-00
ATT0527	11905B	Base	Pressure check kit, gearbox	520	72-61-00
ATT0528	11906	Nut	#4 breather, pressure check kit, gearbox	520	72-61-00
ATT0529	11907A	Adapter	Pressure check kit, gearbox	520	72-61-00
ATT0529	11907B	Adapter	Pressure check kit, gearbox	520	72-61-00
ATT0530	11911	Plug	Pressure check kit, gearbox	520	72-61-00
ATT0531	11912	Plug	Pressure check kit, gearbox	520	72-61-00
ATT0532	11913	Plate	Pressure check kit, gearbox	520	72-61-00
ATT0533	11914	Plug	#1 oil liner, gearbox, pressure check hardware kit	520	72-61-00
ATT0534	11915	Plug	Oil pressure relief valve cavity, pressure check hardwr kit	520	72-61-00
ATT0535	11916	Plug	Pressure port, gearbox pressure check kit	520	72-61-00
ATT0536	11917A	Cover	Main oil pump cover, pressure check kit, gearbox	520	72-61-00
ATT0536	11917B	Cover	Main oil pump cover, pressure check kit, gearbox	520	72-61-00
ATT0537	11918	Plug	Main oil port plug, gearbox pressure check kit	520	72-61-00
ATT0538	11919	Plug	Oil tubes, gearbox pressure check kit	520	72-61-00
ATT0539	11921	Nut	Scavenge pump, gearbox pressure check kit	520	72-61-00
ATT0540	11922	Plug	Oil pressure line check, gearbox	520	72-61-00
ATT0541	11923	Plug	Oil pressure line check, gearbox	520	72-61-00
ATT0542	11924	Plug	Oil pressure line check, gearbox	520	72-61-00
ATT0543	11925A	Plate	Oil drain plug, pressure check kit, gearbox	520	72-61-00
ATT0543	11925B	Plate	Oil drain plug, pressure check kit, gearbox	520	72-61-00
ATT0544	11926A	Plug	Pressure port & scavenge plug, pressure check kit, gearbox	520	72-61-00
ATT0544	11926B	Plug	Pressure port & scavenge plug, pressure check kit, gearbox	520	72-61-00
ATT0545	11927	Plate	Pressure check kit, gearbox	520	72-61-00
ATT0546	11928	Plug	Vent plug, pressure check kit, gearbox	520	72-61-00
ATT0547	11929	Plate	Lock down plate, for vent plug, gearbox pressure check kit	520	72-61-00
ATT0548	11931	Dissassembly fixture	Tachometer bearing removal fixture, gearbox	520	72-61-00

P/N	S/N	Description	Application	Dept	ATA
ATT0549	11933	Press machine	General assembly, disassembly, gearbox	520	72-61-00
ATT0550	11934	Vise	General assembly, disassembly, gearbox	520	72-61-00
ATT0551	11961	Ring gauge	1.3778 I.D. gauge	520	72-61-00
ATT0552	11935	Fixture	S/B 6094, fuel shutoff crank, gearbox	561	72-61-00
ATT0553	11936	Ring gauge	2.6775 I.D. gauge	520	72-61-00
ATT0554	11937	Air plug gauge	For I.D. gauge, 2.6775	520	72-61-00
ATT0555	11938	Ring gauge	3.5346 I.D. gauge	520	72-61-00
ATT0556	11939	Air plug gauge	For I.D. gauge, 3.5436	520	72-61-00
ATT0557	11940	Ring gauge	2.9531 I.D. gauge	520	72-61-00
ATT0558	11941	Air plug gauge	For I.D. gauge, 2.9531	520	72-61-00
ATT0559	11942	Ring gauge	2.8349 I.D. gauge	520	72-61-00
ATT0560	11943	Air plug gauge	For I.D. gauge, 2.8349	520	72-61-00
ATT0561	11944	Ring gauge	3.1499 I.D. gauge	520	72-61-00
ATT0562	11945	Air plug gauge	For I.D. gauge, 3.1499	520	72-61-00
ATT0563	11946	Ring gauge	2.5588 I.D. gauge	520	72-61-00
ATT0564	11947	Air plug gauge	For I.D. gauge, 2.5588	520	72-61-00
ATT0565	11948	Ring gauge	2.4412 I.D. gauge	520	72-61-00
ATT0566	11949	Air plug gauge	For I.D. gauge, 2.4412	520	72-61-00
ATT0567	11950	Ring gauge	2.1651 I.D. gauge	520	72-61-00
ATT0568	11951	Air plug gauge	For I.D. gauge, 2.1651	520	72-61-00
ATT0569	11952	Ring gauge	1.9683 I.D. gauge	520	72-61-00
ATT0570	11953	Air plug gauge	For I.D. gauge, 1.9683	520	72-61-00
ATT0571	11954	Ring gauge	1.5746 I.D. gauge	520	72-61-00
ATT0572	11955	Air plug gauge	For I.D. gauge, 1.5746	520	72-61-00
ATT0573	11956	Air pressure gauge	For I.D. gauges, gearbox	520	72-61-00
ATT0574	11962	Air plug gauge	For I.D. gauge, 1.3778	520	72-61-00
ATT0575	11963	Ring gauge	1.7715 I.D. gauge	520	72-61-00
ATT0576	11964	Air plug gauge	For I.D. gauge, 1.7715	520	72-61-00
ATT0577	11965	Ring gauge	1.1800 I.D. gauge	520	72-61-00
ATT0578	11966	Air plug gauge	For I.D. gauge, 1.1800	520	72-61-00
ATT0579	11967	Ring gauge	.9841 I.D. gauge	520	72-61-00
ATT0580	11968	Air plug gauge	For I.D. gauge, .9841	520	72-61-00
ATT0581	11969	Ring gauge	1.699 I.D. gauge	520	72-61-00
ATT0582	11970	Air plug gauge	For I.D. gauge, 1.699	520	72-61-00
ATT0583	11971	Ring gauge	.5903 I.D. gauge	520	72-61-00
ATT0584	11972	Air plug gauge	For I.D. gauge, .5903	520	72-61-00

P/N	S/N	Description	Application	Dept	ATA
ATT0585	11973	Plate	I.D. bearings, measure radial internal clearance	520	72-61-00
ATT0586	11974	Plate	I.D bearings, measure radial internal clearance	520	72-61-00
ATT0587	11975A	Plate	I.D. bearings, measure radial internal clearance	520	72-61-00
ATT0588	11976	Indicator & stand	Plate, indicator & stand, .0001/.010 T.I.R. indicator	520	72-61-00
ATT0589	11977	Surface table	Calibrated measuring surface table	520	72-61-00
ATT0590	11978	Grinder	General purpose hand grinder	520	72-61-00
ATT0591	11979	Pressure check gauge	Gearbox pressure check	520	72-61-00
ATT0592	11980	Pressure check gauge	Gearbox pressure check gauge	520	72-61-00
ATT0593	11981	Fixture	Gearbox splitline stud checker	520	72-61-00
ATT0594	11982A	Fixture	Gearbox ass'y/dissy holding fixture	520	72-61-00
ATT0594	11982B	Fixture	Gearbox ass'y/dissy holding fixture	520	72-61-00
ATT0594	11982C	Fixture	Gearbox ass'y/dissy holding fixture	520	72-61-00
ATT0595	11983	Holding fixture	Oil tank buildup/disassembly fixture	520	72-61-00
ATT0596	11984	Pressure check plug	Gearbox deoiler pressure check	520	72-61-00
ATT0597	11989	Hydraulic push	K35 Gear hydraulic push	520	72-61-00
ATT0598	11990	Pressure check	Oil filter relief valve pressure check, gearbox	520	72-61-00
ATT0599	11992	Fixture	Gear disassembly, bearing removal fixture	520	72-61-00
ATT0600	11993A	Plate	Main oil pump rear gear bearing removal	520	72-61-00
ATT0600	11993B	Plate	main oil pump rear gear bearing removal	520	72-61-00
ATT0601	11994A	Plate	Gearbox bearing removal	520	72-61-00
ATT0601	11994B	Plate	Gearbox bearing removal	520	72-61-00
ATT0602	11996	Fixture	Gear disassembly, bearing removal	520	72-61-00
ATT0603	11998	Hydraulic pump	Pressure check rear housing, energpac hydraulic pump	520	72-61-00
ATT0605	12008	Gauge	2.404 block gauge, for spring checker	520	72-61-00
ATT0606	12009	Gauge	3.2595/3.2610 Dial bore gauge	520	72-61-00
ATT0607	12010	Gauge	1.475/2.075 Dial bore gauge	520	72-61-00
ATT0608	12014	Spline plate	Constant speed drive spline lock plate	520	72-61-00
ATT0609	12015	Plate	Hold -7 13th stage ring assembly stator to lathe chuck	228	
ATT0610	12016	Plate	Chuck plate with snap rings for various stators	228	
ATT0611	12017	Fixture, cage	Hold C-9 stator for machining	228	
ATT0612	12018	Fixture, cage	Hold C-9 thru C-13 disks for machining face & snap	228	
ATT0613	12019	plate	Hold C-1, C-2 spacer to lathe chuck for machining	228	
ATT0614	12020	Plate	Hold C-3 stator to lathe chuck for machining	228	
ATT0615	12021	Plate	Hold C-11 stator to lathe chuck for machining	228	
ATT0616	12022	Center	Hold N2 compressor tube vent, C-8, on lathe for machining	228	
ATT0617	12023	Pressure check fixture	Press.chk #1 bearing housing, to install seal lands	228	

P/N	S/N	Description	Application	Dept	ATA
ATT0618	12024	Vise	General use, compressor machine shop	228	
ATT0619	12025	Fixture	Machine rear hub bushing	228	
ATT0620	12027	Fixture	Hold #1 bearing housing seal land bushing	228	
ATT0621	12028	Plate	Hold rear hub, machine scallops & drill holes SB 6414	228	
ATT0622	12029A	Blade holder	Hold blades for machining, milling machine	228	
ATT0622	12029B	Blade holder	Hold blades for machining, milling machine	228	
ATT0623	12030	Plate	13th stage crossover duct, diffuser fan outer duct	228	72-38-00
ATT0624	12031	Press ring	Ring for press machine	228	
ATT0625	12032	Vise	General use, compressor machine shop	228	
ATT0626	12033	Vise	Part holding vise, milling machine	228	
ATT0627	12034	Fixture, cage	Hold #1 bearing housing for machining	228	
ATT0628	12035	Fixture, cage	Hold #1 bearing housing for machining, -200	228	
ATT0629	12036A	Fixture	Hold part, rear compressor hub	228	
ATT0629	12036B	Fixture	Hold part, rear compressor hub	228	
ATT0630	12038	Drift	#1 Bearing housing	228	72-23-00
ATT0631	12039	Fixture	Hold front hub to lathe chuck	228	
ATT0632	12040	Fixture	Install detail housing #1 bearing	228	
ATT0633	12041	Fixture	Install detail housing #1 bearing, -200	228	
ATT0634	12042	Live center	Rear hub, hold to lathe	228	
ATT0635	12043	Drill guide	Rear hub S/B 6014 drill repair	228	
ATT0636	12044	Fixture, plate	Front accessory drive, hold to lathe chuck	228	
ATT0637	12045	Fixture, plate	Machine spacers, high compressor	228	
ATT0638	12046	Fixture, plate	#1 rear support, hold to lathe for machining	228	
ATT0639	12047	Fixture, plate	#1 rear support, hold to chuck for machining	228	
ATT0640	12048	Fixture, plate	T3 disk, fixture not in use	228	
ATT0641	12049	Fixture	#4 bearing seal holder	228	
ATT0642	12050	Fixture	Seal holder, hold to chuck for machining	228	
ATT0643	12051	Fixture, plate	Not identified, not in use	228	
ATT0644	12052	Fixture, plate	#2 seal holder	228	
ATT0645	12053	Plate	Hold spacer to chuck for machining, repair 2	228	72-37-90
ATT0646	12054	Plate	#2 seal holder	228	
ATT0647	12055	Fixture	#2 seal holder, not in use	228	
ATT0649	12056	Fixture	#1 bearing seal	228	
ATT0650	12057	Clamp	Washer clamp to hold rear hub	228	
ATT0651	12059	fixture, ring	Hold front hub to chuck	228	
ATT0652	12060	Fixture	For seal, hold to chuck, not in use	228	

P/N	S/N	Description	Application	Dept	ATA
ATT0653	12061	Clamp	Clamp plate to hold C-4 hub	228	
ATT0654	12062	Drill fixture	Drill adapter for SB repair	228	
ATT0655	12064	Fixture	#1 support housing for SB1815, adapter to ATT0635 fixture	228	
ATT0656	12065	Surface plate	Granite measuring block/plate	228	
ATT0657	12066	Surface plate	Surface plate for gauge measuring	228	
ATT0658	12067A	Jaws	Check concentricity, surface plate	228	
ATT0658	12067B	Jaws	Check concentricity, surface plate	228	
ATT0658	12067C	Jaws	Check concentricity, surface plate	228	
ATT0659	12068	Fixture, plate	Hold low compressor spacer	228	
ATT0660	12069	Fixture, plate	Hold 2nd & 3rd stg. spacer	228	
ATT0661	12070	Fixture, plate	Hold low compressor spacer, 14.240 dimension	228	
ATT0662	12071	Fixture, plate	Hold low compressor spacer, 14.290 dimension	228	
ATT0663	12072A	Fixture	Hold high compressor spacer	228	
ATT0663	12072B	Fixture	Hold high compressor spacer	228	
ATT0663	12072C	Fixture	Hold high compressor spacer	228	
ATT0663	12072D	Fixture	Hold high compressor spacer	228	
ATT0663	12072E	Fixture	Hold high compressor spacer	228	
ATT0663	12072F	Fixture	Hold high compressor spacer	228	
ATT0664	12073	Fixture	hold high compressor spacer	228	
ATT0665	12075	Fixture, ring	Rear compressor hub assembly	228	
ATT0666	12076	Fixture, plate	Hold disk to chuck	228	
ATT0667	12077	Fixture, plate	Hold high compressor disk	228	
ATT0668	12078	Fixture, plate	Hold C-2 disk, -200	228	
ATT0669	12079	Fixture, plate	Hold C-4 disk	228	
ATT0670	12080	Fixture, plate	Hold C-6 disk to fixture	228	
ATT0671	12081	Fixture, plate	Hold C-3 Disk	228	72-33-34
ATT0672	12082	Fixture, plate	Hold C-3 Disk	228	
ATT0673	12083	Fixtue	C-8 Disk, front snap	228	
ATT0674	12084	Fixture	Compressor disk plate	228	
ATT0675	12085	Plate	Cover to fixture	228	
ATT0676	12086	Fixture	N2 Compressor tube vent, C-8	228	
ATT0677	12087	Fixture	N2 Compressor tube vent, C-8	228	
ATT0678	12088	Fixtue	For service bulletin, front hub	228	
ATT0679	12089	Fixture, ring	Unidentified, marked 14.240/14.290	228	
ATT0680	12090	Fixture, ring	Unidentified	228	
ATT0681	12091	Fixture	Unidentified	228	

P/N	S/N	Description	Application	Dept	ATA
ATT0682	12092	Fixture	Unidentified	228	
ATT0683	12093	Fixture, ring	Unidentified	228	
ATT0684	12094	Fixture, plate	Unidentified	228	
ATT0685	12095	Fixture, plate	Unidentified	228	
ATT0686	12098	Fixture, ring	Unidentified	228	
ATT0687	12099	Fixture, ring	Unidentified	228	
ATT0688	12100	Fixture, ring	13th stage stator assembly	228	
ATT0689	12101	Fixture, plate	Unidentified	228	
ATT0690	12102	Fixture, plate	Unidentified	228	
ATT0691	12103	Fixture, plate	Unidentified	228	
ATT0692	12104	Fixture, ring	Unidentified	228	
ATT0693	12105	Fixture, ring	Unidentified	228	
ATT0694	12106	Drill, pneumatic	Pneumatic air drill, general use	228	
ATT0695	12107	Drill, pneumatic	Air drill, general use	228	
ATT0696	12108	Drill, pneumatic	Air drill, general use	228	
ATT0727	12139	Micrometer holder	Holder to set micrometer dimension	228	
ATT0737	12149	Hole Cutter	Outer Duct (9) cooler holes	417	
ATT0738	12150	Fixture	Front Gearbox, machine liners, busings, front acc'y drive	528	72-61-00
ATT0739	12151	Holding fixture	Gearbox, grind thrust shaft	528	72-61-00
ATT0740	12152	Holding fixture	Machining gearbox scavenge pump	528	72-61-00
ATT0741	12153	Positioning fixture	Gearbox, drill & tap fuel pump pin and screw holes	528	72-61-00
ATT0742	12154	Installation drift	Install #7 liner in gearbox	528	72-61-00
ATT0743	12158	Drift	Install bushing in gearbox	528	72-61-00
ATT0744	12160	Drift	Install bushing in gearbox	528	72-61-00
ATT0746	12163A	Fixture	Jackscrew to support gearbox, machine MOP liner	528	72-61-00
ATT0746	12163B	Fixture	Jackscrew to support gearbox, machine MOP liner	528	72-61-00
ATT0747	12164	Fixture	Hold gearbox to machine tachometer drive	528	72-61-00
ATT0749	12166	Holding fixture	Hold gearbox MOP liner	528	72-61-00
ATT0750	12167	Location guide	Gauge dimension(height) of snout	528	72-61-00
ATT0751	12168	Fixture	Hold assembled gearbox for machining	528	72-61-00
ATT0752	12169	Fixture	Plate, gearbox holder	528	72-61-00
ATT0753	12170	Fixture	Attachment to fixture to hold assembled gearbox	528	72-61-00
ATT0754	12171	Fixture	Attachment to fixture to hold assembled gearbox	528	72-61-00
ATT0757	12172	Bore gage	3.5438 dimension dial bore gage	528	72-61-00
ATT0758	12173	Bore gage	3.1501 dimension dial bore gage	528	72-61-00
ATT0759	12174	Bore gage	2.4414 dimension dial bore gage	528	72-61-00

P/N	S/N	Description	Application	Dept	ATA
ATT0760	12175	Bore gage	2.8351 dimension dial bore gage	528	72-61-00
ATT0761	12176	Bore gage	2.6777 dimension dial bore gage	528	72-61-00
ATT0762	12177	Bore gage	2.9533 dimension dial bore gage	528	72-61-00
ATT0763	12178	Bore gage	2.8740 dimension dial bore gage	528	72-61-00
ATT0764	12179	Dial caliper	12" .001" dial caliper gage	528	
ATT0765	12180	True bar	.787 depth measuring bar	528	
ATT0766	12181	Depth micrometer	Set, 1-12" depth micrometer	528	
ATT0767	12182	I.D. micrometer	Set, 1-12" internal diameter micrometer	528	
ATT0768	12183	O.D. micrometer	0-1" outside diameter micrometer	528	
ATT0769	12184	O.D. micrometer	1-2" outside diameter micrometer	528	
ATT0770	12185	O.D. micrometer	2-3" outside diameter micrometer	528	
ATT0771	12186	O.D. micrometer	3-4" outside diameter micrometer	528	
ATT0772	12187	O.D. micrometer	4-5" outside diameter micrometer	528	
ATT0773	12188	O.D. micrometer	5-6" outside diameter micrometer	528	
ATT0774	12189	Drill, pneumatic	Right angle air drill, general use	528	
ATT0775	12190	Vise	Vise, general use	528	
ATT0776	12191	Drill, pneumatic	Pneumatic air drill, general use	528	
ATT0777	12193	Puller	Knocker/puller, remove bushings	528	
ATT0778	12194	Puller	Puller/knocker, gearbox cross shaft liner	528	72-61-00
ATT0779	12195A	Fixture	Gearbox main accessory drive forward bearing	528	72-61-02
ATT0779	12195B	Fixture	Gearbox main accessory drive forward bearing	528	72-61-2
ATT0779	12195C	Fixture	Gearbox main accessory drive forward bearing	528	72-61-02
ATT0780	12196A	Fixture	Gearbox main accessory drive forward bearing(diff.dimensions)	528	72-61-00
ATT0780	12196B	Fixture	Gearbox main accessory drive forward bearing(diff.dimensions)	528	72-61-00
ATT0780	12196C	Fixture	Gearbox main accessory drive forward bearing(diff.dimensions)	528	72-61-00
ATT0781	12197	Fixture	Bleed valve, anti-ice valve accessory	528	
ATT0782	12198	Plate	General purpose chuck adapter	528	
ATT0783	12199	Fixture	Gearshaft ass'y, constant speed drive	528	72-61-21
ATT0784	12200A	Fixture	Gear shaft assembly	528	72-61-11
ATT0784	12200B	Fixture	Gear shaft assembly	528	72-61-11
ATT0785	12201	Fixture	Gearshaft bevel drive, spur	528	72-61-00
ATT0786	12202	Plate	General purpose chuck plate/adaptor	528	
ATT0787	12203A	Fixture	Gearbox oil tank strap	528	72-61-00
ATT0787	12203B	Fixture	Gearbox oil tank strap	528	72-61-00
ATT0787	12203C	Fixture	Gearbox oil tank strap	528	72-61-00
ATT0787	12203D	Fixture	Gearbox oil tank strap	528	72-61-06

P/N	S/N	Description	Application	Dept	ATA
ATT0788	12204	Fixture	Gearbox main oil pump cover, machine o.d.	528	72-61-53
ATT0789	12205	Fixture	Gearbox gearshaft	528	72-61-41
ATT0790	12206	Fixture	Cover, main oil pump filter, gearbox	528	72-61-53
ATT0791	12207	Fixture	Gearbox gear bevel	528	72-61-00
ATT0792	12208	Fixture	Connector, tub flowmeter adaper	528	
ATT0793	12209	Fixture	Accessory drive gear	528	
ATT0794	12210	Fixture	Gearbox main oil pump cover, machine i.d.	528	72-61-00
ATT0795	12211	Vise	General purpose, portable, angle adjustable	528	
ATT0796	12212	Fixture	Hold various gearbox liners/bushings for machining	528	72-61-00
ATT0797	12213	Fixture	Hold various gearbox liners/Bushings for machining	528	72-61-00
ATT0798	12214	Fixture	Hold various gearbox liners/bushings for machining	528	72-61-00
ATT0799	12215	Fixture	Hold various gearbox liners/bushings for machining	528	72-61-00
ATT0800	12216	Fixture	Hold various gearbox liners/bushings for machining	528	72-61-00
ATT0802	12218	Fixture	Hold rear gearbox for machining	528	72-61-00
ATT0803	12219	Fixture	Hold rear gearbox housing to machine tachometer drive	528	72-61-00
ATT0804	12220	Fixture	Hold gearbox for machining plugs	528	72-61-00
ATT0805	12221	Plate	Hold gearbox for machining main oil pump	528	72-61-00
ATT0806	12222A	Plate	Hold gearbox housing for machining pads	528	72-61-00
ATT0806	12222B	Plate	hold gearbox housing for machining pads	528	72-61-00
ATT0807	12223A	Plate	Hold gearbox housing for machining plugs	528	72-61-00
ATT0807	12223B	Plate	Hold gearbox housing for machining plugs	528	72-61-00
ATT0807	12223C	Plate	Hold gearbox housing for machining plugs	528	72-61-00
ATT0808	12224A	Fixture	Hold gearbox housing pad for machining M.O.P. liner	528	72-61-00
ATT0808	12224B	Fixture	Hold gearbox housing pad for machining M.O.P. liner	528	72-61-00
ATT0809	12225	Puller	Remove liners/bushings from gearbox housing	528	72-61-00
ATT0810	12226	Vise	General purpose	528	
ATT0811	12227	Fixture	Hold gearbox housing for machining	528	72-61-00
ATT0812	12229	Fixture	Rear turbine case, CNC	628	
ATT0813	12230	Plate	Hold C-1 stator for machining, obsolete, old milling machine	628	
ATT0814	12231	Fixture	Cage-type fixture, holds compressor stator for machining	228	
ATT0815	12232	Fixture	Hold gearbox rear & front housing fixtures	628	72-61-00
ATT0816	12233	Fixture	Rear gearbox housing, machine liners	628	72-61-00
ATT0817	12234	Fixture	Machine T3 shroud, honeycomb air seal	628	
ATT0818	12235A	Fixture	Machine T4 shroud	628	
ATT0818	12235B	Fixture	Machine T4 shroud	628	
ATT0819	12236	Fixture, cover	Hold T4 shroud	628	



P/N	S/N	Description	Application	Dept	ATA
ATT0820	12237	Fixture	Machine T3 shroud	628	
ATT0821	12238	Fixture, cover	Fixture cover, hold T3 shroud	628	
ATT0822	12239	Fixture	Machine T2 shroud	628	
ATT0823	12240	Fixture, cover	Hold T2 shroud	628	
ATT0824	12228	Fixture	Machine liners for front gearbox housing, CNC	628	72-61-00
ATT0825	12241A	Fixture, cage-type	Top to cage-type fixture, 3rd stage compressor case	628	
ATT0825	12241B	Fixture, cage-type	Bottom of cage-type fixture, 2nd & 3rd stage compressor case	628	
ATT0825	12241C	Fixture, cage-type	Top of cage-type fixture, 2nd stage compressor cage	628	
ATT0826	12242	Fixture, plate	Dual: Enlarge holes front fan case; C-1 airseal & outer ring	628	
ATT0827	12243	Vise	Hold parts, fixtures on CNC machining plate	628	
ATT0828	12244	Fixture	Holds intermediate case bosses for SB5454 machining	628	
ATT0829	12245	Fixture, cage-type	4th stage compressor case	628	
ATT0830	12246	Base plate	Hold vise, parts on CNC plate for machining	628	
ATT0831	12247	Fixture, plate	General purpose, part holding on CNC machine	628	
ATT0832	12248	Fixture, plate	Holds vise, parts for CNC machining	628	
ATT0833	12249	Fixture	Compressor spacer, SB holes	628	
ATT0834	12250	Fixture	Intermediate case skirt bosses	628	
ATT0835	12251	Adapter, holder	-200 bosses, intermediate case	628	
ATT0836	12252	Fixture	#4-5 scavenge pump housing	628	
ATT0837	12253	Fixture	#4-5 scavenge pump cover	628	
ATT0838	12254	Fixture	Indicate scavenge pump housing, obsolete/for lathe	628	
ATT0840	12256	Plate	Cover parts, fixtures on CNC	628	
ATT0841	12257	Fixture	For I.D. of bosses, part-holding	628	
ATT0842	12258	Fixture	For I.D. on bosses, part-holding	628	
ATT0843	12259	Fixture	Tool change holding fixture	628	
ATT0844	12260	Gage, O.C.	Optical comparator gage	256	
ATT0845	12261	Gage, snap	Front hub, high compressor I.D. snap	256	
ATT0846	12262	Gage, bar	14.240 I.D. gage setting bar	256	
ATT0847	12263	Gage, bar	15.450 I.D. gage setting bar	256	
ATT0848	12264	Gage, I.D.	15.450 I.D. gage	256	
ATT0849	12265	Gage, bar	13.200 I.D. gage setting bar	256	
ATT0850	12266	Gage, I.D.	13.200 I.D. gage	256	
ATT0851	12267	Gage, bar	15.589 I.D. gage setting bar	256	
ATT0852	12268	Gage, I.D.	15.589 I.D. gage	256	
ATT0852	12890	Dummy outer race	#4-1/2 bearing and adapter spline runout, low turbine	320	
ATT0853	12269	Gage, bar	15.469 I.D. gage setting bar	256	

P/N	S/N	Description	Application	Dept	ATA
ATT0854	12270	Gage, I.D.	15.469 I.D. gage	256	
ATT0855	12271	Gage, bar	15.419 I.D. gage setting bar	256	
ATT0856	12272	Gage, I.D.	15.419 I.D. gage	256	
ATT0857	12273	Gage, bar	15.493 I.D. gage setting bar	256	
ATT0858	12274	Gage, I.D.	15.493 I.D. gage	256	
ATT0859	12275	Bar	15.4920 rod, setting standard	256	
ATT0860	12276	Bar	15.4700 rod, setting standard	256	
ATT0861	12277	Bar	15.440 rod, setting standard	256	
ATT0862	12278	Bar	14.38211 rod, setting standard	256	
ATT0863	12279	Bar	15.4200 rod, setting standard	256	
ATT0864	12280	NDT machine	Eddy current tester	256	
ATT0865	12281	NDT machine	Eddy current tester, x/y/z plotter	256	
ATT0866	12282	Defectometer	Crack detection	256	
ATT0867	12283	Defectometer	Crack detection	256	
ATT0868	12288	Gage, bar	I.D. measurement, compressor parts	256	
ATT0869	12289	Gage, bar	12-18" I.D. and O.D. measurement	256	
ATT0870	12290	Scale	Moment weight scale, compressor blades	256	
ATT0871	12291	Dummy blade	C-2 blade, standard for scale, -7	256	
ATT0872	12292	Dummy blade	C-2 blade, standard (-9 thru -15)	256	
ATT0873	12293	Dummy blade	C-1 blade, standard (-9)	256	
ATT0874	12294	Dummy blade	C-1 blade, standard (-7)	256	
ATT0875	12298	Scale attachment	Scale weight holder	256	
ATT0876	12299	Scale attachment	Scale weight holder	256	
ATT0877	12300	Scale	Measure weight of C-1 fan blades, -200	256	
ATT0878	12302	Dummy blade	C-1 blade, standard for scale	256	
ATT0878	12468	Dummy bearing housing	Pressure check #2 bearing housing	457	
ATT0879	12303	Riser block	T-1 blade remover	102	
ATT0880	12310	Gage	Check dimension on low compressor blades, -9	258	
ATT0881	12322A	Clamp hose installer	Install clamps on hoses, fire shields, sheetmetal	317	
ATT0881	12322B	Clamp hose installer	Install clamps on hoses, fire shields, sheetmetal	317	
ATT0882	12323A	Hand rivet	Sheetmetal riveting, general use	317	
ATT0882	12323B	Hand rivet	Sheetmetal riveting general use	317	
ATT0883	12328	Riveter jaws	General use, pneumatic rivet gun	317	
ATT0884	12330	Pneumatic rivet gun	General purpose, sheetmetal riveting	317	
ATT0885	12331	Rivet gun	Rivet squeezer, general purpose, sheetmetal	317	
ATT0886	12333	Rivet gun	General purpose, sheetmetal	317	

P/N	S/N	Description	Application	Dept	ATA
ATT0887	12334	Angle drill	60 degree angle drill, general purpose, sheetmetal	317	
ATT0888	12335	Pneumatic rivet gun	General purpose, sheetmetal riveting	317	
ATT0889	12336A	Weight, lapping	Hold bearing seal plates & spacers for lapping	528	
ATT0889	12336B	Weight, lapping	Hold bearing seal plates & spacers for lapping	528	
ATT0889	12336C	Weight, lapping	Hold bearing seal plates & spacers for lapping	528	
ATT0890	12337A	Weight, lapping	hold parts for lapping machine	528	
ATT0890	12337B	Weight, lapping	Hold parts for lapping machine	528	
ATT0891	12338A	Weight, lapping	Hold parts for lapping machine	528	
ATT0891	12338B	Weight, lapping	Hold parts for lapping machine	528	
ATT0891	12338C	Weight, lapping	Hold parts for lapping machine	528	
ATT0892	12339A	Lapping plate	Flat glass plate for lapping parts	528	
ATT0892	12339B	Lapping plate	Flat glass plate for lapping parts	528	
ATT0892	12339C	Lapping plate	Flat glass plate for lapping parts	528	
ATT0894	12345	Rivet hand gun	Installing rivets, sheetmetal	317	
ATT0895	12346	Rivet hand gun	Installing rivets, sheetmetal	317	
ATT0897	12349	Jaw, rivet gun	Jaws for sheetmetal pneumatic rivet squeezer	317	
ATT0898	12350	Jaw, rivet gun	Jaws for sheetmetal pneumatic rivet squeezer	317	
ATT0899	12354	Jaw, rivet gun	Jaws for sheetmetal pneumatic rivet squeezer	317	
ATT0900	12355	Jaw, rivet gun	Jaws for sheetmetal pneumatic rivet squeezer	317	
ATT0901	12356	Jaw, rivet gun	Jaws for pneumatic rivet squeezer, C-1 blades	317	
ATT0902	12357	Jaw, rivet gun	Jaws for pneumatic rivet squeezer, yokes	317	
ATT0903	12358	Jaw, rivet gun	Jaws for sheetmetal pneumatic rivet squeezer	317	
ATT0904	12359	Jaw, rivet gun	Jaws for sheetmetal pneumatic rivet squeezer	317	
ATT0905	12360	Jaw, rivet gun	Jaws for pneumatic rivet squeezer, airseal 2E006	317	
ATT0906	12361	Jaw, rivet gun	Jaw for sheetmetal pneumatic rivet squeezer	317	
ATT0907	12363	Vane remover/installer	Install/Remove 8th stage vanes	317	
ATT0908	12365	Rivet bucking bar	Riveting, ring assembly seal F006	317	
ATT0909	12371	Bearing installer	D9 #5 bearing housing installer	317	
ATT0910	12372	Cover, bearing installer	Cover to #5 bearing housing installer	317	
ATT0911	12373	Press fixture	S/B 5879, fairing housing, intermediate case	317	
ATT0913	12375A	Plating fixture	For chrome plating bevel gear	614	
ATT0913	12375B	Plating fixture	For chrome plating bevel gear	614	
ATT0913	12375C	Plating fixture	For chrome plating bevel gear	614	
ATT0914	12383	Oil pump, hydraulic	Remove intermediate case skirt	317	
ATT0915	12384	Location fixture	Drill guide for intermediate case skirt	317	
ATT0916	12385	Fixture	#6 bearing, exhaust case	317	

P/N	S/N	Description	Application	Dept	ATA
ATT0917	12386	Fixture	#6 bearing exhaust case, -200	317	
ATT0918	12387	Installation tool	3.740-3.770, install #6 bearing air seal	317	
ATT0920	12398	Anvil, riveting	C-1 stator air seal ring	217	
ATT0921	12399	Anvil, riveting	C-1 stator air seal ring	217	
ATT0922	12400	Anvil, riveting	C-1 stator air seal ring	217	
ATT0923	12401	Anvil, riveting	C-2 stator air seal ring	217	
ATT0924	12402	Anvil, riveting	C-3 stator air seal ring	217	
ATT0927	12420	Fixture, plating	Adjustable fixture for various blades, high compressor	614	
ATT0928	12421A	Fixture, plating	Adjustable fixture for various spacers, high compressor	614	
ATT0928	12421B	Fixture, plating	Adjustable fixture for various spacers, high compressor	614	
ATT0929	12422A	Fixture, plating	Fixture for plating various nuts and bolts	614	
ATT0929	12422B	Fixture, plating	Fixture for plating various nuts and bolts	614	
ATT093	12426A	Fixture, plating	For plating various tierods, turbine and high compressor	614	
ATT0930	12423	Fixture, plating	For plating test strips, chemical lab	614	
ATT0931	12424	Fixture, plating	For plating test strips, large size, chemical lab	614	
ATT0932	12425	Fixture, plating	C-8 stator	614	
ATT0933	12426B	Fixture, plating	For plating various tierods, turbine and high compressor	614	
ATT0934	12427A	Fixture, plating	C-13 hub N2 compressor	614	
ATT0934	12427B	Fixture, plating	C-13 hub N2 compressor	614	
ATT0934	12427C	Fixture, plating	C-13 hub N2 compressor	614	
ATT0934	12427D	Fixture, plating	C-13 hub N2 compressor	614	
ATT0935	12428A	Fixture, plating	Stators and rings, compressor	614	
ATT0935	12428B	Fixture, plating	Stators and rings, compressor	614	
ATT0935	12428C	Fixture, plating	Stators and rings, compressor	614	
ATT0935	12428D	Fixture, plating	Stators and rings, compressor	614	
ATT0936	12429	Fixture, plating	Plating high turbine shaft	614	
ATT0937	12430	Fixture, plating	Plating high turbine shaft	614	
ATT0938	12431	Fixture, plating	High turbine	614	
ATT0939	12432A	Fixture, plating	Plating stators, various	614	
ATT0939	12432B	Fixture, plating	Plating stators, various	614	
ATT0939	12432C	Fixture, plating	Plating stators, various	614	
ATT0940	12433A	Fixture, plating	Front turbine case	614	
ATT0940	12433B	Fixture, plating	Front turbine case	614	
ATT0941	12434A	Fixture, plating	13th stage air seal ring	614	
ATT0941	12434B	Fixture, plating	13th stage air seal ring	614	
ATT0941	12434C	Fixture, plating	13th stage air seal ring	614	

P/N	S/N	Description	Application	Dept	ATA
ATT0942	12435A	Fixture, plating	Shield and tube assembly, bazooka	614	72-53-30
ATT0942	12435B	Fixture, plating	Shield and tube assembly, bazooka	614	72-53-30
ATT0942	12435C	Fixture, plating	Shield and tube assembly, bazooka	614	72-53-30
ATT0943	12436	Fixture, plating	T-3 disk	614	
ATT0944	12437A	Fixture, plating	Shield and tube assembly, bazooka, -200	614	
ATT0947	12440A	Fixture, plating	Bushings, diffuser case	614	
ATT0947	12440B	Fixture, plating	Bushings, diffuser case	614	
ATT0949	12422A	Fixture, plating	C-9 through C-12 Disks	614	
ATT0949	12422B	Fixture, plating	C-9 through C-12 disks	614	
ATT0950	12443	Fixture, plating	Hubs, front and rear, C-4	614	
ATT0952	12445	Fixture, plating	#4 bearing sealing, diffuser case	614	
ATT0954	12447A	Fixture, plating	Nickel and chrome plate LPT shaf	614	
ATT0954	12447B	Fixture, plating	Nickel and chrome plate LPT shaft	614	
ATT0954	12447C	Fixture, plating	Nickel and chrome plate LPT shaft	614	
ATT0955	12448A	Fixture, plating	LPT shaft, -200	614	
ATT0955	12448B	Fixture, plating	LPT shaft, -200	614	
ATT0956	12499A	Fixture, plating	Rear hub, chrome and strip	614	
ATT0956	12499B	Fixture, plating	Rear hub, chrome and strip	614	
ATT0956	12499C	Fixture, plating	Rear hub, chrome and strip	614	
ATT0958	12501	Fixture, plating	#5 bearing housing	614	
ATT0965	12452A	Fixture, plating	Plating cover bleed valve	614	
ATT0965	12452B	Fixture, plating	Plating cover bleed valve	614	
ATT0965	12452C	Fixture, plating	Plating cover bleed valve	614	
ATT0967	12454	Fixture, plating	Plating #5 Bearing housing, adaptable	614	
ATT0970	12457A	Fixture, plating	#4 & #5 scavenge pump gear	614	
ATT0970	12457B	Fixture, plating	#4 & #5 Scavenge pump gear	614	
ATT0973	12460	Wrench	#3 Bearing outer race retaining nut wrench to check parts	457	
ATT0974	12463	Wrench	#2 bearing outer race retaining nut, check parts	457	
ATT0975	12464A	Thread chasing nut	#2 bearing outer race retaining nut,separable & integr.conf	457	
ATT0975	12464B	Thread chasing nut	#2 bearing outer race retaining nut,separable & integr.conf	457	
ATT0976	12465	Dummy stator	8th stage compressor stator for inspection	457	
ATT0977	12466	Bolt, cone	Engine mount bushing alignment checker	457	
ATT0978	12467	Inspection stand	Intermediate case stand, -100	457	
ATT0980	12469	Lift bar	Intermediate case lifting bar	234	
ATT0981	12470	Lift bar & cable	Intermediate case lifting fixture	234	
ATT0982	12471	Sling	Universal lift sling, intermediate and diffuser case	457	

P/N	S/N	Description	Application	Dept	ATA
ATT0983	12472	Lift fixture	Diffuser module lifting fixture	457	
ATT0984	12473	Gauge	Grinding wheel squareness check gauge	457	
ATT0985	12474	Fixture	Diffuser case disassembly/assembly/inspection fixture, mobile	457	
ATT0986	12475	Fixture	Diffuser case disassembly/assembly/insp. fixture-stationary	457	
ATT0987	12476A	Stand	Intermediate/Diffuser assembly/dissy/insp station	457	
ATT0987	12476B	Stand	Intermediate/diffuser assembly/diss'y/insp station	457	
ATT0988	12481	Plate	Bearing press plate for press machine	457	
ATT0989	12461	Thread chasing nut	#3 bearing outer race retaining nut, integral housing config	457	
ATT0990	12462	Thread chasing nut	#3 bearing outer race retaining nut, separable housing confi	457	
ATT0991	12487	Fixture	Grinding machine fixture, valve body	428	75-09-00
ATT0992	12488	Fixture	Housing assembly bleed valve, grinding fixture	428	75-32-01
ATT0993	12489	Fixture	Housing, bleed valve, grinding machine fixture	428	75-32-01
ATT0995	12491	Fixture	Various liners, expansions joints & sleeves, 8th & 13th stg	428	
ATT0996	12492	Fixture	Bleed valve cover housing assembly, grinding mach. fixture	428	
ATT0997	12493	Fixture	Support fuel nozzle, flange seal groove	428	73-13-01
ATT0998	12494	Fixture	Support fuel nozzle, support sealing face	428	73-13-01
ATT0999	12495	Fixture	Support fuel nozzle, machine radius	428	73-13-01
ATT1000	12496A	Fixture	Tube assembly of air supply #4 bearing	428	72-37-11
ATT1000	12496B	Fixture	Tube assembly of air supply #4 bearing	428	72-37-11
ATT1000	12496C	Fixture	Tube assembly of air supply #4 bearing	428	72-37-11
ATT1001	12497	Plate fixture	Housing, gearbox drive towershaft bearing	428	72-34-10
ATT1002	12498	Fixture	Nut fuel nozzle	428	73-13-02
ATT1003	12505	Fixture	T-1 Disk, increase slots	328	72-52-02
ATT1004	12506	Fixture	Exhaust struts, machine spherical bearing end	328	72-54-33
ATT1005	12507	Fixture	#5 bearing spacer, machine I.D.	328	72-52-14
ATT1006	12508	Fixture	#5 bearingt air seal I.D., no knife edge	328	72-52-00
ATT1008	12510	Plate	Part holding plate, not in use	328	
ATT1009	12511	Fixture	SB 4864 Gearshaft LPT	328	
ATT10097	12509	Fixture	#5 bearing seal I.D., with knife edge	328	72-52-10
ATT1010	12512	Fixture	SB 1954 #4-1/2 nut LPT	328	
ATT1011	12513	Fixture	Check runout T3 & T4 Disks, LPT	328	72-53-00
ATT1012	12514	Fixture	T4 hub assembly journal repair	328	
ATT1013	12515	Fixture	T2 Disk, Multipurpose and SB5767	328	72-53-16
ATT1014	12516	Fixture	4-1/2 Nut flatness check	328	
ATT1015	12517	Fixture	SB 6196, #5 bearing air seal	328	72-52-10
ATT1016	12518	Fixture	#4-1/2 spacer, restore flatness, machine face, HPT	328	72-52-00

P/N	S/N	Description	Application	Dept	ATA
ATT1017	12522	Fixture	Shrouds, machine face	328	72-53-00
ATT1018	12523	Fixture	#4-1/2 bearing spacer, polish I.D.	328	72-52-83
ATT1019	12524	Fixture	Increase slots, #4-1/2 nut	328	
ATT1020	12525	Fixture	Part holder, machine groove, #5 bearing support	328	72-52-11
ATT1021	12526A	Fixture	SB 6110 for PN 809354	328	
ATT1021	12526B	Fixture	SB 6110 for PN 753814	328	
ATT1022	12527	Gage, gap check	Check gap on seal ring SB 5573 repair	328	72-52-00
ATT1023	12528	Fixture	Spacers, assembly, turbine rotor	328	72-53-00
ATT1024	12529	Fixture	Exhaust inner case, C-12, strut pin holes	328	72-54-00
ATT1025	12530	Fixture	Exhaust case bosses, strut pin holes	328	72-54-00
ATT1026	12531	Fixture	Exhaust case bosses, strut pin holes, -200	328	72-54-00
ATT1027	12532A	Fixture	Machine various diameters, shield & tube	328	72-53-00
ATT1027	12532B	Fixture	Machine various diameters, shield & tube	328	72-53-00
ATT1028	12533	Fixture	#6 bearing housing, helicoil repair	328	72-54-00
ATT1029	12534	Fixture	SB 2244, Tube removal, outer case	328	72-54-00
ATT1030	12535	Fixture	SB 6242, shield assembly repair	328	72-54-84
ATT1031	12536	Fixture	#6 pump bushing repair	328	72-54-00
ATT1032	12790	Wrench, socket	Exhaust case, plugs	320	72-54-00
ATT1033	12538A	Fixture	SB 2244 Pin installation	328	72-54-00
ATT1033	12538B	Fixture	SB 2244, Pin installation	328	72-54-00
ATT1033	12538C	Fixture	SB 2244, Pin installation	328	72-54-00
ATT1034	12539	Fixture	SB 4711, drill holes Inner case	328	72-54-00
ATT1035	12785	Lifting tool	Disassembly, #6 bearing housing, high turbine	320	
ATT1036	12542	Fixture	Remove nut plate from honeycomb segment	328	72-54-00
ATT1037	12543	Fixture	Machine oversize bushing, duct and fairing	328	72-54-00
ATT1038	12544	Disk, dummy	Dummy disk, broach T4 blade	328	72-53-00
ATT1039	12545	Fixture	Machine seals on shrouds	328	72-53-00
ATT1040	12546	Fixture	Machine shroud lugs	328	72-53-00
ATT1041	12541	Drift	Install #6 pump bushing	328	72-54-00
ATT1042	12547	Fixture	Repair rear hub snap O.D.	328	
ATT1043	12549	Electronic Indicator	Measure spacers, O.D., low compressor spa	256	
ATT1044	12550	Electronic indicator	Measure spacers, I.D., low compressor	256	
ATT1045	12551	Fixture	T-1 shaft ring hole	328	
ATT1046	12552A	Fixture, hole guide	Drill holes on #5 support ring holder	328	72-52-11
ATT1046	12552B	Fixture, hole guide	Drill holes on #5 support ring holder	328	72-52-11
ATT1047	12553	Fixture, 3-jaw	Outer lug air seal	328	72-52-00

P/N	S/N	Description	Application	Dept	ATA
ATT1048	12554	Fixture, 3-jaw	Inner lug air seal	328	72-52-00
ATT1049	12555	Fixture	Machine lugs on T4 shroud	328	
ATT1050	12556	Installation tool	Check pin installation on T-1 shaft plug	328	72-52-00
ATT1052	12558	Fixture	Remove hard coat, exhaust probes	328	
ATT1053	12559	Fixture	Install pins, rear turbine case, four pieces	328	72-53-00
ATT1054	12560	Fixture	Increase lug dimension, T-2 vane, SB 6245	328	
ATT1055	12561	Fixture	Modification of shield, turbine	328	72-52-00
ATT1056	12563	Fixture	Grind face, manifold	328	72-37-00
ATT1057	12564	Fixture	Increase slot on high turbine nut	328	72-52-17
ATT1058	12566	Fixture	LPT outer case assembly, machine vane lug	328	72-53-51
ATT1059	12567	Fixture	#6 bearing retaining plate slot repair #6	328	72-54-16
ATT1060	12568	Fixture, plate & cover	Machine air seal, 3rd 7 4th stage shroud, -200	328	
ATT1061	12568	Fixture, plate & cover	machine airseal, 2nd & 3rd stage shroud	328	
ATT1062	12570	Fixture, plate & cover	Machine Airseal, 3rd & 4th stage, baby 8	328	
ATT1063	12571	Fixture, cover	Machine T-4 airseal, -200	328	
ATT1064	12572	Fixture	Machine T-3 Airseal inner ring	328	
ATT1065	12573	Fixture	Machine T-4 airseal inner ring	328	
ATT1066	12574	Fixture	Remove pins, T-2 shroud ass'y, Locating fixture and cover	328	72-53-00
ATT1067	12575A	Fixture	Remove pins, T-3 shroud assembly,location fixt.& cover	328	72-53-00
ATT1067	12575B	Fixture	Remove pins, T-3 Shroud assembly, Locating fixt.& cover	328	72-53-00
ATT1068	12576	Fixture	T-3 shroud, Spacer to fit part over lathe plate snap	328	72-53-57
ATT1069	12577	Fixture, cover	T-2 shroud assembly inner	328	72-53-00
ATT1070	12578	Spacer	Adjust for different size shroud airseals	328	72-53-00
ATT1071	12579	Fixture	Unidentified, Remove shroud pins, locating fixt.& 2 covers	328	72-53-00
ATT1072	12586	Fixture	T4 shroud, machine welded lugs, fixture and cover	328	72-53-00
ATT1073	12587	Fixture	Broach second stage vanes	328	
ATT1075	12589	Fixture	Adjust heighton drill press, various parts	328	
ATT1076	12590	Fixture, holding	Hold parts for EDM machine (not in use)	328	
ATT1077	12591	Vise	General purpose, 5 1/2" jaws	328	
ATT1078	12592	Vise	General purpose parts holding	328	
ATT1079	12593	Angle plate	Parts holding, various parts machining	328	
ATT1080	12598	Fixture	Machine I.D. seal & bearing bore, #6 bearing hsg, exh.case	328	72-54-17
ATT1081	12595	Base plate	Various parts holding	328	
ATT1082	12596	Gaging plate	Rear turbine case, check wall of groove	328	
ATT1083	12597	Surface plate	Gen'l purpose/cleaning parts (Plate doesn't need calibration	328	
ATT1084	12599	Fixture	Machine ID seal & brg.bore, -200, #6 bearing hsg,exh.case	328	72-54-00



P/N	S/N	Description	Application	Dept	ATA
ATT1085	12600	Fixture, plate	Machine #2 bearing housing, I.D. bore, plus various parts	328	
ATT1086	12601	Fixture, plate	machine #6 bearing housing, exhaust case	328	72-54-00
ATT1087	12602	Vise	General parts holding for milling machine	328	
ATT1088	12603	Fixture	Grinding ID & shoulder on coupling turbine shaft	428	72-34-21
ATT1089	12604	Fixture	Compressor rear hub, grind OD & journal, check concentricity	428	72-36-18
ATT1090	12605	Fixture	Grind ID, shoulder and bore, coupling turbine shaft	428	72-34-21
ATT1091	12606	Fixture	Grind ID, manifold assembly bleed rear	428	72-71-13
ATT1093	12608	Fixture, plate	Adaptor plate for grinding machine, various parts	428	
ATT1094	12609	Fixture, plate	Adaptor plate for grinding machine, various parts	428	
ATT1095	12610	Fixture	Machine ID chamfer, 13th stage liner expansion joint	428	72-71-15
ATT1096	12611	Fixture	Machine (grind) labyrinth seal	428	
ATT1097	12612	Fixture	Attachment, Grind Intermed.&Diff.case liners, bleed valveHsg	428	
ATT10974	12588	Fixture	Broach 4th stage vanes	328	
ATT1099	12614	Fixture	SB on tower shaft housing, grind face	428	
ATT1100	12615	Fixture	Attachment, grinding external OD, low shaft housing	428	
ATT1102	12617	Fixture	Gear bevel, grind journal face	428	72-34-31
ATT1104	12619	Fixture	#5 bearing housing SB, grinding	428	
ATT1105	12620	Fixture	Fuel nozzle SB, grinding	428	
ATT1106	12621	Fixture	Grind nozzle nut O.D.	428	72-13-01
ATT1107	12622	Fixture, plate	#5 bearing housing, SB, milling	428	
ATT1108	12623	Fixture, plate	#6 bearing housing, #3 bearing housing, mill various parts	428	
ATT1109	12624	Block (bar)	Elevate parts, grinding machine	428	
ATT1110	12625	Fixture	Grind OD on bosses, exhaust case	428	
ATT1111	12626A	Fixture	Grind OD on outer bearing race, various parts	428	
ATT1111	12626B	Fixture	Grind OD outer bearing race, various parts	428	72-34-00
ATT1112	12635	Knocker	Disk and various assembly, #2-3 Bearing, not in use	420	72-34-00
ATT1113	12636	Adapter, Sweeney	Not in use, no PWA or SWE #	420	72-34-00
ATT1114	12638	Puller	Not in use, on #2 tool cart	420	72-34-00
ATT1115	12640	Heat gun	#2 and #3 bearing housing assembly/dissy	420	72-34-00
ATT1116	12641	Nut remover	Assembly, #3 bevel gear	420	72-34-00
ATT1117	12649	Pressure check gage	Check pressure on diffuser case fuel nozzles	420	72-37-00
ATT1119	12664	Flowmeter	Airflow check on exhaust and diffuser cases	420	72-37-00
ATT1120	12667	Flowmeter adaptor	Airflow check on exhaust case	420	72-54-00
ATT1121	12668	Flowmeter adapter	Pressure check on #6 pump, exhaust case	420	72-54-00
ATT1122	12669	Enerpac pump	Disassembly of #2 bearing	420	72-34-00
ATT1123	12671	Hydraulic pusher	Universal assembly/disassembly	420	

P/N	S/N	Description	Application	Dept	ATA
ATT1124	12672	Pusher, hydraulic	Universal assembly/disassembly	420	
ATT1124	12674	Pressure check	Fuel nozzle and manifold pressure check	420	72-37-00
ATT1128	12680	Vise	General use	420	
ATT1129	12683	Lifting eye	Lift diffuser case	420	72-37-00
ATT1130	12687	Wrench, ratchet	General purpose, torque 750 in/lbs	420	
ATT1131	12688A	Wrench, ratchet	General use, torque 150 in./lbs	420	
ATT1131	12688B	Wrench, ratchet	General use, Torque 150 in./lbs	420	
ATT1132	12691	Wrench	Box/Open end, 1-1/4", general use	420	
ATT1134	12697	Adapter, wrench	Snap-on socket wrench adapter, 3/4"	420	
ATT1135	12698	Adapter, wrench	(open) crossfoot wrench adapter	420	
ATT1136	12699	Adapter, wrench	Ratchet wrench adapter	420	
ATT1137	12700A	Arm, trunnion	Hold intermediate case in stand	420	72-34-00
ATT1137	12700B	Arm, trunnion	Hold intermediate case in stand	420	72-34-00
ATT1138	12701A	Arm, trunnion	Hold intermediate case in stand	420	72-34-00
ATT1138	12701B	Arm, trunnion	Hold intermediate case in stand	420	72-34-00
ATT1139	12702	Adapter, engine stand	Crank, turn intermediate case	420	72-34-00
ATT1140	12703A	Engine stand	Hold intermediate case	420	72-34-00
ATT1140	12703B	Engine stand	Hold intermediate case	420	72-34-00
ATT1141	12704	Lift cabel	Lift intermediate and diffuser cases	420	72-34-00
ATT1142	12706	S hook	Attach to hoist to lift intermediate case	420	72-34-00
ATT1143	12710	Cable, lifting	Lift heater used on intermediate case	420	
ATT1145	12713	Fixture, plate	Cover plate, pressure check intermediate case	615	72-34-00
ATT1146	12714	Nut	Hold block for presure check, intermediate case	420	72-34-00
ATT1147	12718	Plug, pressure check	plug #2 drain tube, intermediate case	615	72-34-00
ATT1148	12721A	Fixture & cover	Spacer rear compressor drive turbine shaft	328	72-52-00
ATT1148	12721B	Fixture & cover	Spacer rear compressor drive turbine shaft	328	72-52-00
ATT1149	12728	Cover, dummy	Pressure check inlet case bearing housing	615	72-23-00
ATT1150	12733	Cover, dummy	Pressure check inlet case, connector	615	72-23-00
ATT1151	12738	Plug	Pressure check anti-icing elbow	615	
ATT1152	12741	Fixture	#4 & #5 Nozzle oil flow check, diffuser case	615	72-37-00
ATT1153	12749	Adapter	Flow check garbox nozzle	615	
ATT1154	12750	Fixture, valve check	intermediate case, scupper valve check	615	72-34-00
ATT1155	12753	Fixture	Pressure check hub, high compressor	615	72-36-00
ATT1156	12754	Adapter	Cover, pressure check hub, high compressor	615	72-36-00
ATT1157	12757	Sleeve, pressure check	#4-1/2 & #6 bearing tube pressure check (bazooka)	615	72-53-00
ATT1158	12758	Sleeve, pressure check	#4-1/2 & #6 bearing tube pressure check (bazooka)	615	72-53-00

P/N	S/N	Description	Application	Dept	ATA
ATT1159	12760	Sleeve, pressure check	#4-1/2 & #6 bering tube pressure check, universal eng.appl.	615	72-53-00
ATT1160	12761	Fixture, pressure test	#4 carbon seal ring pressure check	615	
ATT1161	12766	Fixture	Pressure check diffuser case, c/w Shop Info Bulletin 95-03	615	
ATT1162	12767	Cover	Rear diffuser carbon seal, pressure check, c/w SIB 95-03	615	
ATT1165	12776	Impact driver	Removal & Installation, torque screws, high turbine	320	
ATT1167	12781	Socket/screwdriver	Tighten screw inside #6 outer race, disassembly, high turb	320	
ATT1170	12788	Wrench, adapter	Torque 4500 lb. in., universal usage	320	72-54-00
ATT1173	12791	Removal tool	Knockout seat, ball housing, exhaust case	320	72-54-00
ATT1176	12798A	Seal remover	N2 Tach, gearbox, Installation/removal tool	520	72-61-00
ATT1176	12799B	Seal remover	N2 tach, gearbox, installation/removal tool	520	72-61-00
ATT1177	12800	Indicator stand	Runout, rear turbine disk	320	72-53-00
ATT1178	12801	Stand, indicator	Runout, Rear turbine disk	320	72-53-00
ATT1179	12804	Fixture	Hold tierods for torque and stretch T4	320	72-53-00
ATT1180	12805	Fixture	Hold tierods for torque and stretch T4, -200	320	72-53-00
ATT1181	12809	Knocker	Remove spur gear, low turbine	320	
ATT1182	12810	Knocker	Remove bazooka (Tube & shield), low turbine	320	
ATT1184	12540	Fixture	Align #6 pump bushing	328	72-54-00
ATT1185	12695A	PS3 Tube protector	Disassembly intermediate case, protect tube	420	72-34-00
ATT1185	12695B	PS3 Tube protector	Disassembly intermediate case, protect tube	420	72-34-00
ATT1185	12695C	PS3 tube protector	Disassembly intermediate case, protect tube	420	72-34-00
ATT1185	12695D	PS3 tube protector	Disassembly intermediate case, protect tube	420	72-34-00
ATT1186	12711	Fixture	Hold/turn diffuser case, for assy/dissy, mobile	420	72-37-00
ATT1187	12813	Puller	Jackscrew to remove T3 disks, low turbine	320	72-53-00
ATT1189	12822	Puller	Remove #6 balance bearing, Proto 4056-C tool	320	
ATT1190	12826	Lifting Eye	Lift long shaft, low turbine	320	
ATT1191	12830	Lifting eye	Screws into thin end low turbine shaft for lifting	320	
ATT1193	12843A	Torque tool	Torque #6 spacers, -200	320	
ATT1193	12843B	Torque tool	Torque #6 spacers, -200	320	
ATT1194	12844	Runout fixture	Check runout, exhaust case	102	
ATT1195	12850	Nut remover	Remove #5 nut, high turbine	319	
ATT1196	12847	Puller	Remove #5 balance bearing	319	
ATT1197	12855A	Housing	Shoes, hold low turbine shaft for runout check	320	72-53-00
ATT1197	12855B	Housing	Shoes, for holding low turbine shaft, runout check	320	72-53-00
ATT1198	12856	Housing	Shoe, for holding low turbine shaft, runout check	320	72-53-00
ATT1199	12858	Bar, runout check	Runout check bar for low turbine shaft, attach to fixture	320	72-53-00
ATT1200	12859A	Sleeve	No. 4-1/2 bearing spacer sleeve, for low turbine shaft, pit	320	72-53-00

P/N	S/N	Description	Application	Dept	ATA
ATT1200	12859B	Sleeve	No. 4-1/2 bearing spacer sleeve, for low turbine shaft, pit	320	72-53-00
ATT1201	12862A	Trunnion arm	Turn intermediate case	102	72-34-00
ATT1201	12862B	Trunnion arm	Turn Intermediate case	102	72-34-00
ATT1202	12863A	Trunnion arm	Turn intermediate case	102	72-34-00
ATT1202	12863B	Trunnion arm	Turn intermediate case	102	72-34-00
ATT1203	12864A	Trunnion arm	Turn intermediate case	102	72-34-00
ATT1203	12864B	Trunnion arm	Turn intermediate case	102	72-34-00
ATT1204	12865A	Crow's feet	3/4" open end wrench, adapter	320	
ATT1204	12865B	Crow's feet	3/4" open end wrench, adapter	320	
ATT1207	12883	Lifting eye	Remove rear balance fixture, low turbine	319	72-53-00
ATT1208	12884	Lifting eye	Rear assembly fixture, low turbine	319	72-53-00
ATT1210	12888A	Wrench	For torque and stretch, low turbine	320	72-53-00
ATT1210	12888B	Wrench	For torque and stretch, low turbine	320	72-53-00
ATT1210	12888C	Wrench	For torque and stretch, low turbine	320	72-53-00
ATT1211	12889	Wrench	Adapter, multipurpose, low turbine	320	
ATT1212	12891A	Pry bar	Remove vanes, low turbine	320	
ATT1212 12891B		Pry bar	Remove vanes, low turbine	320	
ATT1213	12892	Pliers, snap ring	Remove -200 spacer on low turbine shaft	320	
ATT1217	12944	Pump, hydraulic	Low turbine	320	72-53-00
ATT1219	12955	Adapter, lift & load	3rd & 4th stage turbine nozzle guide vanes	320	72-53-00
ATT1220	12960	Adapter, lift & load	2nd stage turbine nozzle guide vanes	320	72-53-00
ATT1223	12961	Adapter, lift & load	2nd stage turbine nozzle guide vanes	320	72-53-00
ATT1224	12967	Fixture	Bracket assembly, machine nickel plated coating	528	71-02-01
ATT1225	12972	Plate, hold disk	T2 balance fixture	319	72-53-00
ATT1226	12973	Handle, balance fixture	T2 Turbine disk balance	319	72-53-00
ATT1228	12974	Gage	Check dimension low compressor blades, FedX, -7B	256	
ATT1249	13063A	C-1 dummy	Assembly, C-1 hub	121	
ATT1249	13063B	C-1 Dummy	Assembly, C-1 hub	121	
ATT1250	13066	Fixture, lifting	Lifting, turbine T4 disk	319	
ATT1251	13069	Height stand	Precision stand, measuring instrument	319	
ATT1254	13086	Plug, hold down	4th stage turbine, used w/balance plate PWA12579	319	
ATT1263	13099B	Tool plate	#2 bearing, prevent slippage of tower shaft	420	
ATT1280	13164	Go, no go gage	Hot section, mate w/cold section, 4.1870	121	
ATT1282	13169	Alignment tool	Oil press transfer tube	102	
ATT1283	13171	Wrench	1-3/8" Proto socket wrench, disassembly	102	
ATT1284	13172	Wrench	2" Proto socket wrench, general disassembly use		

P/N	S/N	Description	Application	Dept	ATA
ATT1300	13194	Spacer, dummy	#6 spacer, balance check, -200 low turbine	319	
ATT1316	13230	Holder	Manifold legs, rework/overhaul, accessory	616	
ATT1317	13235	Adapter, pressure test	Fuel oil cooler assembly, fuel-out port	616	
ATT1318	13236	Set tool	Set PRVC, pressure ration billed control assembly	616	
ATT1319	13238	Fixture	Fuel nozzle test stand	616	
ATT1320 13240		Puller	Remove filter on fuel control	616	
ATT1321	13242	Wrench	Fuel nozzle retaining nut	616	
ATT1322	13243	Wrench	Fuel nozzle retaining nut	616	
ATT1323	13245	Wrench & handle	Breaker bar, fuel nozzle retaining nut	616	
ATT1324	13251	Housing, cradle	Balance and concentricity check, turbine	319	
ATT1325	13254	Housing, cradle	Balance and concentricity check, turbine	319	
ATT1326	13255A	Housing, cradle	Balance and concentricity check, low turbine	319	
ATT1326	13255B	Housing, cradle	Balance and concentricity check, low turbine	616	
ATT1327	13257	Ring, concentricity	Low turbine -200 shaft spline runout	616	72-53-00
Att1328	13258	Fixture	Grinding fixture to manufacture PWA45202 balance sleeve	528	
ATT1329	13259	Fixture	Measure flange, no.6 bearing housing	428	
ATT1389	13381	Fixture	Shield Tube		
ATT1393	13391	CHORDAL GAGE	INSP.BLADES AND VANES	233B	
ATT1394	13392	CHORDAL GAGE	INSP.	233B	
ATT1395	13393	CHORDAL GAGE	INSP.BLADES AND VANES	233B	
ATT1396	13394	CHORDAL GAGE	INSP.BLADES AND VANES	233B	
Att1397	13395	SLOTS Fixture	To make repair on part#5000155-01 and 798220	628	72-33-80
ATT1402	13402	FIXTURE	NOZZLE (WELDING)	612	
ATT1404	13404	LPT RETAINER			72-53-00
ATT1405	13408	RUNOUT COUPLING	STUB SHAFT		72-54-00
ATT1406	13414	FIXT, MACHINE PLATE, DISK	TO MACHINE DISKS ON THE CNC	228	72-36-00
ATT2324	12795	Tube, flow check	Pressurization & leak check tube for gage, PT7 probe	320	
ATT2325	4700	HPC Vacuum/Pressure Check	To Check Compressor in Assy stage Check 01	136	72-36-00
ATT2326	12796	Engine support	Jet Cell	102	72-00-00
ATT2327	13409	Holding Plates	High Turbine	152	72-52-00
ATT2328	AT001	C7 DISK PULLER		102	
ATT2329	AT001	LPT REMOVAL TOOL -200		102	
ATT2330	4523	RETAINING PLATE	TO CHECK NGV OUTER SUPPORT	251	72-51-

P/N	S/N	Description	Application	Dept	ATA
ATT2331	12461	#3 Brg OR Thread Chaser	Integral #3 Brg Hsg Outer Retaining Nut thread burr removal	234	72-34-34
ATT2332	12462	#3 Brg OR Thread Chaser	Separable #3 Brg Hsg OR Ret. Nut thread burr removal	234	72-34-34
ATT2333	AT1013	CHORD GAGE	236B	236B	72-33-00
ATT2334	0126-1	HP Air Nozzle & Clamp	Inject HP air -200 Intrm. Case Towershaft cavity to clean	234	72-34-01
ATT2336	AT1011	CHORD GAGE	236B	236B	72-33-00
ATT23377G		LPC HYDRAULIC CHUCK	ASSY	133	72-33-00
ATT2338	AT3447	CHORD GAGE	233B	233B	72-33-00
ATT2340	12245	Fuel nozzle fixture			
ATT2341		Fuel Manifold air flow ck	to check airflow on Fuel Manifold for carbon clogs	420	72-37-00
ATT2341	13410	Sling		121	
ATT2342	01	Sling (Welding)	Lifting Sling	612	
ATT2342	13411	sling		611	
ATT2343	03	Sling (Diffuser)	Lift Diffuser in Machine Shop 500lbs Test	627	
ATT2344	524	Sling (MACHINE SHOP)	LIFTING FIXTURE	627	
ATT2345		HPT rivet removal fixture	To remove rivets from the HPT module	102	
ATT2346	N/A	OIL PUMP HSG FIXTURE	INSTALLING SLEEVE IN HSG PER REP. 13	628	72-37-88
ATT2347	AT3548	C-8 Puller E.O.	Compressor C-8 removal on hot section	136	72-36-00
ATT2348		T-1 Plate	To Hold the HPC stack to CW E.O.	136	72-36-00
ATT2349		C-8 Plate	To hold the C-8 to C.W. E.O.	136	72-36-00
ATT2350		C-9 Plate	To hold HPC stack to C.W. E.O.	136	72-36-00
ATT2351		INTERMEDIATE THREAD TOOL	#2 BRG HOUSING CHASE THREAD TOOL	234	72-34-00
att2353	nsn	Hydraulic hose	de-cooking machine	616	72-00-00
ATT2356		SQUEEZER S/B 6429	TO SQUEEZE THE O-RINGS ON THE TIERODS FOR S/B 6429 AT ASSY	120	72-33-00
ATT2357		SNAP RING PLIERS	S/B 6429 TIEROD O-RING REMOVER LPC	120	72-33-00
ATT2359		WRENCH S/B 6429	WRENCH FOR REAR TIERODS PER S/B 6429 12 SOCKETS/12 POINT	120	72-33-00
ATT2360		EXHAUST RUNOUT STAND	aSSY	154	72-54-00
ATT2361		EXHAUST RUN OUT	ASSY/DISSY	154	72-54-00
ATT2362		EXHAUST RUNOUT STAND	ASSY	154	72-54-00

P/N	S/N	Description	Application	Dept	ATA
ATT2363		EXHAUST RUNOUT STAND	ASSY	154	72-54-00
ATT2364A		LPT BUILD UP STAND	ASSY	153	72-53-00
ATT2364B		LPT FRONT BALANCE FIXTURE	BALANCE	119	72-53-00
ATT2365A		LPT BUILD UP STAND	ASSY	153	72-53-00
ATT2365B		LPT FRONT BALANCE FIXTURE	BALANCE	119	72-53-00
ATT2366A		LPT BUILD UP STAND	ASSY	153	72-53-00
ATT2366B		LPT FRONT BALANCE FIXTURE	ASSY	153	72-53-00
ATT2367A		LPT BUILD UP STAND	ASSY	153	72-53-00
ATT2367B		LPT FRONT BALANCE FIXTURE	BALANCE	119	72-53-00
ATT2368		LPT SHAFT/T2 RUNOUTS	BALANCE	119	72-53-00
ATT2369		LPT REAR BALANCE FIXTURE	BALANCE	119	72-53-00
ATT2370		LPT REAR BALANCE FIXTURE	BALANCE	119	72-53-00
ATT2371		LPT REAR BALANCE FIXTURE	BALANCE	119	72-53-00
ATT2372		LPT DROP CHECK FIXTURE	ASSY	153	72-53-00
ATT2373		DROP CHECK FIXTURE	ASSY	153	72-53-00
ATT2374		DROP CHECK FIXTURE	ASSY	153	72-53-00
ATT2375		HPC ASSY STAND	ASSY	136	72-36-00
ATT2376		HPC ASSY STAND	ASSY	136	72-36-00
ATT2377		LPC ASSY STAND	ASSY	133	72-33-00
ATT2378	nsn	Manifold,	Inlet Case Pressure Check	615	72-21-00
ATT2379	20045	Leak check Tool	Diffuser High PCP Check	237	72-37-01
ATT2380	20046	Masking Fixture	To protect Hourglass from gritblast	610	72-41-00
ATT2381	20047	Masking Fixture	To protect the D009 from Gritblast	610	72-52-00
ATT2383	nsn	Bevel gear Constrain Fix.	Pre-Grind	134	72-34-31
att2384	6264	Bevel Gear Constrain Fix	Pre-Grind	134	72-32-31
ATT2385	DL 53	Bevel Gear Constrain Fix	Pre-Grind	134	72-34-31
ATT2386	B4456	Bevel Gear Constrain Fix	Pre-Grind	134	72-34-31
ATT2387	AT3546	THRST RVSR LIFT DEVISE	TO LIFT THRUST REVERSER	121	72-00-00

P/N	S/N	Description	Application	Dept	ATA
ATT2387	AT3547	THRST RVESR LIFT DEVISE	TO LIFT THRUST REVERSER	121	72-00-00
ATT2388	AT3549	LIFT FIXT. INTERM.	TO LIFT INTERMEDIATE CASE IN THE PAINT SHOP	611	72-34-00
ATT2389	AT3564	THREADED BUSHING TOOL	TOOL MADE TO THREAD BUSHING PER 72-55-20 REP 01 GRIND	629	72-55-20
ATT2389	AT3566	COMB CASE RESTRAIN FIXT.	TO RESTRAIN THE COMB CASE FOR DIM "M" AND "S"	627	72-41-01
ATT2390	11454A	LIFT ARM -200 INTERMED,	TO LIFT THE -200 INTERMEDIATE ASSY,	134	72-34-00
ATT2390	11454H	LIFT ARM -200 INTERMED.	TO LIFT THE -200 INTERMEDIATE ASSY.	134	72-34-00
ATT2391	AT3587	EXHAUST STAND VRTCL ASSY	TO HANDLE THE -200 EXHAUST DURING ASSY/DISSY IN VERTICAL POS	154	72-54-00
ATT2392	AT3588	SLING,LIFT -200 INTRMDT	SLING USE TO LIFT AND HANDLE THE -200 INTERMEDIATE ASSY	134	72-34-00
ATT712	12842	Lifting tool	-200 T2 and shaft eye	320	
ATT861	12837	Gage	Torque and stretch, -100 low turbine assembly	320	
ATT862	01	RING- C3,C4,C5,&C6 TAB,S		116	
PWA101155	12580	Probe, eddy current insp	Combustion chamber outer case, rear flange, bolt holes	441	
PWA103780	13011	Probe, magnetic	Combustion chamber outer case, PS4 boss -200, Alert SB	121	72-41-11
PWA105164		SQUEEZER	LPC ASSEMBLY POST 6429 TIEROD RING	133	72-33-00
PWA105756		WRENCH S/B 6429	WRENCH TO USE WITH S/B 6429 TIERODS. 12 SOCKETS/12 POINT	120	72-33-00
PWA10901	13413	ENGINE LIFT FIXTURE	USED TO LIFT ENGINE FROM BASE	121	72-00-00
PWA12151	11886	Drift	Power crossover shaft inner bearing	502	72-61-00
PWA12214	11702	Connector, air flow	#4 and #5 bearing oil nozzle air flow	121	72-00-00
PWA12333	11377B	Removal fixture	Intermed.Case removal cross	102	
PWA12333	11377C	Removal fixture	Intermed.Case removal cross	102	
PWA12333	11377E	Removal fixture	Intermediate case removal cross	102	
PWA12402	11260B	Wrench	#1 hub plug	220	72-00-00
PWA12470	13234	Adapter, pressure test	Fuel oil cooler sasembly, fuel-in port	616	
PWA12518	13248	Fixture	Compressor bleed valve assembly test	616	
PWA12665	13246	Fixture	Fuel nozzle and support assembly, alignment	616	
PWA12740	12519A	Tap	(Roughing)rear compr.drive turb.shaft inside dia threads	328	72-52-03
PWA12740	12519B	Tap	(Roughing) rear compr.drive turb. shaft inside dia threads	328	72-52-03
PWA12741	12520A	Tap	(finish)rr.compr. drive turb.shaft inside diameter threads	328	72-52-03
PWA12741	12520B	Tap	(finish)rr.compr. drive turb. shaft inside diameter threads	328	72-52-03



P/N	S/N	Description	Application	Dept	ATA
PWA12742	12521	Wrench, extension	Rear compressor drive turbine shaft tap	328	72-52-03
PWA12754	42502	Lower T/S Bushing Instal	Install G/BX Drv. Brg Hsg lower support bushing in Int. Case	234	72-34-01
PWA12869	13385B	Retainer	Turbine Rotor	102	72-53-00
PWA12869	13385C	Retainer	Turbine Rotor	102	72-53-00
PWA12942	12729	Plug	Inlet case lab seal housing	615	
PWA12983	13247	Fixture	Fuel manifold, distortion, checking	616	
PWA14116	12774	Drift	#5 abearing inner race and seal seat	320	
PWA14514	13244	Wrench	Fuel nozzle retaining nut	615	
PWA16556	14	LIFT DEVISE		121	72-00-00
PWA16601-81	12296	Adapter, scale	Moment weight scale, compressor blade	258	
PWA16601-82	12297	Adapter, scale	Moment weight scale, 2nd stage compressor fan blade	258	
PWA16601-87	12295	Adapter, scale	Moment weight scale, 1st stage compressor fan blade	258	
PWA16722	13233	Compressor, spring	Pressure ratio bleed control, diaphragm spring	616	
PWA26523	12324	Riveter, hand	Fan duct exhaust, outer, assembly pin	317	
PWA29099	12682A	Adapter, lift & trunnion	Lift and trunnion (2-3/4 inch spools)	420	72-34-00
PWA29099	12682B	Adapter, lift & trunnion	Lift & trunnion (2-3/4 inch spools)	420	72-34-00
PWA32227	12393C	Rivet cup	1st stage compressor air seal	317	72-33-51
PWA32318	11273B	Puller	#2 bearing rear seal and baffle	202	72-00-00
PWA32324	11275A	Puller	No.4 bearing seal oil baffle	119	72-00-00
PWA32429	13237	Fixture	Fuel nozzle and support pressure test	616	
PWA32455	13401	PULLER	3RD TO 4TH STAGE TURBINE SPACER	152	72-00-53
PWA33212	12287	Probe	1st fan blade eddy current crack check	258	72-33-21
PWA33212	12583	Probe	1st fan blade eddy current crack check	441	72-33-21
pwa33218		Puller		119	
PWA33260	12849	Puller	No. 5 bearing seal	319	
PWA33313	12315	Gage	1st compressor blade mid-span hardface wear	258	72-33-21
PWA33376	11327E	Support	Second stage stator	102	72-33-00
PWA33564	12341A	Punch	7th stage compressor blade retaining rivet (hand)	317	
PWA33564	12341B	Punch	7th stage compressor blade retaining rivet (hand)	317	
PWA33565	12342	Base, riveting	7th stage disk and blade riveting, hand	317	
PWA3790-43-8	11445	Puller	Borescope plug remover	121	72-00-00
PWA45010	11729B	Driver	Knocker, turbine shaft coupling lock	121	72-00-53
PWA45036	12673B	Puller	No. 2 bearing inner race	102	72-34-20
PWA45104	11171	Adapter	Static balance	219	72-33-00
PWA45104	11208A	Adapter, static balance	Various disk & blade assemblies, balance plate	219	72-33-00
PWA45104	11208B	Adapter, static balance	Various disk & blade assemblies, balance plate	219	72-33-00

P/N	S/N	Description	Application	Dept	ATA
PWA45203	11637	Wrench assembly	Fan to 1.5 stage tierod nuts, torquing	121	72-33-00
PWA45210	11748A	Retainer	lift fixture, fr.compr.ass'y and inlet group front	102	72-00-00
PWA45210	11748B	Retainer	Lift fixture, fr.compr.ass'y and inlet group front	102	72-00-00
PWA45210	11751A	Retainer, attachment	Attachment, Fr.compr.ass'y and inlet group front	102	72-00-00
PWA45210	11751B	Retainer, attachment	Attachment, Fr.compr.ass'y and inlet group front	102	72-00-00
PWA45210	11751C	Retainer, attachment	Attachment, front compressor ass'y and inlet group front	102	72-00-00
PWA45210	11751D	Wagon Wheel		121	72-00-00
PWA45210	11754	Retainer	Front compressor assembly and inlet group front	121	72-00-00
PWA45210	11756	Retainer, attachment	Attachment, Fr.compr.ass'y and inlet group front	121	72-00-00
PWA45223	11781	Sling, lifting	Engine assembly (front)	102	72-00-00
PWA45223	13412	SLING-LIFTING	ENGINE ASSY (FRONT)	102	72-00-00
PWA45224	12861	Eye, lifting	Lifting, engine assembly, rear	102	
PWA45236		LPC ASSY WORK HUB	ASSY	133	72-33-00
PWA45267	12665	Adapter, airflow	Combustion chamber outer case	420	72-34-00
PWA45281	12627	Adapter, wrench	#3 bearing inner and outer race retaining nut wrench	420	72-34-00
PWA45311A		High Comp. Dissy. Fixture	Dissy.	136	
PWA45314		LPC ASSY STAND	ASSY	133	72-33-00
PWA45315		LPC ASSY STAND	ASSY	133	72-33-00
PWA45316		LPC ASSY ADAPTER	ASSY	133	72-33-00
PWA45318		LPC ASSY PLATE	ASSY	133	72-33-00
PWA45322		LPC ASSY SUPPORT	ASSY	133	72-33-00
PWA45323		LPT ASSY SUPPORT	ASSY	153	72-53-00
PWA45384	11556	Plate	Holding 4th stage hub	102	72-33-00
PWA45515	11255C	Bearing	Dummy brg, radial restraint	219	72-00-00
PWA45541	11904	Cover, pressure check	Gearbox #4 bearing breather pad	520	72-61-00
PWA45721	13231	Cap, pressure test	Fuel nozzle support assembly	616	
PWA46096	12581	Probe, ultrasonic	Outer combustion chamber case rear flange (shop insp0	441	
PWA46097	12582	Standard, crack	Outer combustion chamber case rear flange (shop insp)	441	
PWA46143A		BASE DRIFT	To assemble #3BRG,Bevel Gear & Housing.	134	72-34-30
PWA46143-A		DRIFT	To assemble #3 brg.Bevel g		G - -
PWA46232	12692	Wrench, coupling nut	Fuel manifold, diffuser case assembly	420	72-37-00
PWA46270B	13389B	Puller	# 4 Brg. Inner seal	102	72-00-37
PWA46392	13228	Holder	Anti-torque fuel nozzle support (assy/dissy)	616	
PWA46393	12930	Probe, eddy current	HPT blade trailing edge inspection	381	
PWA46394	12931	Standard, crack, eddy	Current, HPT blade trailing edge inspeciton	381	

P/N	S/N	Description	Application	Dept	ATA
PWA46415	12666	Adapter, leak check	manifold assembly, airflow check	420	72-54-00
PWA46425	13227	Adapter, socket	Rear compressor & turbine, #5 bearing heatshield bolts	616	
PWA46427	12585	Kit, mag retentivity insp	#4+5 bearing inner heathield bellows, bulk tape eraser	441	
PWA47016	11525C	Puller, knocker	3rd turbine disk from low turbine shaft	102	72-53-00
PWA47024		DISK LIFTING FIXTURE	LIFT COMPRESSOR DISKS	611	72-36-00
PWA47171	11960	Gage, no go	1st stage turbine disk z plane slot wear	352	72-53-00
PWA47601		DRIFT ADAPTER	To assemble #3brg.bevel gear&housing.	134	72-34-30
PWA47942	18105	Probe, ultrasonic	Combustion chamber outer case, rear flange	441	
PWA49119	12011	Probe, ultrasonic	Eng.assy, gearbox, spur gearshaft, inspection	520	72-61-00
PWA49120	12012	Standard, sensitivity	Eng.assy, gearbox, spur gearshaft, inpection	520	72-61-00
PWA6580	12374B	Sling, lifting	Removal, installation front & rear compressor rotor assy	121	
PWA6580	17	Sling (MACHINE SHOP)	Vertical Lathe - Lift Intermediates 1000lbs. Test	627	
PWA75134	11779	Hook, safety	6,000 lb. capacity, for engine hoist	102	72-00-00
PWA75135	12477	Hook, safety	Engine component lifts, hoists-1600 lb. capacity	457	
PWA75135	12876A	Hook, safety	Engine component lifts, hoists 1600 lb. capacity	320	
PWA75135	12876B	Hook, safety	Engine component lifts, hoists 1600 lb. capacity	320	
PWA75135	12876C	Hook, safety	Engine component lifts, hoists 1600 lb. capacity	320	
PWA76156	13170	Adapter, lift and turn	Lift & turn (2-3/4 inch spools)	102	72-34-00
PWA8170	11203B	Housing	Balance & concentricity check, low compressor	219	72-33-00
PWA8170	13249	Housing, cradle	Housing, balance and concentricity check	319	
PWA8640	12630	Adapter, wrench	Splined drive of Sweeney #8100 to spline of PWA wrenches	420	72-34-00
PWA8642	11621	Adapter, wrench	Sweeney powerwrench SWE#8100 to PWA wrenches	121	72-34-00
PWA8642	12628	Adapter, wrench	Sweeney powerwrench SWE#8100 to PWA wrenches	420	72-34-00
PWA9502	13239	Puller	Fuel pressurizing and dump valve seat	616	
SWE10480	11466B	Sweeney holder	#3 bearing anti-rotation device	102	72-34-00
SWE10480	12642	Plate	No. 3 bearing inner and outer race retaining nut, wrenches	420	72-34-00
SWE10482	12836	Wrench	No.4-1/2 bearing inner race retaining nut	320	72-53-00
SWE104822	12835	Wrench	No. 4-1/2 bearing inner race retaining nut	320	72-53-00
SWE10486	11491	Sweeney holder	#1 bearing outer race retaining nut, anti-rotation device	102	72-00-00
SWE10491	11462	Wrench	#1 bearing, T-bar Sweeney lock	121	72-00-00
SWE10493	11475	Wrench, adapter	T-bar Sweeney holder, Anti-rotation device	102	72-34-00
SWE10493	12648	Adapter, wrench	No. 3 bearing retaining nut wrench	420	72-34-00
SWE104967	11257A	Wrench	Front compressor rotor, #1 nut remover	102	72-00-00
SWE104967	11257C	Wrench	Front compressor rotor, #1 nut remover	102	72-00-00
SWE104967	11527B	Wrench	Front compressor rotor, #1 nut remover	102	72-00-00
SWE10498	11346A	Sweeney holder	HPT Adapter for Sweeney	121	

P/N	S/N	Description	Application	Dept	ATA
SWE10498	11346B	Sweeney holder	HPT Adapter for Sweeney	121	
SWE10678	12995	Wrench	Turbine exh.fan duct outer duct ball hsg retaining nut	101	72-54-00
SWE10682	12834	Wrench	No. 4-1/2 bearing inner race retaining nut	320	72-53-00
SWE10687	11543	Removal tool	Remove Nut, #5 bearing	102	
SWE10687	12772	Wrench	Anti-rotation, #5 inner race nut removal	320	
SWE10691	11461	Wrench	#1 bearing inner race retaining nut	102	72-00-00
SWE106921	11472B	Wrench	#3 bearing outer race retaining nut remover	102	72-34-00
SWE10693	11473	Wrench	#3 bearing retaining nut remover	102	72-34-00
SWE10693	12643	Wrench	No. 3 bearing retaining nut (hydraulic)	420	72-34-00
SWE10694	11482A	Wrench	#4 bearing inner nut remover	102	
SWE10694	11482B	Wrench	#4 bearing inner nut remover	102	
SWE10694	11482C	Wrench	#4 bearing inner nut remover	102	
SWE22525	12717	Plug pressure test	No. 2 bearing oil pressure tube outer boss	615	72-34-00
SWE22528	12715	Plug, pressure test	Intermediate case #3 bearing end	615	72-34-00
SWE22671	11715B	Wrench	Break-front compressor coupling	121	72-00-00
SWE22671	11715C	Wrench	Break-front compressor coupling	121	72-00-00
SWE22707	11422	Wrench	#4 Scavenge tee hex nut, PS3 crow's foot B nut remover	121	
SWE22732	12660	Guide	No. 3 bearing package anti-rotation pin, two parts	420	72-34-00
SWE22732	12661	Guide	No. 3 bearing package anti-rotation pin, 2 parts	420	72-34-00
SWE810024	11598	Torque multiplier	Thousands foot pounds	102	
SWE81010	11712A	Wrench	Sweeney wrench, torque multiplier	121	
SWE81010	11712B	Wrench	Sweeney wrench, torque multiplier	121	
SWE81010	11712C	Wrench	Sweeney wrench, torque multiplier	121	
SWE81010	12874	Torque multiplier	Wrench, pneumatic power unit (Sweeney)	320	
SWE81010	13304	Torque multiplier	Sweeney torque multiplier wrench		
SWE8102	12650	Multiplier, pneumatic	Wrench, pneumatic power source (Sweeney)	420	72-34-00
SWE8200	12651	Torque multiplier	Wrench, pneumatic power unit (Sweeney)	420	72-34-00
SWE8202	11713A	Sweeney wrench	Sweeney torque multiplier	121	
SWE8202	11713C	SWEENEY WRENCH	SWEENEY TORQUE MULTIPLIER	121	72-00-00
SWE84711	11544	Sweeney holder	Remove #5 components	102	
SWE84711	12773	Removal tool	Remove nut, #5bearing, high turbine	320	
SWE84911	11479A	T-Bar	#4 bearing inner race nut, Anti-rotation device	102	
SWE84911	11479B	T-Bar	#4 bearing inner nut, Anti-rotation device	102	